


# SHARP SERVICE MANUAL

No. 00ZUX108DESME

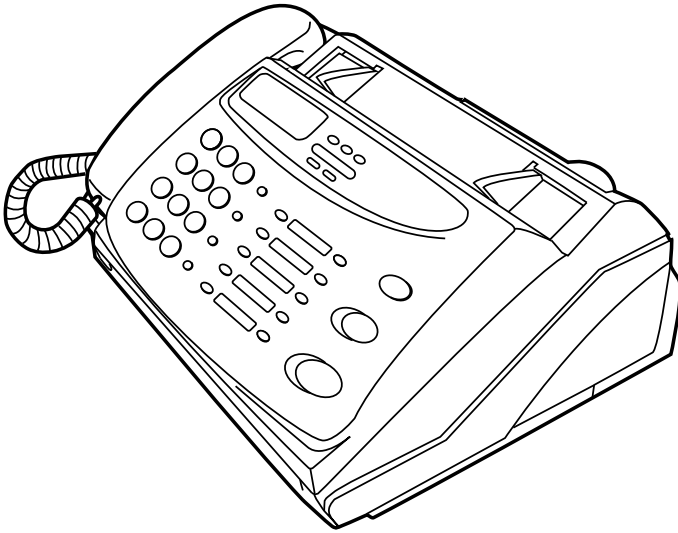

# FACSIMILE

# MODEL UX-108

## CONTENTS

### CHAPTER 1. GENERAL DESCRIPTION

- [1] Specifications ..... 1-1
- [2] Operation panel ..... 1-2
- [3] Transmittable documents ..... 1-3
- [4] Installation ..... 1-4
- [5] Quick reference guide ..... 1-7

### CHAPTER 2. ADJUSTMENTS

- [1] Adjustments ..... 2-1
- [2] Diagnostics and service soft switch ..... 2-2
- [3] Troubleshooting ..... 2-16
- [4] Error code table ..... 2-17

### CHAPTER 3. MECHANISM BLOCKS

- [1] General description ..... 3-1
- [2] Disassembly and assembly procedures ..... 3-3

### CHAPTER 4. DIAGRAMS

- [1] Block diagram ..... 4-1
- [2] Wiring diagram ..... 4-2
- [3] Point-to-point diagram ..... 4-3

### CHAPTER 5. CIRCUIT DESCRIPTION

- [1] Circuit description ..... 5-1
- [2] Circuit description of control PWB ..... 5-2
- [3] Circuit description of TEL/LIU PWB ..... 5-8
- [4] Circuit description of power supply PWB ..... 5-11
- [5] Circuit description of CIS unit ..... 5-11

### CHAPTER 6. CIRCUIT SCHEMATICS AND PARTS LAYOUT

- [1] Control PWB circuit ..... 6-1
- [2] TEL/LIU PWB circuit ..... 6-9
- [3] Power supply PWB circuit ..... 6-13
- [4] Operation panel PWB circuit ..... 6-15

### CHAPTER 7. OPERATION FLOWCHART

- [1] Protocol ..... 7-1
- [2] Power on sequence ..... 7-2

### CHAPTER 8. OTHERS

- [1] Service tools ..... 8-1
  - [2] IC signal name ..... 8-3
- PARTS GUIDE

Parts marked with "⚠" is important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

**SHARP CORPORATION**

This document has been published to be used for after sales service only.  
The contents are subject to change without notice.

### CAUTION FOR BATTERY REPLACEMENT

(Danish)

ADVARSEL !

Lithiumbatteri-Eksplosionsfare ved fejlagtig håndtering.  
Udskiftning må kun ske med batteri af samme fabrikat og type.  
Levér det brugte batteri tilbage til leverandoren.

(English)

Caution !

Danger of explosion if battery is incorrectly replaced.  
Replace only with the same or equivalent type  
recommended by the equipment manufacturer.  
Discard used batteries according to manufacturer's  
instructions.

(Finnish)

VAROITUS

Paristo voi räjähtää, jos se on virheellisesti asennettu.  
Vaihda paristo ainoastaan laitevalmistajan suosittelemaan  
tyyppiin. Hävitä käytetty paristo valmistajan ohjeiden  
mukaisesti.

(French)

ATTENTION

Il y a danger d'explosion s' il y a remplacement incorrect  
de la batterie. Remplacer uniquement avec une batterie du  
même type ou d'un type recommandé par le constructeur.  
Mettre au rebut les batteries usagées conformément aux  
instructions du fabricant.

(Swedish)

VARNING

Explosionsfare vid felaktigt batteribyte.  
Använd samma batterityp eller en ekvivalent  
typ som rekommenderas av apparattillverkaren.  
Kassera använt batteri enligt fabrikantens  
instruktion.

(German)

Achtung

Explosionsgefahr bei Verwendung inkorrektter Batterien.  
Als Ersatzbatterien dürfen nur Batterien vom gleichen Typ oder  
vom Hersteller empfohlene Batterien verwendet werden.  
Entsorgung der gebrauchten Batterien nur nach den vom  
Hersteller angegebenen Anweisungen.


# CHAPTER 1. GENERAL DESCRIPTION

## [1] Specifications

<b>Automatic dialing:</b>	Rapid Key Dialing: 10 numbers Speed Dialing: 20 numbers	<b>Effective scanning width:</b>	210 mm max.
<b>Fax paper:</b>	Initial starter roll (included with fax machine): 10 m roll  Recommended replacement roll: FO-40PRw 50 m roll	<b>Contrast control:</b>	Automatic/Dark selectable
<b>Automatic document feeder:</b>	10 sheets max.	<b>Copy function:</b>	Standard
<b>Paper cutting method:</b>	Tear off by hand	<b>Telephone function:</b>	Standard (cannot be used for incoming/outgoing if power fails)
<b>Modem speed:</b>	9600 bps with automatic fallback to 7200, 4800, or 2400 bps	<b>Power requirements:</b>	220 - 230 V AC, 50 Hz
<b>Transmission time* :</b>	Approx. 15 seconds (Sharp special mode)	<b>Operating environment:</b>	5 to 35°C
<b>Display:</b>	16-digit LCD display	<b>Humidity:</b>	Maximum: 85 %
<b>Reception modes:</b>	FAX, TEL, TEL/FAX, A.M.	<b>Power consumption:</b>	Stand-by: 5.5 W Maximum: 120 W
<b>Resolution:</b>	Horizontal: 8 dots/mm Vertical: Standard: 3.85 lines/mm Fine/Halftone: 7.7 lines/mm Super fine: 15.4 lines/mm	<b>Dimensions:</b>	Width: 308 mm Depth: 256 mm Height: 138 mm
<b>Recording system:</b>	Thermal recording	<b>Weight:</b>	Approx. 2.5 kg
<b>Halftone (grayscale):</b>	64 levels	* Based on ITU-T (CCITT) Test Chart #1 at standard resolution in Sharp special mode, excluding time for protocol signals (i.e., ITU-T phase C time only).	
<b>Applicable telephone line:</b>	Public switched telephone network/PBX		
<b>Compatibility:</b>	ITU-T (CCITT) G3 mode		
<b>Configuration:</b>	Half-duplex, desktop transceiver		
<b>Compression scheme:</b>	Modified Huffman and Sharp special mode		
<b>Scanning method:</b>	Sheet-feeder CIS (Contact Image Sensor)		
<b>Effective recording width:</b>	210 mm max.		
<b>Input document size:</b>	Automatic feeding: Width — 148 to 216 mm Length — 140 to 297 mm Manual feeding: Width — 148 to 216 mm Length — 140 to 600 mm		

As a part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specifications figures indicated are nominal values of production units. There may be some deviation from these values in individual units.

## [2] Operation panel

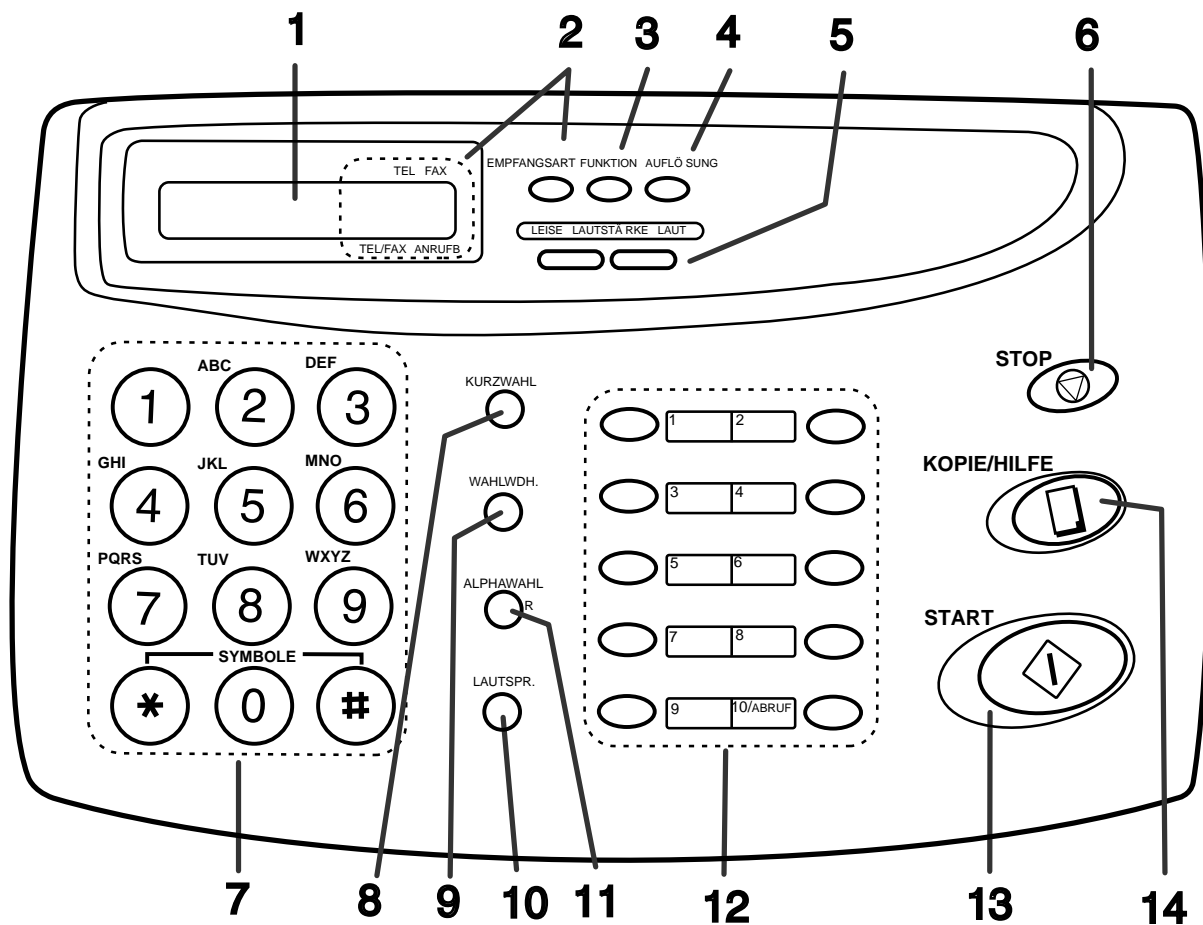

### 1. LCD-Anzeige(Display)

This displays messages and prompts during operation and programming.

### 2. EMPfangsART(RECEPTION MODE key)

Press this key to select the reception mode. An arrow in the display will point to the currently selected reception mode.

### 3. FUNKTION(FUNCTION key)

Press this key to select various special function.

### 4. AUFLÖSUNG(RESOLUTION key)

Press this key to adjust the resolution and contrast before sending or copying a document.

### 5. LAUTSTÄRKE(VOLUME keys)

Press these keys to adjust the volume of the speaker when the **SPEAKER** key has been pressed, or the volume of the ringer at all other times.

### 6. STOP(STOP key)

Press this key to stop operations before they are completed.

### 7. Zifferntasten(Number keys)

Use these keys to dial numbers, and enter number and letters during number/name storing procedures.

### 8. KURZWAHL(SPEED DIAL key)

Press this key to dial a 2-digit Speed Dial number.

### 9. WAHLWDH.(REDIAL key)

Press this key to automatically redial the last number dialed.

### 10. LAUTSPR.(SPEAKER key)

Press this key to hear the line and fax tones through the speaker when sending a document.

Note: **This is not a speakerphone.** You must pick up the handset to talk with the other party.

### 11. ALPHAWAHL/R(SEARCH/R) key

Press this key to search for an automatic dialing number, or, if you are on a P.B.X. extension, press this key to transfer or put the other party on hold.

### 12. Zeilwahltasten(Rapid Dial keys)

Press one of these keys to dial a fax or voice number automatically. (Note that you must attach the Rapid Key labels.)

### 13. START(START key)

Press this key to send or receive a document.


### 14. KOPIE/HILFE(COPY/HELP key)

When a document is in the feeder, press this key to make a copy. At any other time, press this key to print out the Help List, a quick reference guide to the operation of your fax.

### [3] Transmittable documents

#### 1. Document Sizes

Normal size	width	148 – 216 mm
	length	140 – 297 mm

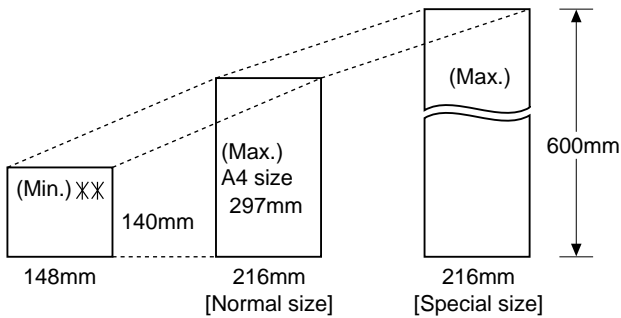

XX Use document carrier sheet for smaller documents.

- \* With special sizes, only one sheet can be fed into the machine at a time. Insert next page into feeder as current page is being scanned.

#### 2. Paper Thickness & Weight

Normal size	ADF 10 sheets	Thickness	0.06–0.12 mm
		Weight	52–104g/m <sup>2</sup> 14–28lbs
Special size		Thickness	0.12–0.20 mm
		Weight	52–157 g/m <sup>2</sup>

#### 3. Document Types

- Normal paper  
Documents handwritten in pencil (No. 2 lead or softer), fountain pen, ball-point pen, or felt-tipped pen can be transmitted.  
Documents of normal contrast duplicated by a copying machine can also be transmitted.
- Diazo copy (blue print)  
Diazo copy documents of a normal contrast may be transmitted.
- Carbon copy  
A carbon copy may be transmitted if its contrast is normal.

#### 4. Cautions on Transmitting Documents

- Documents written in yellow, greenish yellow, or light blue ink cannot be transmitted.
- Ink, glue, and correcting fluid on documents must be dry before the documents can be transmitted.
- All clips, staples and pins must be removed from documents before transmission.
- Patched (taped) documents should be copied first on a copier and then the copies used for transmission.
- All documents should be fanned before insertion into the feeder to prevent possible double feeds.

#### 5. Automatic Document Feeder Capacity

Number of pages that can be placed into the feeder at anytime is as follows:

Normal size: max. ADF 10 sheets

Special size: single sheet only (manual feed)

- NOTES:
- When you need to send or copy more pages than the feeder limit, place additional pages in feeder when last page in feeder is being scanned.
  - Place additional pages carefully and gently in feeder. If force is used, double-feeding or a document jam may result.


#### 6. Readable Width & Length

The readable width and length of a document are slightly smaller than the actual document size.

Note that characters or graphics outside the effective document scanning range will not be read.


##### • Readable width

210 mm, max.

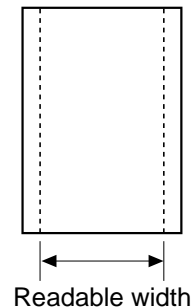

##### • Readable length


This is the length of the document sent minus 4 mm from the top and bottom edges.

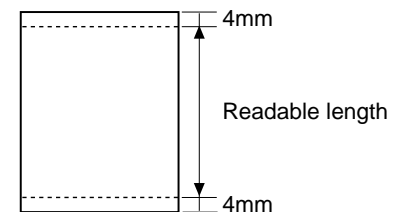

## 7. Use of Document Carrier Sheet

A document carrier sheet must be used for the following documents.

- Those with tears.
- Those smaller than size 148 mm (W) x 140 mm (L).
- Carbon-backed documents

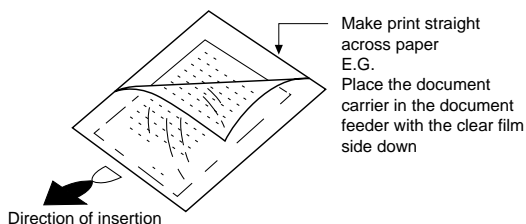

**NOTE:** To transmit a carbon-backed document, insert a white sheet of paper between the carbon back of the document and the document carrier.

- Those containing an easily separable writing substance (e.g., tracing paper written on with a soft, heavy lead pencil).

**NOTES:**

- When using the document carrier, carefully read the instructions written on the back.

- If the document carrier is dirty, clean it with a soft, moist cloth, and then dry it before using for transmission.
- Do not place more than one document in the carrier at a time.

## [4] Installation

### 1. Site selection

Take the following points into consideration when selecting a site for this model.

#### ENVIRONMENT

- The machine must be installed on a level surface.
- Keep the machine away from air conditioners, heaters, direct sunlight, and dust.
- Provide easy access to the front, back, and sides of the machine. In particular, keep the area in front of the machine clear, or the original document may jam as it comes out after scanning.
- The temperature should be between 5° and 35°C.
- The humidity should be between 30% and 85% (without condensation).

#### ELECTRICITY

220 - 230V, 50Hz, earthed (2-prong) AC outlet is required.

#### Caution!

- Connection to a power source other than that specified will cause damage to the equipment and is not covered under the warranty.
- If your area experiences a high incidence of lightning or power surges, we recommend that you install a surge protector for the power and telephone lines. Surge protectors can be purchased at most telephone specialty stores.

#### If the machine is moved from a cold to a warm place...

If the machine is moved from a cold to a warm place, it is possible that the reading glass may fog up, preventing proper scanning of documents for transmission. To remove the fog, turn on the power and wait approximately 2 hours before using the machine.

#### TELEPHONE JACK


A standard telephone jack must be located near the machine. This is the telephone jack commonly used in most homes and offices.

- Plugging the fax machine into a jack which is not an jack may result in damage to the machine or your telephone system. If you do not know what kind of jack you have, or needed to have one installed, contact the telephone company.

## 2. Connections

① Connect the handset as shown and place it on the handset rest.


- ♦ The ends of the handset lead are identical, so they will go into either socket.
- ♦ Make sure the handset cord goes into the unmarked jack on the side of the machine!
- ♦ Use the handset to make ordinary phone calls, or to transmit and receive documents manually.

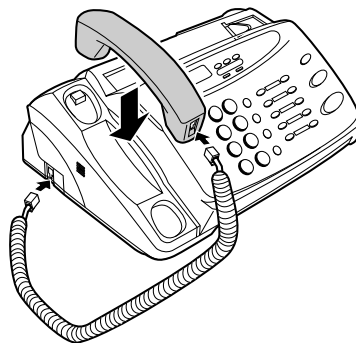

② Plug the power lead into a 220 - 230 V, 50 Hz, earthed (2-prong) AC outlet.


- ♦ **Caution:** The mains outlet (socket outlet) should be installed near the equipment and be easily accessible.
- ♦ The fax does not have a power on/off switch, so the power is turned on and off by simply plugging or unplugging the power lead.

**Note:** If your area experiences a high incidence of lightning or power surges, we recommend that you install surge protectors for the power and telephone lines. Surge protectors can be purchased from your dealer or at most telephone specialty stores.

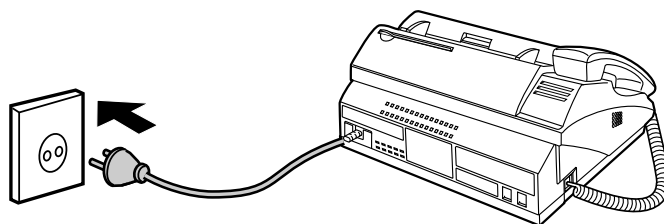


③ Insert one end of the telephone line cord into the "TEL. LINE" socket. Insert the other end into a standard single-line telephone wall socket.

- ♦ Be sure to insert the telephone line cord into the "TEL. LINE" socket. **Do not** insert into the "TEL. SET" socket.

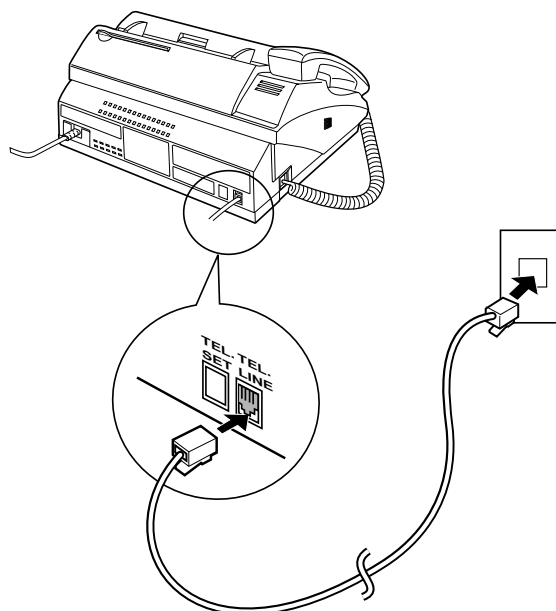

### 3. Original document support


- ① Rotate the original document support so that it points straight out.

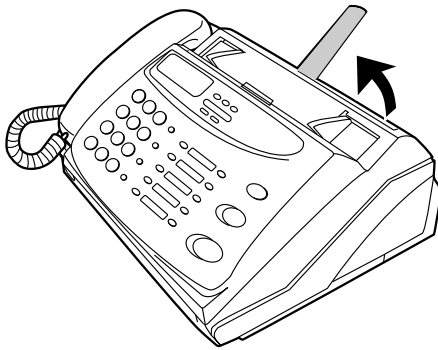


### 4. Loading the fax paper

- Your fax machine prints incoming faxes on a special kind of paper called thermal paper.
- The fax's print head creates text and images by applying heat to the thermal paper.


- ① Pull the release marked **PANEL RELEASE** toward you and open the operation panel.

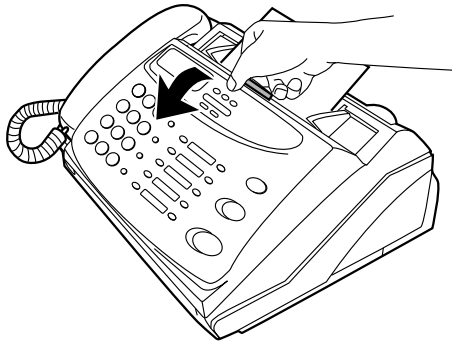

- ② Remove the packing paper from the paper compartment.


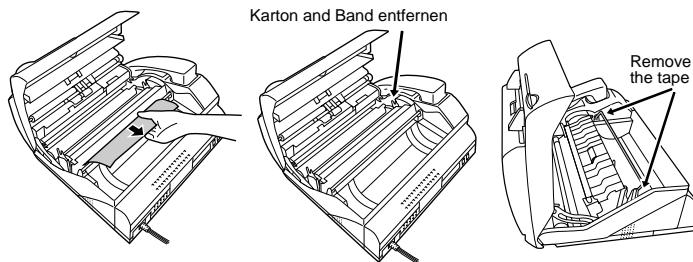


- ③ Make sure the ends of the guide wire are inserted in the holes. (If the guide wire is not inserted correctly, out-of-paper detection will not be possible.)

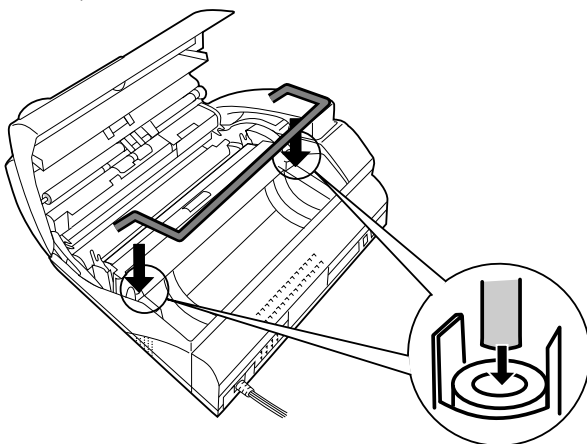


- ④ Unwrap the roll of fax paper and place it in the compartment.


- **Important:** The roll must be placed so that the leading edge of the paper unrolls as shown. (The paper is only coated on one side for printing. If the roll is placed backwards, the paper will come out blank after printing.)

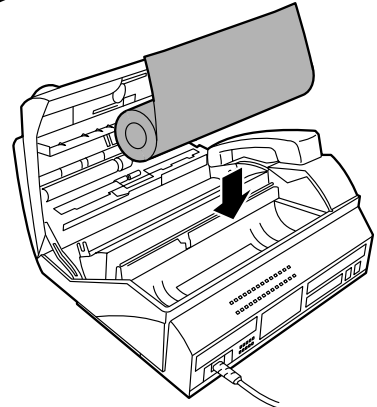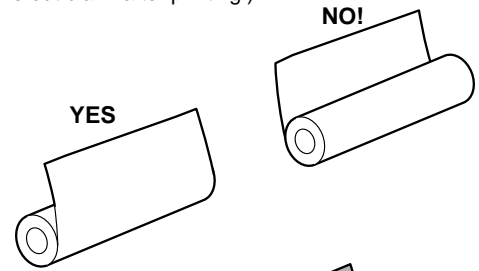

- ⑤ Insert the leading edge of the paper into the paper inlet. Continue to push the paper through the inlet until it comes out of the opening in the front of the fax.

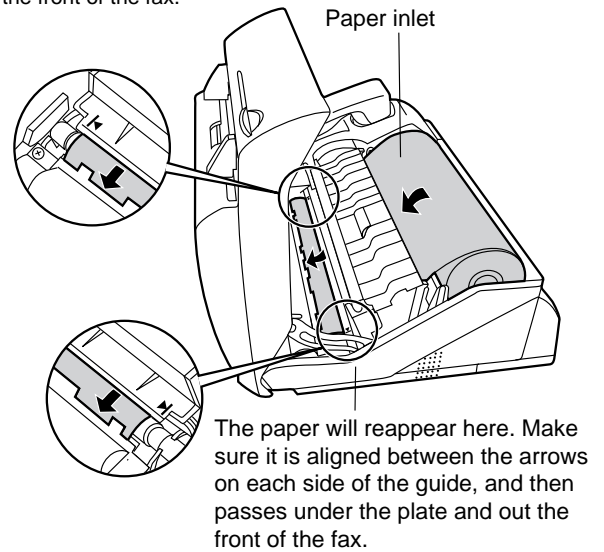

- ⑥ Close the operation panel, making sure it clicks into place.

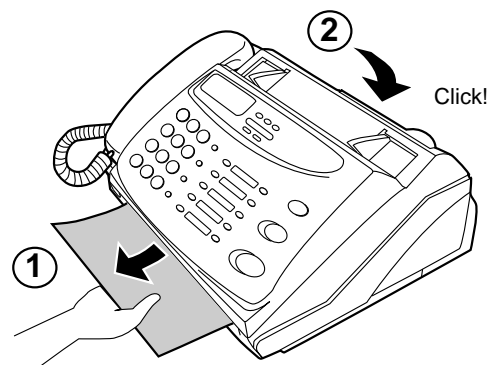


- ⑦ A short length of the fax paper will feed out. Grasp the paper by the edge and pull upward to tear it off.


4. Clearing a jammed document

If the original document doesn't feed properly during transmission or copying, or DOCUMENT JAMMED appears in the display, first try pressing the **START** key. If it doesn't feed out, remove it as follows:  
**Important:** Do not try to remove a document without opening the operation panel. This may damage the feeder mechanism.


- ① Pull the release marked **PANEL RELEASE** toward you and open the operation panel.

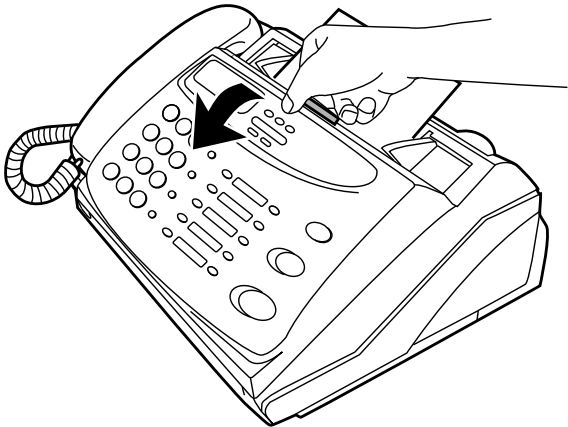


- ② Remove the document.

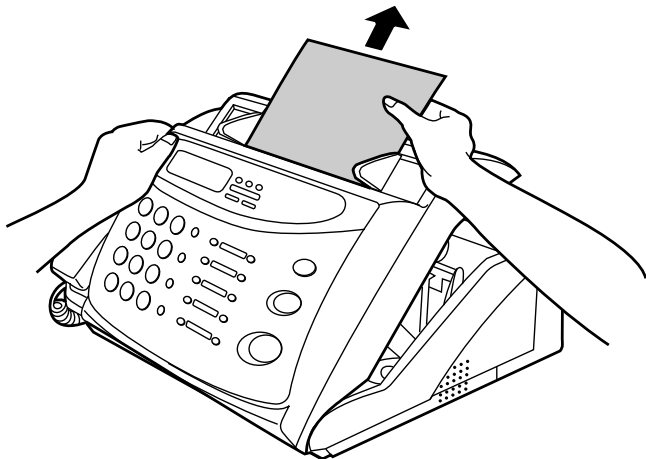

- ② Remove the paper roll.

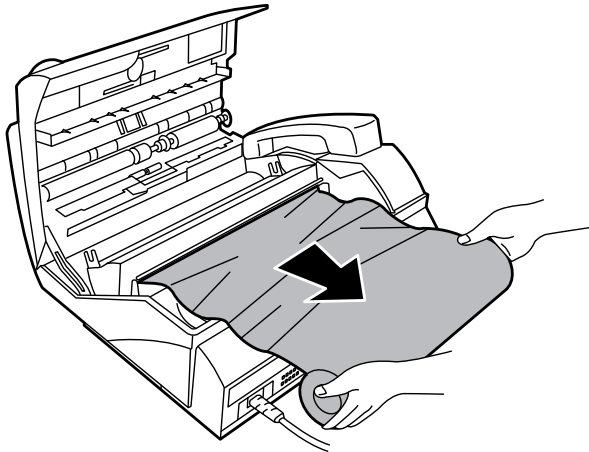


- ③ Cut off the wrinkled part of the paper.

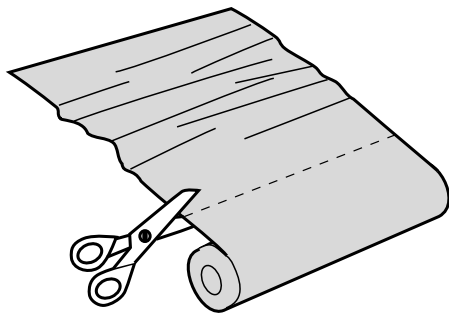


- ④ Reload the paper.

- Jammed fax paper is often caused by improper loading. Be sure to carefully follow the instructions for paper loading given in "Loading the Fax Paper" in page 1-5.

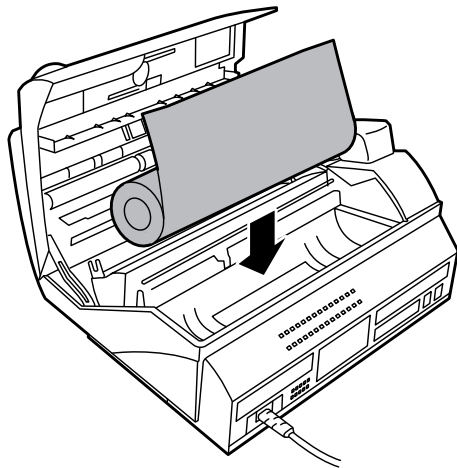

5. Clearing jammed fax paper

- ① Pull the release marked **PANEL RELEASE** toward you and open the operation panel.

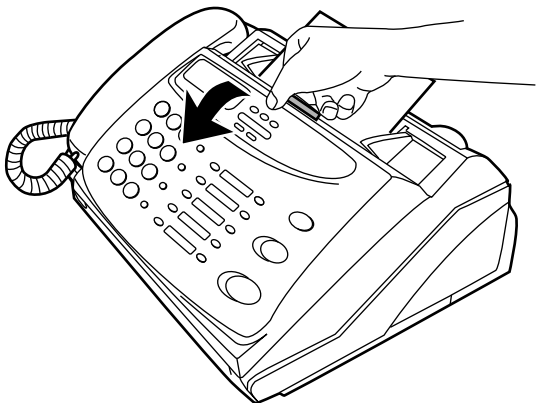

ABC	DEF	
1	2	3
GHI	JKL	MNO
4	5	6
PQRS	TUV	WXYZ
7	8	9
SYMBOL		
*	0	#

KURZWHL. Press this key to delete the letter highlighted by the cursor.

WAHLWDH. Press this key to move the cursor to the left.

ALPHAWHL. Press this key to change case.

LAUTSPR. Press this key to move the cursor to the right.


Press either key repeatedly to select one of the following symbols.



## [5] Quick reference guide

### FUNCTION key menu

The following chart shows the layout of the functions and settings accessed by pressing the **FUNCTION** key. First press the **FUNCTION** key, the appropriate numeric key as shown, and then "#" or "X" until the desired item appears. Instructions for making each setting appear in the display. If you have any difficulty, refer to the detailed instructions on the page shown below the setting.

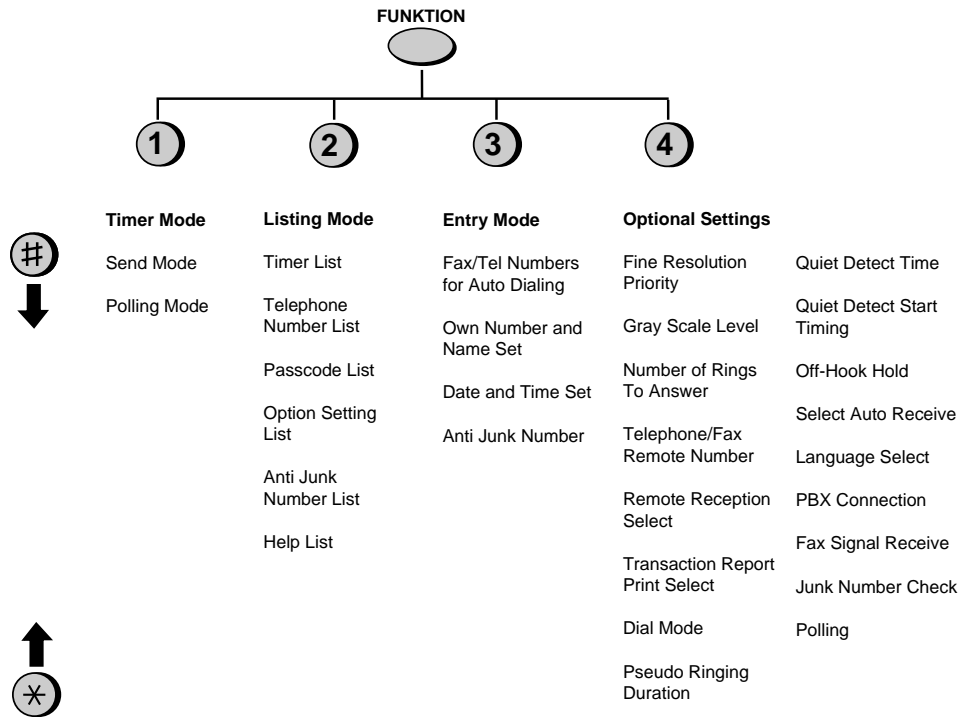

**Note:** Steps which are optional are enclosed in a dotted frame:



#### Transmitting documents

<b>Normal Dialing</b>	Load document → <span style="border: 1px dotted black; padding: 2px;">AUFLOSUNG</span> → Lift handset or press <b>SPEAKER</b> → Dial (press numeric keys) → Wait for reception tone → <b>START</b> → Hang up
<b>Direct Keypad Dialing</b>	Load document → <span style="border: 1px dotted black; padding: 2px;">AUFLOSUNG</span> → Dial (press numeric keys) → <b>START</b>
<b>Rapid Key Dialing</b>	Load document → <span style="border: 1px dotted black; padding: 2px;">AUFLOSUNG</span> → Press Rapid key
<b>Speed Dialing</b>	Load document → <span style="border: 1px dotted black; padding: 2px;">AUFLOSUNG</span> → <b>KURZWahl</b> → Enter Speed Dial number (press 2 numeric keys) → <b>START</b>
<b>Redialing</b>	Load document → <span style="border: 1px dotted black; padding: 2px;">AUFLOSUNG</span> → <b>WAHLWdh.</b> → Wait for reception tone → <b>START</b>

#### Making voice calls

<b>Normal Dialing</b>	Lift handset or press <b>SPEAKER</b> → Dial (press numeric keys) → Lift handset if you pressed <b>SPEAKER</b>
<b>Rapid Key Dialing</b>	Lift handset or press <b>SPEAKER</b> → Press Rapid key → Lift handset if you pressed <b>SPEAKER</b>
<b>Speed Dialing</b>	Lift handset or press <b>SPEAKER</b> → <b>KURZWahl</b> → Enter Speed Dial number (press 2 numeric keys) → Lift handset if you pressed <b>SPEAKER</b>
<b>Redialing</b>	<b>WAHLWdh.</b> → Lift handset

CHAPTER 2. ADJUSTMENTS

[1] Adjustments

General


Since the following adjustments and settings are provided for this model, make adjustments and/or setup as necessary.

1. Adjustments

Adjustments of output voltage (FACTORY ONLY)

- 1. Install the power supply unit in the machine.
- 2. Set the recording paper and document.
- 3. When the document is loaded, power is supplied to the output lines. Confirm that outputs are within the limits below.

Output voltage settings

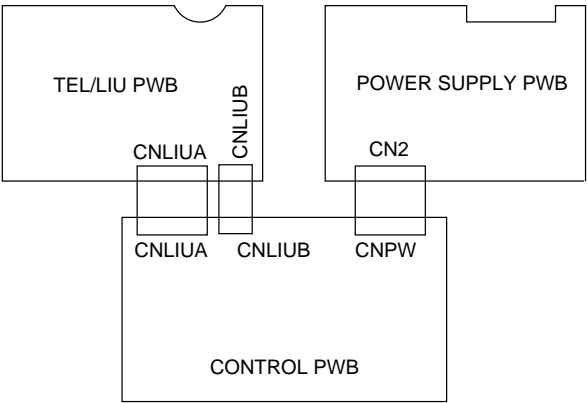


Output	Voltage limits
+5V	4.75V ~ 5.25V
+24V	23.3V ~ 24.7V

Connector No.	CNPW
Pin No.	
1	DG
2	+5V
3	VTH-ON
4	MG
5	MG
6	MG
7	+24V
8	VTH
9	VTH
10	VTH

2. IC protectors replacement

ICPs (IC Protectors) are installed to protect the motor driver circuit. ICPs protect various ICs and electronic circuits from an overcurrent condition.

The location of ICPs are shown below:

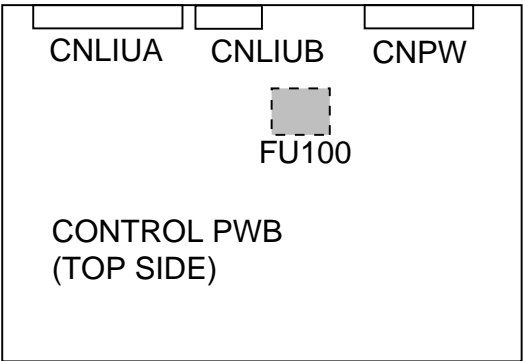

(1) FU100 (ICP-S07) is installed in order to protect IC's from an over-current generated in the motor drive circuit. If FU100 is open, replace it with a new one.

3. Settings

(1) Dial mode selector

DIAL mode (Soft Switch No. SWB4 DATA No. 3)

(step 1) Select "OPTION SETTING".

KEY : FUNCTION 4  
DISPLAY: OPTION SETTING ↔ PRESS✕ OR #

(step 2) Select "DIAL MODE".

KEY: # # # # # # #  
DISPLAY: DIAL MODE ↔ 1=TONE, 2=PULSE

Cursor  
When initially registering,  
the mode shows 1=TONE.  
When registering again, the  
mode which was registered  
formerly is shown.

(step 3) Select, using "1" or "2".

KEY: 1  
DISPLAY: TONE SELECTED  
KEY: 2  
DISPLAY: PULSE SELECTED

(step 4) End, using the "STOP" key.

KEY: STOP

4. Method of release of starting lock up by Battery Reset

(1) Summary

There is a possibility of release of the lock up by reset the signal BATRST of CPU (XFC3, XFC5), if it lock up when you turn on the power of the set in UX-108 series. We inform you of the method of release.

(2) Contents

When you turn on the power of the set without EPROM by your mistake, if you turn off the power after, turn on the power with EPROM again, the set don't start.

In this case, before you judge the CPU (XFC3, XFC5) is wrong, you need to confirm the release of the lock up by reset the signal BATRST. and unknown origin in the same way.

Method of the reset of signal BATRST

Short the between leads of the capacitor C5 on the control PWB, F2940FF-7X in the state of POWER OFF.

## [2] Diagnostics and service soft switch

### 1. Operating procedure

#### (1) Entering the diagnostic mode


Press **FUNC** → **9** → **✕** → **8** → **#** → **7**, and the following display will appear.

ROM Ver. FXA0✕ After 2 sec: **DIAG MODE**

FXA0✕


Then press the **START** key. Select the desired item with the **✕** key or the **#** key or select with the rapid key. Enter the mode with the **START** key.

(Diag•specifications)

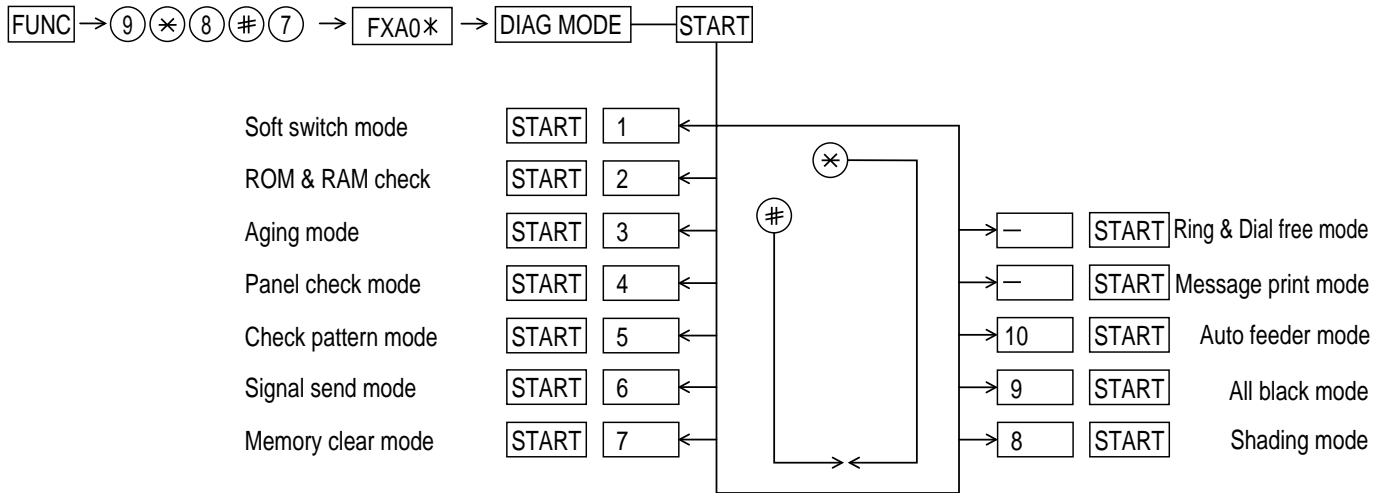

If the diag mode cannot be set, repeat the diag mode operation, performing the following operation.

After the power is turned on and "WAIT A MOMENT" is indicated, press the **STOP** key.

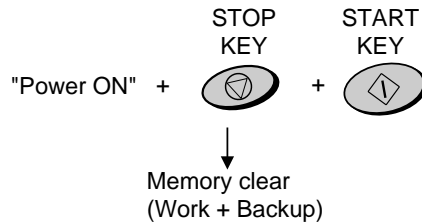

In relation with the process response (request from Production Engineering) "WAIT A MOMENT" clock indication may appear depending on **STOP** key timing. If the **STOP** key is held down, "MEMORY CLEAR?" appears.

### 2. Diagnostic items

ITEM No.	DIRECT key	Contents	Function
1	1	SOFT SWITCH MODE	Soft switches are displayed and changed. List can be output.
2	2	ROM & RAM CHECK	ROM is sum-checked, and RAM is matched. Result list is output.
3	3	AGING MODE	10 sheets of check patterns are output every 5 minutes per sheet.
4	4	PANEL CHECK MODE	Panel keys are tested. Result list is output.
5	5	CHECK PATTERN MODE	Check pattern is output.
6	6	SIGNAL SEND MODE	Various signals of FAX communication are output.
7	7	MEMORY CLEAR MODE	Back-up memory is cleared, and is set at delivery.
8	8	SHADING MODE	Shading compensation is performed in this mode.
9	9	ALL BLACK MODE	To check the print head, whole dots are printed over the interval of 2 m.
10	10	AUTO FEEDER MODE	Insertion and discharge of document are tested.
11	—	MESSAGE PRINT MODE	The display message of each language is printed out together with the English equivalent.
12	—	RING & DIAL FREE MODE	Allows CI detection of 13Hz or more. Eliminates dial tone detection in auto dial.

3. Diagnostic items description

3. 1. Soft switch mode

Used to change the soft switch settings.

The soft switch which is stored internally is set by using the keys.

The available soft switches are SW-A1 to SW-L2.

The content of soft switches is shown in page 2-5 to 2-15.

The contents are set to factory default settings.

3. 2. ROM & RAM check

ROM executes the sum check, and RAM executes the matching test.

The result will be notified with the number of short sounds of the buzzer as well as by printing the ROM & RAM check list.

Number of short sounds of buzzer    0 → No error  
    1 → ROM error  
    2 → RAM error (32Kbyte)

3. 3. Aging mode

If any document is first present, copying will be executed sheet by sheet.

If no document is present, the check pattern will be printed sheet by sheet. This operation will be executed at a rate of one sheet per 5minutes, and will be ended at a total of 10 sheets.

3. 4. Panel check mode

The mode is used to check whether each key operates properly or not. Press the key on the operation panel, and the key will be displayed on the display. Therefore, press all keys. At this time, finally press the STOP key.


When the STOP key is pressed, the keys which are not judged as "pressed" will be printed on the result list.

- LED port of the contact image sensor (CIS) is kept on during the term from when start of the panel test mode to end with the STOP key.

3. 5. Check pattern mode

This mode is used to check the status of print head. Two sheets of check pattern are printed. The following information of check pattern is printed.

① Vertical stripes (alternate white and black lines)	Approx. 35 mm
② Full black	Approx. 70 mm
③ Full white	Approx. 35 mm

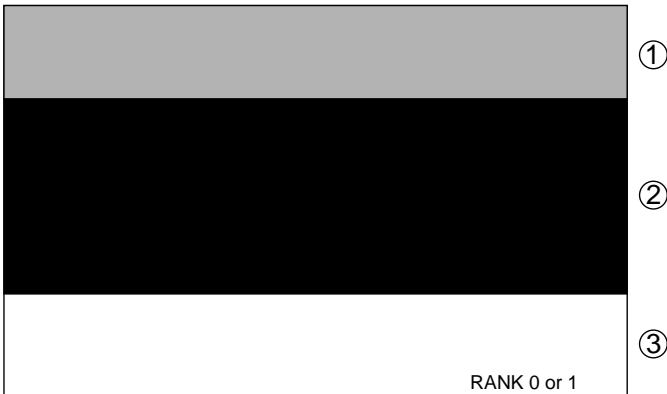

Note:

There is a selection RANK 0 or 1 depending on resistance value of the thermal head. RANK 0 or RANK 1 is printed at the tail of check pattern to identify.

3. 6. Signal send mode

The mode is used to send various signals to the circuit during FAX communication. Every push of START key sends a signal in the following sequence. Moreover, the signal sound is also output to the speaker when the line monitor of the soft switch is on.

- [1] No signal (CML signal turned on)
- [2] 9600bps
- [3] 7200bps
- [4] 4800bps
- [5] 2400bps
- [6] 300bps (FLAG)
- [7] 2100Hz (CED)
- [8] 1100Hz (CNG)
- [9] END

3. 7. Memory clear mode

This mode is used to clear the backup memory and reset to the default settings.

3. 8. Shading mode

The mode is used for the shooting compensation. For reading, set up the special original paper.

The shooting compensation memorizes the reference data of white and black for reading.

Moreover, the memorized data is not erased even if memory clear mode is executed.

3. 9. All black mode

The mode is used to check the state of the printing head and intentionally overheat it. Whole dots are printed over the interval of 2 m. If it is overheated or the printing sheet is jammed, press STOP key for the end.

3. 10. Auto feeder mode

In this mode, a document is inserted and discharged to check the auto feed function.

After this mode is started, set a document, and the document feed will be automatically tested.

3. 11. Message print mode

Used to print the displayed message of communication for translate each language.

3. 12. Ring & Dial free mode

Used to reject dial tone check while autodialing is carried out. And used to change the bottom Ring frequency of auto-receiving to 13Hz.

#### 4. How to make soft switch setting

To enter the soft switch mode, make the following key entries in sequence.

Press FUNCTION 9 \* 8 # 7 START START



DATA No.      1   2   3   4   5   6   7   8

S F T SW-A1 = 0 0 0 0 0 0 0 0

S F T SW-A1 = 1 0 0 0 0 0 0 0

S F T SW-A1 = 1 0 0 0 0 0 0 0

S F T SW-A1 = 1 0 0 0 0 0 0 0

S F T SW-A1 = 1 0 0 0 0 0 0 0

S F T SW-A2 = 0 0 0 0 0 0 0 0

S F T SW-L2 = 0 0 0 0 0 0 0 0

Press FUNCTION key.

Press # key.

Press \* key.

Bit1 - 8 are set.

Press START key during setting.

Soft SW-A2 - SW-L2 are set.

- To finish the settings halfway between SW-A1 and SW-L2, press the STOP key. In this case, the setting being done to the SW No. on display will be nullified while settings done to the preceding SW Nos. remain in effect.
- When the COPY key is pressed, the contents of soft switches are printed.

The soft switch mode is terminated.

## 5. Soft switch description

### • Soft switch

SW NO.	DATA NO.	ITEM	Switch setting and function				Initial setting								Remarks	
			1		0		DE									
SW I A1	1	Protect from echo	No		Yes		0									
	2	Forced 4800 BPS reception	Yes		No		0									
	3	Footer print	Yes		No		0									
	4	Length limitation of copy/send/receive	No limit		Copy/send: 60cm Receive: 1.5m		0									
	5	CSI transmission	No transmitted		Transmitted		0									
	6	DIS receive acknowledgement during G3 transmission	Twice		NSF: Once DIS: Twice		0									
	7	Non-modulated carrier for V29 transmission modem	Yes		No		0									
	8	EOL detect timer	25 s		13 s		0									
SW I A2	1 2 3 4	Modem speed		V.29		V.27 ter		0								
				9600	7200	4800	2400									
			No. 1	0	0	0	0									
			No. 2	0	0	0	0									
			No. 3	0	1	1	0									
		No. 4	1	1	0	0	1									
	5	Sender's information transmit	No		Yes		0									
	6	H2 mode	No		Yes		0									
	7	Communication error treatment in RTN sending mode (reception)	No communication error		Communication error		0									
8	CNG transmission	No		Yes		0										
SW I A3	1 2	CED tone signal interval		1000ms	750ms	500ms	75ms	0								
			No. 1	1	1	0	0									
			No. 2	1	0	1	0									
	3	MR coding	No		Yes		0									
	4	Reserved					0									
	5	Reserved					0									
	6	Reserved					0									
	7	Reserved					0									
8	Reserved					0										
SW I A4	1	Signal transmission level	Binary input				0									
	No. =		16	8	4	2	1									1
			1	2	3	4	5									0
			0	1	0	1	1 (-11dBm)									1
																1
6	Protocol monitor (error print)	Printed at com. error		Not printed		0										
7	Protocol monitor	Yes		No		0										
8	Line monitor	Yes		No		0										
SW I A5	1 2	Digital line equalization setting (Reception)		7.2km		0km		1								
			No. 1	1		0										
			No. 2	1		0										
	3	Reserved					0									
	4	Reserved					0									
	5	Reserved					0									
	6	Reserved					0									
	7	Error criterion	10 ~ 20 %		5 ~ 10 %		0									
8	Anti junk fax check	Yes		No		0									OPTION	

SW NO.	DATA NO.	ITEM	Switch setting and function		Initial setting								Remarks
			1	0	DE								
SW   A6	1	Auto gain control (MODEM)	Enable	Disable	1								
	2	End Buzzer	Yes	No	1								
	3	Disconnect the line when DIS is received in RX mode	No	Yes	1								
	4	Equalizer freeze control (MODEM)	On	Off	0								
	5	Equalizer freeze control 7200 BPS only	No	Yes	0								
	6	CNG transmission in manual TX mode	Yes	No	1								
	7	Initial compression scheme for sharp fax in TX mode	MR mode	H2 mode	0								
	8	Reserved			0								
SW   B1	1	Reserved			0								
	2	Reserved			0								
	3	Reserved			0								
	4	Reserved			0								
	5	Recall times	Binary input		0								
	6		No. = 8 4 2 1		0								
	7		5 6 7 8		1								
	8		0 0 1 0 (Twice)		0								
SW   B2	1	Dial pausing (sec/pause)	4 sec	2 sec	1								
	2	Dial tone detection (before auto dial)	No	Yes	0								
	3	Reserved			0								
	4	Busy tone detection (after auto dial)	No	Yes	0								
	5	Waiting time after dialing	90 sec	45 sec	1								
	6	Reserved			0								
	7	Reserved			0								
	8	PBX connection	Yes	No	0								OPTION
SW   B3	1	PBX recall function (R key select)		No Ope.	No Ope.	Earth	Flash						OPTION
			No. 1	0	0	1	1	1					
			No. 2	0	1	0	1	1					
	3	Reserved						0					
	4	PBX select		ID	ID	Earth	Flash						OPTION
			No. 4	0	0	1	1	0					
			No. 5	0	1	0	1	0					
	6	Reserved						0					
	7	Reserved						0					
	8	Reserved						0					
SW   B4	1	Reserved			0								
	2	Reserved			0								
	3	Dial mode	Tone	Pulse	1								OPTION
	4	Pulse → Tone change function by $\times$ key	Enable	Disable	1								
	5	Dial pulse make/break ratio (%)	40/60	33/67	1								
	6	Reserved			0								
	7	PBX type	ISDN	NORMAL	0								
	8	Reserved			0								

SW NO.	DATA NO.	ITEM	Switch setting and function					Initial setting								Remarks	
			1		0			DE									
SW I B5	1	DTMF signal transmission level (Low)	Binary input					1									
	2		No. = 16 8 4 2 1					0									
	3		1 2 3 4 5					1									
	4		1 0 1 1 1 (0.5x10=-5dBm)					1									
	5							1									
	6	Reserved						0									
	7	Reserved						0									
	8	Reserved						0									
SW I B6	1	DTMF signal transmission level (High)	Binary input					1									
	2		No. = 16 8 4 2 1					0									
	3		1 2 3 4 5					1									
	4		1 0 1 0 0 (0.5x7=-3.5dBm)					0									
	5							0									
	6	Reserved						0									
	7	Reserved						0									
	8	Reserved						0									
SW I C1	1 2	Reading slice (Binary)		Factory setting	Light	Dark	Darker in dark mode	0									
			No. 1	0	1	0	1										
			No. 2	0	0	1	1										
	3 4	Reading slice (Half tone)		Factory setting	Light	Dark	Darker in dark mode	0									
			No. 3	0	1	0	1										
			No. 4	0	0	1	1										
	5	Line density selection	Fine		Standard			0								OPTION	
	6	Halftone gray scale selection	16 level		64 level			0								OPTION	
7	MTF correction in half tone mode	No		Yes			0										
8	Reserved						0										
SW I D1	1	Number of rings for auto receive	Binary input					0								OPTION	
	2		No. = 8 4 2 1					0									
	3		1 2 3 4					0									
	4		0 0 0 1 (4 times)					1									
	5	Automatic switching manual to auto receive mode	Reception after 5 rings		No reception			0									
	6	Reserved						0									
	7	CI detection	13 Hz or more		As is PTT			0									
	8	Reserved						0									
SW I D2	1	Reserved						0									
	2	Reserved						0									
	3	Reserved						0									
	4	Reserved						0									
	5	Reserved						0									
	6	Reserved						0									
	7	Reserved						0									
	8	Reserved						0									
SW I E1	1	Tel/Fax Automatic switching mode	Enable		Disable			1									
	2	Pseudo ringing time at phone/fax automatic switching mode		15sec	60sec	30sec	120sec	0									OPTION
	3		No. 2	0	0	1	1										
			No. 3	0	1	0	1	0									
	4	Number of CNG signal detection at the phone/fax automatic switching mode	Twice		Once			1									
	5	Reserved						0									
	6	Reserved						0									
	7	Post answer tone (transmit in Tel/Fax mode)	No		Yes			0									
8	Reserved						0										



SW NO.	DATA NO.	ITEM	Switch setting and function					Initial setting								Remarks
			1		0			DE								
SW   E2	1	Pseudo ringer sound output level to the line	Binary input					0								
	2		No. = 8 4 2 1					1								
	3		1 2 3 4					0								
	4		0 1 0 1 (-5dBm -5~-10dBm) (-5 ~ -20dBm setting)					1								
	5	Reserved						0								
	6	Reserved						0								
	7	Reserved						0								
	8	Reserved						0								
SW   F1	1 2	DTMF detection time		50ms	80ms	100ms	120ms									
			No. 1	0	0	1	1	0								
			No. 2	0	1	0	1	0								
	3	Protection of remote reception (5 ☒☒ ) detect	Yes		No			0								OPTION
	4	Remote reception with GE telephone	Compatible		Not compatible			1								
	5 6 7 8	Remote operation code figures by external TEL (0~9)	Binary input					0								OPTION
			No. = 8 4 2 1					1								
			5 6 7 8					0								
0 1 0 1 (5 ☒☒ )					1											
SW   F2	1	CNG detection in STAND-BY mode	Yes		No			1								OPTION
	2 3	Number of CNG detect (AM mode)		1pulse	2pulses	3pulses	4pulses									
			No. 2	0	0	1	1	0								
			No. 3	0	1	0	1	1								
	4 5	Number of CNG (STAND-BY mode)		1pulse	2pulses	3pulses	4pulses									
			No. 4	0	0	1	1	0								
			No. 5	0	1	0	1	1								
	6	Fax signal detection after telephone mode dial	Yes		No			0								
7	Reserved						0									
8	Reserved						0									
SW   G1	1 2 3 4	Quiet detect time	Binary input					0								OPTION
			No. = 8 4 2 1					1								
			1 2 3 4					1								
			0 1 1 0 (4 sec)					0								
	5 6 7 8	Quiet detect start timing	Binary input					0								OPTION
			No. = 8 4 2 1					0								
			5 6 7 8					0								
			0 0 0 0 (5 sec)					0								
SW   G2	1 2 3 4 5 6 7 8	Off hook hold	Binary input					0								OPTION
			No. = 128 64 32 16 8 4 2 1					0								
			1 2 3 4 5 6 7 8					0								
			0 0 0 0 0 0 0 0					0								
			(0 sec = No limit)					0								
								0								
								0								
								0								
SW   G3		OGM detect timer		Not Work	100ms	200ms	300ms									
			No. 1	0	0	1	1	0								
			No. 2	0	1	0	1	1								
	3	Reserved						0								
	4	Reserved						0								
	5 6	Section time of quiet detection		30s	40s	50s	60s									
			No. 5	0	0	1	1	0								
			No. 6	0	1	0	1	1								
7	Reserved						0									
8	Reserved						0									

SW NO.	DATA NO.	ITEM	Switch setting and function					Initial setting								Remarks
			1		0			DE								
SW I H1	1	Reserved						0								
	2	Reserved						0								
	3	Reserved						0								
	4	Busy tone continuous sound detect time	5 sec		10 sec			1								
	5	Reserved						0								
	6	Busy tone detect continuation sound detect	No		Yes			0								
	7	Reserved						0								
	8	Busy tone detect intermittent sound detect	No		Yes			0								
SW I H2	1	Busy tone detection pulse number		2pulses	4pulses	6pulses	10pulses									
			No. 1	0	0	1	1	0								
			No. 2	0	1	0	1	1								
	3	Fax switching when A.M. full	Yes		No			0								OPTION
	4	Reserved						0								
	5	Reserved						0								
	6	Reserved						0								
	7	Reserved						0								
SW I I1	8	Reserved						0								
	1	Reserved						0								
	2	Reserved						0								
	3	Reserved						0								
	4	Reserved						0								
	5	Reserved						0								
	6	Reserved						0								
	7	Reserved						0								
SW I I2	8	Reserved						0								
	1	Reserved						0								
	2	Reserved						0								
	3	Reserved						0								
	4	Reserved						0								
	5	Reserved						0								
	6	Reserved						0								
	7	Reserved						0								
SW I I3	8	Reserved						0								
	1	Reserved						0								
	2	Reserved						0								
	3	Reserved						0								
	4	Reserved						0								
	5	Reserved						0								
	6	Reserved						0								
	7	Reserved						0								
SW I I4	8	Reserved						0								
	1	Reserved						0								
	2	Reserved						0								
	3	Reserved						0								
	4	Reserved						0								
	5	Reserved						0								
	6	Reserved						0								
	7	Reserved						0								
	8	Reserved						0								

SW NO.	DATA NO.	ITEM	Switch setting and function					Initial setting							Remarks
			1	0		DE									
SW I I5	1	Reserved				0									
	2	Reserved				0									
	3	Reserved				0									
	4	Reserved				0									
	5	Reserved				0									
	6	Reserved				0									
	7	Reserved				0									
	8	Reserved				0									
SW I I6	1	Reserved				0									
	2	Reserved				0									
	3	Reserved				0									
	4	Reserved				0									
	5	Reserved				0									
	6	Reserved				0									
	7	Reserved				0									
	8	Reserved				0									
SW I I7	1	Reserved				0									
	2	Reserved				0									
	3	Reserved				0									
	4	Reserved				0									
	5	Reserved				0									
	6	Reserved				0									
	7	Reserved				0									
	8	Reserved				0									
SW I J1	1	Reserved				0									
	2	Reserved				0									
	3	Sender's phone number setting	Cannot change		Change allowed	0									
	4	Reserved				0									
	5	Reserved				0									
	6	Summer time setting	No		Yes	0									
	7	Ringer volume		Off	Low	Middle	High	1							OPTION
	8		No. 7	0	0	1	1								
SW I J2	1	Speaker volume		Low	Low	Middle	High	1							OPTION
	2		No. 1	0	0	1	1	0							
	3	Polling key	Yes		No		0								OPTION
	4	Reserved						0							
	5	Reserved						0							
	6	Reserved						0							
	7	Reserved						0							
	8	Reserved						0							
SW I J3	1	Reserved				0									
	2	Reserved				0									
	3	Communication results printout (Transaction report)		Error/Timer	Send only	Always	No print	0							OPTION
	4		No. 3	0	0	1	1								
	5	Reserved						0							
	6	Reserved						0							
	7	Reserved						0							
	8	Reserved						0							

SW NO.	DATA NO.	ITEM	Switch setting and function		Initial setting								Remarks
			1	0	DE								
SW I K1	1	Entering DIAG mode by pressing SPEED key	Yes	No	0								
	2	Reserved			0								
	3	Reserved			0								
	4	Reserved			0								
	5	Reserved			0								
	6	Reserved			0								
	7	Reserved			0								
	8	Reserved			0								
SW I L1	1	Reserved			0								
	2	Reserved			0								
	3	Reserved			0								
	4	Reserved			0								
	5	Reserved			0								
	6	Reserved			0								
	7	Reserved			0								
	8	Reserved			0								
SW I L2	1	Reserved			0								
	2	Reserved			0								
	3	Reserved			0								
	4	Reserved			0								
	5	Reserved			0								
	6	Reserved			0								
	7	Reserved			0								
	8	Reserved			0								

## • Soft switch function description

### SW-A1 No. 1 Protect from echo

Used to protect from echo in reception.

### SW-A1 No. 2 Forced 4800BPS reception

When line conditions warrant that receptions take place at 4800 BPS repeatedly.

It may improve the success of receptions by setting at 4800BPS.

This improve the receiving document quality and reduces handshake time due to fallback during training.

### SW-A1 No. 3 Footer print

When set to "1", the date of reception, the sender machine No., and the page No. are automatically recorded at the end of reception.

### SW-A1 No. 4 Length limitation of copy/send/receive

Used to set the maximum page length.

To avoid possible paper jam, the page length is normally limited to 0.6 meter for copy or transmit, and 1.5 meters for receive.

It is possible to set it to "No limit" to transmit a long document, such as a computer print form, etc. (In this case, the receiver must also be set to no limit.)

### SW-A1 No. 5 CSI transmission

(CSI TRANSMISSION) is a switch to set whether the machine sends or does not send the signal (CSI signal) informing its own telephone No. to the remote fax. machine when information is received. When "nonsending" is set, the telephone No. is not output on the remote transmitting machine if the remote transmitting machine has the function to display or print the telephone No. of receiving machine, using this CSI signal.

### SW-A1 No. 6 DIS receive acknowledgment during G3 transmission

Used to make a choice of whether reception of DIS (NSF) is acknowledged after receiving two DISs (NSFs) or receiving one DIS (two NSF). It may be useful for overseas communication to avoid an echo suppression problem, if set to 1.

### SW-A1 No. 7 Non-modulated carrier for V29 transmission modem

Though transmission of a non-modulated carrier is not required for transmission by the V29 modem according to the CCITT recommendation, it may be permitted to a send non-modulated carrier before the image signal to avoid and echo suppression problem. It may be useful for overseas communication to avoid an echo suppression problem, if set to 1.

### SW-A1 No. 8 EOL (End Of Line) detect timer

Used to make a choice of whether to use the 25-second or 13-second timer for detection of EOL.

This is effective to override communication failures with some facsimile models that have longer EOL detection.

### SW-A2 No. 1 ~ No. 4 Modem speed

Used to set determine the initial modem speed. The default is 9600BPS. It may be necessary to program it to a slower speed when frequent line fallback is encountered, in order to save the time required for fallback procedure.

### SW-A2 No. 5 Sender's information transmit

(SENDER'S INFORMATION TRANSMISSION) is a switch to set the function to print the content of HEADER PRINT described in the passcode list at the front end of receiver's original when original is sent to the remote machine.

If this switch is set to "NO", the HEADER PRINT is not output at the receiving machine.

### SW-A2 No. 6 H2 mode

Used to determine reception of H2 mode (15 sec transmission mode). When set to OFF, H2 mode reception is inhibited even though the transmitting machine has H2 mode function.

### SW-A2 No. 7 Communication error treatment in RTN sending mode (Reception)

Used to determine communication error treatment when RTN is sent by occurrence of a received image error in G3 reception. When it is set to "1", communication error is judged as no error.


### SW-A2 No. 8 CNG transmission

When set to "0", this model allows CNG transmission by pressing the Start key in the key pad dialing mode. When set to "1", CNG transmission in the key pad dialing mode cannot be performed. In either case, CNG transmission can be performed in the auto dial mode.

### SW-A3 No. 1, No. 2 CED tone signal interval

For international communication, the 2100Hz CED tone may act as an echo suppression switch, causing a communication problem.

Though SW-A3 No. 1 and No. 2 are normally set to 0, it should be changed this time between the CED tone signal to eliminate the communication problem caused by echo.

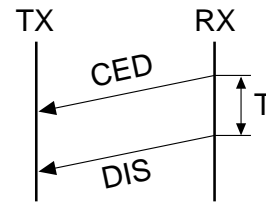

### SW-A3 No. 3 MR Coding

Used to select the MR coding enable or disable.

### SW-A3 No. 4 ~ No. 8 Reserved

Set to "0".

### SW-A4 No. 1 ~ No. 5 Signal transmission level

Used to control the signal transmission level in the range of 0dB to -31dB.

The factory setting is at -11dB (MODEM output).

### SW-A4 No. 6 Protocol monitor (Error print)

If set to "1", protocol is printed at communication error.

### SW-A4 No. 7 Protocol monitor

Normally set to "0". If set to "1", communication can be checked, in case of troubles, without using a G3 tester or other tools.

When communication FSK data transmission or reception is made, the data is taken into the buffer. When communication is finished, the data is analyzed and printed out. When data is received with the line monitor (SW-A4 No. 8) set to "1" the reception level is also printed out.

### SW-A4 No. 8 Line monitor

Normally set to "0". If set to "1", the transmission speed and the reception level are displayed on the LCD. Used for line tests.

### SW-A5 No. 1, No. 2 Digital line equalization setting (Reception)

Line equalization when reception is to be set according to the line characteristics.

Setting should be made according to distance between the telephone and the telephone company central switching station.

### SW-A5 No. 3 ~ No. 6 Reserved

Set to "0".

### SW-A5 No. 7 Error criterion

Used to select error criterion for sending back RTN when receiving image data.

### SW-A5 No. 8 Anti junk fax check

When use the Anti junk fax function, set to "1".

**SW-A6 No. 1 Auto gain control (MODEM)**

When this mode is enabled, if the reception signal level is under 31dBm. The modem itself controls the signal gain automatically.

**SW-A6 No. 2 End buzzer**

Setting this bit to 0 will disable the end buzzer (including the error buzzer/on-hook buzzer).

**SW-A6 No. 3 Disconnect the line when DIS is received in RX mode**

Bit1= 0: When DIS signal is received during RX mode, disconnected the line is immediately.

Bit1= 1: When DIS signal is received during RX mode, wait the next signal.

**SW-A6 No. 4 Equalizer freeze control (MODEM)**

This switch is used to perform reception operation by fixing the equalizer control of modem for the line which is always in unfavorable state and picture cannot be received.

\* Usually, the control is executed according to the state of line where the equalizer setting is changed always.

**SW-A6 No. 5 Equalizer freeze control 7200BPS only**

Setting which specifies SW-A3 No. 6 control only in the condition of 7200BPS modem speed.

**SW-A6 No. 6 CNG transmission in manual TX mode**

When set to "1", fax transmit the CNG signal in case of manual transmission mode (User press the START key after waiting the fax answering signal from handset or speaker).

**SW-A6 No. 7 Initial compression scheme for sharp fax in TX mode**

When set to "0", if the other fax is Sharp model, fax transmit the document by H2 mode. When set to "1", even if the other fax is Sharp model, fax transmit the document by MR mode.

**SW-A6 No. 8 Reserved**

Set to "0".

**SW-B1 No. 1 ~ No. 4 Reserved**

Set to "0".

**SW-B1 No. 5 ~ No. 8 Recall times**

Choice is made as to how many redials should be.

**SW-B2 No. 1 Dialing pause (sec/pause)**

Pauses can be inserted between telephone numbers of direct dial connection. Selection of 4 sec or 2 sec pause is available.

**SW-B2 No. 2 Dial tone detection (before auto dial)**

Used to set YES/NO of dial tone detection in auto dialing.

**SW-B2 No. 3 Reserved**

Set to "0".

**SW-B2 No. 4 Busy tone detection (after auto dial)**

Used to set YES/NO of busy tone detection after auto dialing.

**SW-B2 No. 5 Waiting time after dialing**

This is waiting time for the opponent's signals after dialing.

When set to "0", waiting time is 45 sec.

When set to "1", waiting time is 90 sec.

**SW-B2 No. 6, No. 7 Reserved**

Set to "0".

**SW-B2 No. 8 PBX connection**

Used to select according to the connected line: PBX (Private Branch Exchange).

**SW-B3 No. 1, No. 2 PBX recall function (R key select)**

Used to set the operation mode of PBX recall when the R key is pressed. Setting is made according to the type of PBX.

No. 1=1, No. 2=1: Time break recall (=Flash) is performed.

No. 1=1, No. 2=0: Earth recall is performed.

**SW-B3 No. 3 Reserved**

Set to "0".

**SW-B3 No. 4, No. 5 PBX select**

Used to select the operation mode of PBX recall in auto dialing.

No. 4=1, No. 5=1: Time break recall (=Flash) is performed before dialing.

No. 4=1, No. 5=0: Earth recall is performed before dialing.

No. 4=0, No. 5=0: The PBX ID digit is automatically added when dialing to external line. PBX ID is up to 3 digits and entered in Option settings mode.

**SW-B3 No. 6 Reserved**

Set to "0".

**SW-B3 No. 7 PBX type**

Used to select type of PBX.

"0": NORMAL

"1": ISDN

**SW-B3 No. 8 Reserved**

Set to "0".

**SW-B4 No. 1, No. 2 Reserved**

Set to "0".

**SW-B4 No. 3 Dial mode**

When using the pulse dial, set to 0. When using the tone dial, set to 1.

**SW-B4 No. 4 Pulse → Tone change function by ✕ key**

When setting to 1, the mode is changed by pressing the ✕ key from the pulse dial mode to the tone dial mode.

**SW-B4 No. 5 Dial pulse make/break ratio (%)**

When using the 33 % make ratio pulse dial, set to "0".

When using the 40 % make ratio pulse dial, set to "1".

**SW-B4 No. 6 ~ No. 8 Reserved**

Set to "0".

**SW-B5 No. 1 ~ No. 5 DTMF signal transmission level (Low)**

The transmission level of DTMF signal is adjusted. (lower frequency)

00000: 0dBm

↓

11111: -15.5dBm (-0.5dBm x 31)

**SW-B5 No. 6 ~ No. 8 Reserved**

Set to "0".

**SW-B6 No. 1 ~ No. 5 DTMF signal transmission level (High)**

The transmission level of DTMF signal is adjusted. (higher frequency)

00000: 0dBm

↓

11111: -15.5 dBm (-0.5dBm x 31)

**SW-B6 No. 6 ~ No. 8 Reserved**

Set to "0".

**SW-C1 No. 1, No. 2 Reading slice (Binary)**

Used to determine the set value of reading density in standard/fine mode. The standard setting is "00" (Factory setting is "00")

**SW-C1 No. 3, No. 4 Reading slice (Half tone)**

Used to determine the set value of reading density in half tone mode. The standard setting is "00" (Factory setting is "00")

**SW-C1 No. 5 Line density selection**

Used to set the transmission mode which is automatically selected when the Resolution key is not pressed. In the copy mode, however, the fine mode is automatically selected unless the Resolution key is manually set to another mode.

**SW-C1 No. 6 Half tone gray scale selection**

Used to determine the reading gray scale in half tone mode.

When set to "0", gray scale is 64 levels.

When set to "1", gray scale is 16 levels.

**SW-C1 No. 7 MTF correction in half tone mode**

This allows selection of MTF correction (dimness correction) in the half tone mode.

When "NO" (=1) is selected, the whole image becomes soft and mild. On the contrary, however, clearness of characters will be reduced. Normally set to "YES" (=0).

**SW-C1 No. 8 Reserved**

Set to "0".

**SW-D1 No. 1 ~ No. 4 Number of rings for auto receive**

When the machine is set in the auto receive mode, the number of rings before answering can be selected. It may be set from one to four rings using a binary number. Since the facsimile telephone could be used as an ordinary telephone if the handset is taken off the hook, it should be programmed to the user's choice. If the soft switch was set to 1, direct connection is made to the facsimile. If a facsimile calling beep was heard when the handset is taken off the hook, press the START key and put the handset on the hook to have the facsimile start receiving. If it was set to 0 accidentally, receive ring is set to 1.

NOTE: If the machine is set to answer after a large number of rings, it may not be able to receive faxes successfully. If you have difficulty receiving faxes, reduce the number of rings to a maximum of 5.

**SW-D1 No. 5 Automatic switching manual to auto receive mode**

This soft switch is used to select whether the machine should switch to the auto receive mode after 5 rings in the manual receive mode or remain in the same way as SW-D1 No. 1, No. 2, No. 3 and No. 4 "0"1"0"1"(5 rings).

**SW-D1 No. 6 Reserved**

Set to "0".

**SW-D1 No. 7 CI detection**

Detection frequency of ring signal for auto reception is set. When set to 1, frequency is set to 13Hz or more.

**SW-D1 No. 8 Reserved**

Set to "0".

**SW-D2 No. 1 ~ No. 8 Reserved**

Set to "0".

**SW-E1 No. 1 Tel/Fax Automatic switching mode**

Used to set auto TEL/FAX switching mode or to set the normal fax mode.

**SW-E1 No. 2, No. 3 Pseudo ringing time at the phone/fax automatic switching mode**

Choice is made as to how long to rumble the dummy ringer on TEL/FAX automatic switching mode.

**SW-E1 No. 4 Number of CNG signal detection at the phone/fax automatic switching mode**

Used for detection of CNG in one tone or two tones in the TEL/FAX automatic switching mode.

**SW-E1 No. 5, No. 6 Reserved**

Set to "0".

**SW-E1 No. 7 Post answer tone transmit in Tel/Fax mode**

When set to "0", machine send the 800 Hz tones in TEL/FAX auto changeover mode.

**SW-E1 No. 8 Reserved**

Set to "0".

**SW-E2 No. 1 ~ No. 4 Pseudo ringer sound output level to the line**

Used to adjust sound volume of pseudo ringer to the line (ring back tone) generated on selecting TEL/FAX. Setting is the reduce level from -5dBm output level.

**SW-E2 No. 5 ~ No. 8 Reserved**

Set to "0".

**SW-F1 No. 1, No. 2 DTMF detect time**

Used to set detect time of DTMF (Dual Tone Multi Frequency) used in remote reception (5 × × ×).

The longer the detect time is, the less the error detection is caused by noises.

**SW-F1 No. 3 Protection of remote reception (5 × × ×) detect**

Used to set the function of remote reception (5 × × ×). When set to "1", the remote reception function is disabled.

**SW-F1 No. 4 Remote reception with GE telephone**

(Corresponding to TEL made by GE) P. B. X.

"1": Compatible with TEL mode by GE

"0": Not compatible

- When sending (5 × × ×) for remote reception with a GE manufactured telephone remote reception may not take place because of special specifications in their DTMF. To overcome this, a soft SW is provided to change the modem setting to allow for remote reception.
- If this soft SW is set to "1", other telephone sets may be adversely affected.

**SW-F1 No. 5 ~ No. 8 Remote operation code figures by external TEL (0 ~ 9)**

Remote operation codes can be changes from 0 through 9. If set to greater than 9, it defaults to 9. The "5 × × ×" is not changed.

Ex-7 × × × (Default: 5 × × ×)

**SW-F2 No. 1 CNG detection in STAND-BY mode**

When setting to "1", the CNG signal detection function during standby stops.

**SW-F2 No. 2, No. 3 Number of CNG detect (AM mode)**

Used for detection of CNG in 1 to 4 pulses.

**SW-F2 No. 4, No. 5 Number of CNG (STAND-BY mode)**

Used for detection of CNG in 1 to 4 pulses.

**SW-F2 No. 6 Fax signal detection after telephone mode dial**

When set to "1", if machine detect the fax answering signal after telephone calling (handset off-hook or speaker mode dial), machine start to receive the documents automatically.

**SW-F2 No. 7, No. 8 Reserved**

Set to "0".

**SW-G1 No. 1 ~ No. 4 Quiet detect time**

When an answering machine is connected, if a no sound state is detected for a certain period of time, the machine judges it as a transmission from a facsimile machine and automatically switches to the FAX mode.

**SW-G1 No. 5 ~ No. 8 Quiet detect start timing**

Inserts a pause before commencing quiet detection.

**SW-G2 No. 1 ~ No. 8 Off hook hold**

Used to set Off hook hold time by binary input.

(0 to 255 seconds)

**SW-G3 No. 1, No. 2 OGM detect timer**

This is used to change the OGM detection time for answering machine hook up detection.

**SW-G3 No. 3, No. 4 Reserved**

Set to "0".

### **SW-G3 No. 5, No. 6 Section time of quiet detection**

The switch which sets the time from the start of detection function to the end of the function.

### **SW-G3 No. 7, No. 8 Reserved**

Set to "0".

### **SW-H1 No. 1 ~ No. 3 Reserved**

Set to "0".

### **SW-H1 No. 4 Busy tone continuous sound detect time**

Set detecting time busy tone continuous sound for 5 seconds or 10 seconds.

### **SW-H1 No. 5 Reserved**

Set to "0".

### **SW-H1 No. 6 Busy tone detect continuation sound detect**

Used to select detection of the continuous sound of certain frequency.

### **SW-H1 No. 7 Reserved**

Set to "0".

### **SW-H1 No. 8 Busy tone detect intermittent sound detect**

Used to select detection of the intermittent sound of certain frequency.

### **SW-H2 No. 1, No. 2 Busy tone detection pulse number**

Used to set detection of Busy tone intermittent sounds.

### **SW-H2 No. 3 Fax switching when A.M. full**

If the answering machine's memory (tape) is full and there is no response, the machine automatically switches to Fax reception.

### **SW-H2 No. 4 ~ No. 8 Reserved**

Set to "0".

### **SW-I1 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-I2 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-I3 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-I4 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-I5 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-I6 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-I7 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-J1 No. 1, No. 2 Reserved**

Set to "0".

### **SW-J1 No. 3 Sender's phone number setting**

Used to make a choice of whether the registered sender's phone number can be changed or not. If the switch is set to "1", new registration of the sender's phone number is disabled to prevent accidental wrong input.

### **SW-J1 No. 4, No. 5 Reserved**

Set to "0".

### **SW-J1 No. 6 Summer time setting**

Used to set YES/NO of automatic clock adjustment for summer time.

### **SW-J1 No. 7, No. 8 Ringer volume**

Used to adjust ringing volume.

### **SW-J2 No. 1, No. 2 Speaker volume**

Used to adjust sound volume from a speaker.

### **SW-J2 No. 3 Polling key**

If this switch is set to 1, the last of Rapid key works as polling key.

### **SW-J2 No. 4 ~ No. 8 Reserved**

Set to "0".

### **SW-J3 No. 1, No. 2 Reserved**

Set to "0".

### **SW-J3 No. 3, No. 4 Communication result printout (Transaction report)**

It is possible to obtain transaction results after each communication. Normally, the switch is set (No. 1: 0, No. 2: 0) so that the transaction report is produced only when a communication error is encountered. If No. 1 was set to 1 and No. 2 to 0, the transaction report will be produced every time a communication is done, even if the communication was successful.

Setting No. 1 to 1 and No. 2 to 1 will disable this function. No transaction report printed.

### **SW-J3 No. 5 ~ No. 8 Reserved**

Set to "0".

### **SW-K1 No. 1 Entering DIAG mode by pressing SPEED key**

A bit which is used in the production process only. When the SPEED key is pressed, the switch is changed from the stand-by state to the DIAG mode.

### **SW-K1 No. 2 ~ No. 8 Reserved**

Set to "0".

### **SW-L1 No. 1 ~ No. 8 Reserved**

Set to "0".

### **SW-L2 No. 1 ~ No. 8 Reserved**

Set to "0".



### [3] Troubleshooting

Refer to the following actions to troubleshoot any of problems mentioned in 1-4.

[1] A communication error occurs.

[2] Image distortion produced.

[3] Unable to do overseas communication.

[4] Communication speed slow due to FALLBACK.

- Increase the transmission level SOFT SWITCH A4-1, 2, 3, 4, 5.  
May be used in case [1] [2] [3].
- Decrease the transmission level SOFT SWITCH A4-1, 2, 3, 4, 5. May be used in case [3].

- Apply line equalization SOFT SWITCH A5-1, 2.  
May be used in case [1] [2] [3] [4].

- Slow down the transmission speed SOFT SWITCH A2-1, 2, 3, 4. May be used in case [2] [3].

- Replace the TEL/LIU PWB.  
May be used in all cases.

- Replace the control PWB.  
May be used in all cases.

\* If transmission problems still exist on the machine, use the following format and check the related matters.

TO: _____	ATT: _____	Ref.No.: _____
CC: _____	ATT: _____	Date: _____
FM: _____		Dept: _____
		Sign: _____

***** Facsimile communication problem *****				Ref.No.: _____																					
From: Mr. _____		Fax Tel No.: _____		Date: _____																					
Our customer	Name _____	Tel No. _____																							
	Address _____	Fax No. _____																							
	Contact person _____	Model name _____																							
Other party	Name _____	Tel No. _____																							
	Address _____	Fax No. _____																							
	Contact person _____	Model name _____																							
Problem mode	Line: Domestic / international _____	Model: G3	Phase: A, B, C, D.																						
	Reception / Transmission _____	Automatic reception / Manual reception _____																							
		Automatic dialing / Manual dialing / Others _____																							
Frequency: _____ %		ROM version: _____																							
Confirmation item					Please mark problem with an X. No problem is: 0.																				
					<table border="1"> <tr> <th>A1</th><th>A2</th><th>B1</th><th>B2</th><th>C1</th><th>C2</th><th>D1</th><th>D2</th><th>E1</th><th>E2</th></tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> </table>	A1	A2	B1	B2	C1	C2	D1	D2	E1	E2										
					A1	A2	B1	B2	C1	C2	D1	D2	E1	E2											
					Transmission level setting is ( ) dB at our customer																				
Transmission level ( ) dBm Reception level ( ) dBm By level meter at B1 and B2																									
Comment																									
Countermeasure																									
**** Please attach the G3 data and activity report on problem. ****																									

\* Please complete this report before calling the "TAC" hotline if problem still occurs.

## [4] Error code table

### 1. Communication error code table

#### G3 Transmission

Code	Final received signal	Error Condition (Receiver side)
0	Incomplete signal frame	Cannot recognize bit stream after flag
1	NSF, DIS	Cannot recognize DCS signal by echo etc. Cannot recognize NSS signal (FIF code etc)
2	CFR	Disconnects line during reception (carrier missing etc)
3	FTT	Disconnects line by fall back
4	MCF	Disconnects line during reception of multi page Cannot recognize NSS, DCS signal in the case of mode change
5	PIP or PIN	The line is hung up without replying to telephone request from the receiving party.
6	RTN or RTP	Cannot recognize NSS, DCS signal after transmit RTN or RTP signal.
7	No signal or DCN	No response in receiver side or DCN signal received* (transmitter side)
8	—	Owing to error in some page the error could not be corrected although the specified number of error retransmission was attempted.
11	—	Error occurred after or while reception by the remote (receiving) machine was revealed to be impossible.
12	—	Error occurred just after fallback.
13	—	Error occurred after a response to retransmission end command was received.

#### G3 Reception

Code	Final received signal	Error Condition (Receiver side)
0	Incomplete signal frame	Cannot recognize bit stream after flag
1	NSS, DCS	Cannot recognize CFR or FTT signal Disconnects line during transmission (line error)
2	NSC, DTC	Cannot recognize NSS signal (FIF code etc)
3	EOP	Cannot recognize MCF, PIP, PIN, RTN, RTP signal
4	EOM	Cannot recognize MCF, PIP, PIN, RTN, RTP signal in the case of mode change
5	MPS	The line is hung up without replying to communication request.
6	PR1-Q	Cannot recognize PIP, PIN signal in the case of TALK request
7	No signal or DCN	No response in transmitter (cannot recognize DIS signal) or DCN signal received* (receiver side)
8	—	Error occurred upon completion of reception of all pages.
9	—	Error occurred when mode was changed or Transmission/Reception switching was performed.
10	—	Error occurred during partial page or physical page reception.
11	—	Error occurred after or during inquiry from the remote (transmitting) machine as to whether reception is possible or not.
12	—	Error occurred during or just after fallback.
13	—	Error occurred after the retransmission end command was received.

MEMO

CHAPTER 3. MECHANISM BLOCKS

[1] General description

1. Document feed block and diagram

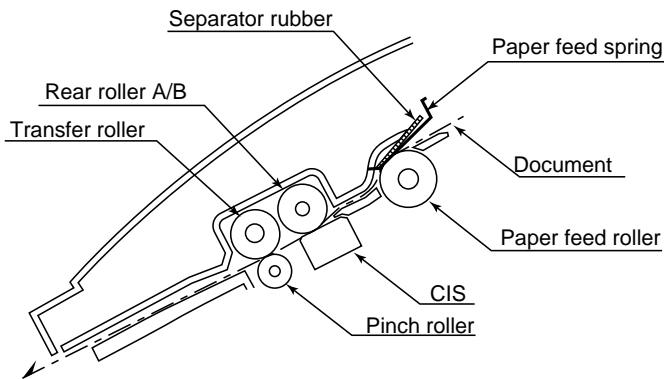


Fig. 1

2. Document feed operation

- 1) The document placed in the hopper actuates the document sensor. After one second, the pulse motor starts to drive the paper feed roller. The document is automatically taken up into the machine, and stopped at the document sensor.
- 2) When a specified number of pulses are received from the document sensor after the document lead edge is sensed, scanning is started.
- 3) When a specified number of pulses are received from the document sensor after the document rear edge is sensed, scanning is terminated and the document is fed through.
- 4) If the document sensor is active (i.e., another document is in the hopper), when the preceding document scanning is completed and it is fed out, the next document is taken up into the machine. If the document sensor is not active (i.e., there is no document in the hopper), when the document is fed out, the operation is terminated.

3. Hopper mechanism

3-1. General view



Fig. 2

The hopper is used to align documents with the document guides adjusted to the paper width.  
NOTE: Adjust the document guide after setting up the document.

3-2. Automatic document feed

- 1) Use of the paper feed roller and separation rubber plate ensures error-free transport and separation of documents. The plate spring presses the document to the paper feed roller to assure smooth feeding of the document.
- 2) Document separation method: Separation rubber plate

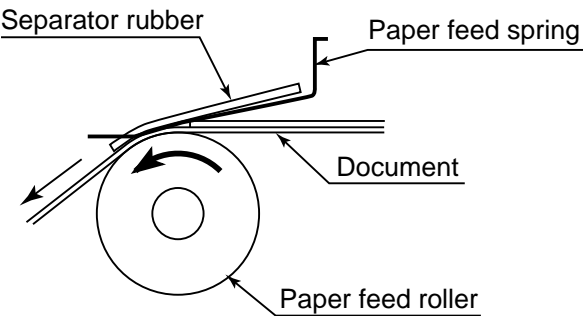


Fig. 3

3-3. Documents applicable for automatic feed

	4x6 series (788mm x 1091mm x 1000mm sheets)		Square meter series	
	Minimum	Maximum	Minimum	Maximum
Feeder capacity	10 sheets, max.			
Paper weight	45kg	64.3kg	52g/m <sup>2</sup>	74.3g/m <sup>2</sup>
Paper thickness (ref.)	0.06mm	0.09mm	0.06mm	0.09mm
Paper size	1/2 Letter (148mm x 140mm) ~ A4 (210mm x 297mm), Letter (216mm x 279mm)			

NOTE: Double-side coated documents and documents on facsimile recording paper should be inserted manually. The document feed quantity may be changed according to the document thickness.

Documents corresponding to a paper weight heavier than 64.3kg (74.3g/m<sup>2</sup>) and lighter than 135kg (157g/m<sup>2</sup>) are acceptable for manual feed.

Documents heavier than 135kg in terms of the paper weight must be duplicated on a copier to make it operative in the facsimile.

3-4. Loading the documents

- 1) Make sure that the documents are of suitable size and thickness, and free from creases, folds, curls, wet glue, wet ink, clips, staples and pins.
- 2) Place documents face down in the hopper.
  - i) Adjust the document guides to the document size.
  - ii) Align the top edge of documents and gently place them into the hopper. The first page under the stack will be taken up by the feed roller to get ready for transmission.

- NOTES:
- 1) Curled edge of documents, if any, must be straighten out.
  - 2) Do not load the documents of different sizes and/or thicknesses together.

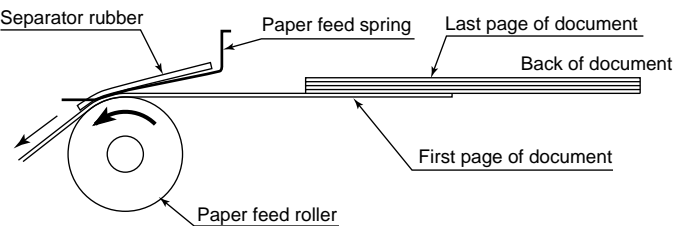


Fig. 4

### 3-5. Documents requiring use of document carrier

- 1) Documents smaller than B6 (128mm x 182mm).
- 2) Documents thinner than the thickness of 0.06mm.
- 3) Documents containing creases, folds, or curls, especially those whose surface is curled (maximum allowable curl is 5mm).
- 4) Documents containing tears.
- 5) Carbon-backed documents. (Insert a white sheet of paper between the carbon back and the document carrier to avoid transfer of carbon to the carrier.)
- 6) Documents containing an easily separable writing material (e.g., those written with a lead pencil).
- 7) Transparent documents.
- 8) Folded or glued documents.

Document in document carrier should be inserted manually into the feeder.

### 4. Document release

#### 4-1. General

When the release lever is pulled by hand in the direction of arrow, the latch is released and the upper document guide moves on its axis in the direction of the arrow. The feed rollers, the separation rubber plate, and the pinch rollers become free to make it possible to remove the document.

#### 4-2. Cross section view

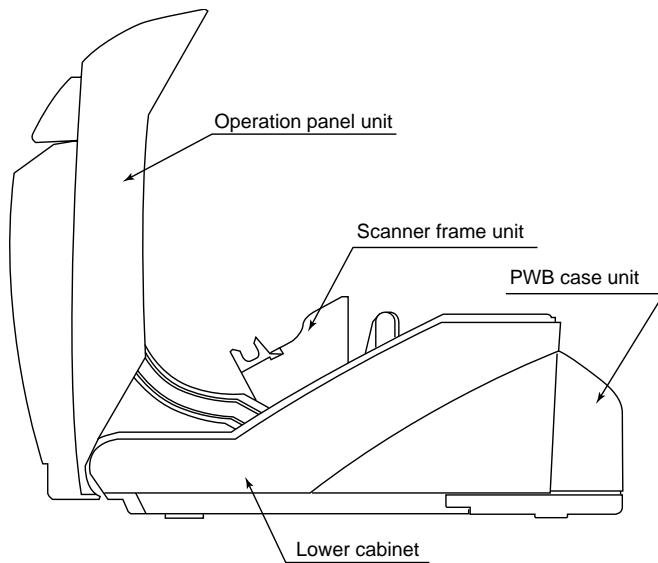


Fig. 5

### 5. Recording block

#### 5-1. General view

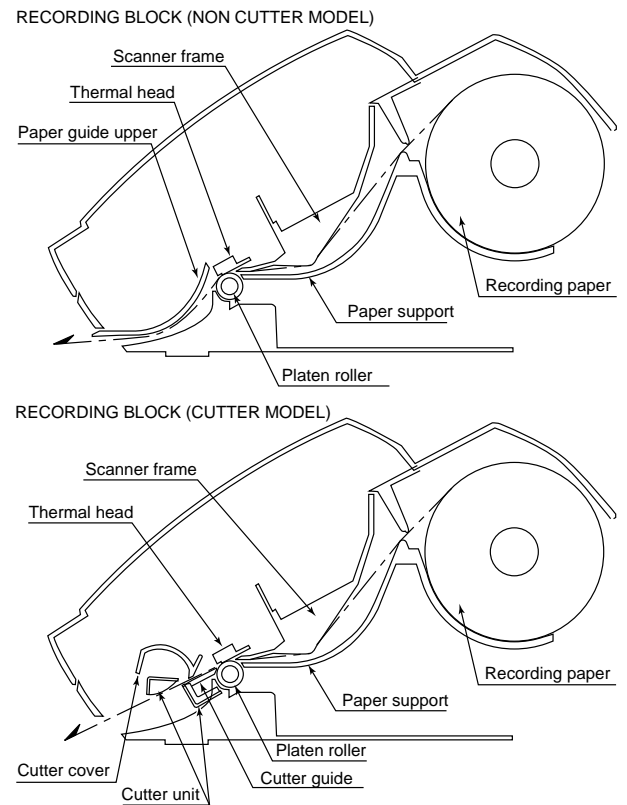


Fig. 6

#### 5-2. Driving

Via the pulse motor gear shaft, the reduction gear, and the recording paper feed gear, rotation of the pulse motor is conveyed to the recording paper feed roller to feed the recording paper.

#### 5-3. Recording

Use of a thermal head permits easier maintenance and low operating costs.

##### 1) Thermal head

The thermal head consists of 1728-dot heat elements arranged in a single row and has the resolution of 8 dots/mm. The maximum recording speed is 10ms/line. The thermal head also incorporates a 1728-dot shift register latch and output control driver circuit. Low power consumption is achieved by dividing the head into nine segments.

##### 2) Structure of the recording mechanism

Recording is accomplished by pressing the thermal head on the recording paper against the platen roller.

The main scan (horizontal) is electronically achieved, while the subscan (vertical) is achieved by moving the recording paper by the recording platen roller.

Usually, the cause for uneven print tone is caused by misalignment of the thermal head or uneven contact with the roller.

It can be checked in the following manner.

- 1) Check if the thermal head power and signal cables are properly routed.
- 2) Check that the thermal head pivot moves smoothly up and down.
- 3) Check that the thermal head support bracket is secured without any play.
- 4) Check to see that the recording platen roller has proper concentricity, in the case of a print tone variation evenly repeated down the page.
- 5) Replace the thermal head with a new one and check to see if the same trouble occurs.

[2] Disassembly and assembly procedures

- This chapter mainly describes the disassembly procedures. For the assembly procedures, reverse the disassembly procedures.
- Easy and simple disassembly/assembly procedures of some parts and units are omitted. For disassembly and assembly of such parts and units, refer to the Parts List.
- The numbers in the illustration, the parts list and the flowchart in a same section are common to each other.
- To assure reliability of the product, the disassembly and the assembly procedures should be performed carefully and deliberately.

1

Handset cover and paper support guide

Parts list (Fig. 1)

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Mechanism unit	1	7	Guide wire sheet	1
2	Handset cover	1	8	Paper set label	1
3	Hook switch lever	1	9	Paper sensor lever	1
4	Screw (ø3×12)	2	10	Paper sensor lever spring	1
5	Paper support guide unit	1	11	Guide sheet	2
6	Guide wire	1	12	Sensor sheet	1
			13	Paper support guide	1

1

2

3

6

7

8

9

4

5

12

13

10

11

3

2

4

5

1

13

12

6

9

10

11

8

7

Lock the all hook  
(4place)

2

3

4

4

5

1

5

Hook

Hook

1

Fig. 1

3 - 3

2

PWB case top, bottom and PWB

Parts list (Fig. 2)

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Mechanism unit	1	9	Screw (4×6)	1
2	Screw (3×6)	1	10	AC cord ass'y	1
3	Head earth cable	1	11	Screw (3×6)	1
4	Connector	3	12	TEL ARG cable	1
5	Screw (3×10)	1	13	Power supply PWB unit	1
6	PWB case unit	1	14	TEL/LIU PWB unit	1
7	Screw (3×10)	2	15	Rubber leg	2
8	PWB case, top	1	16	PWB case, bottom	1

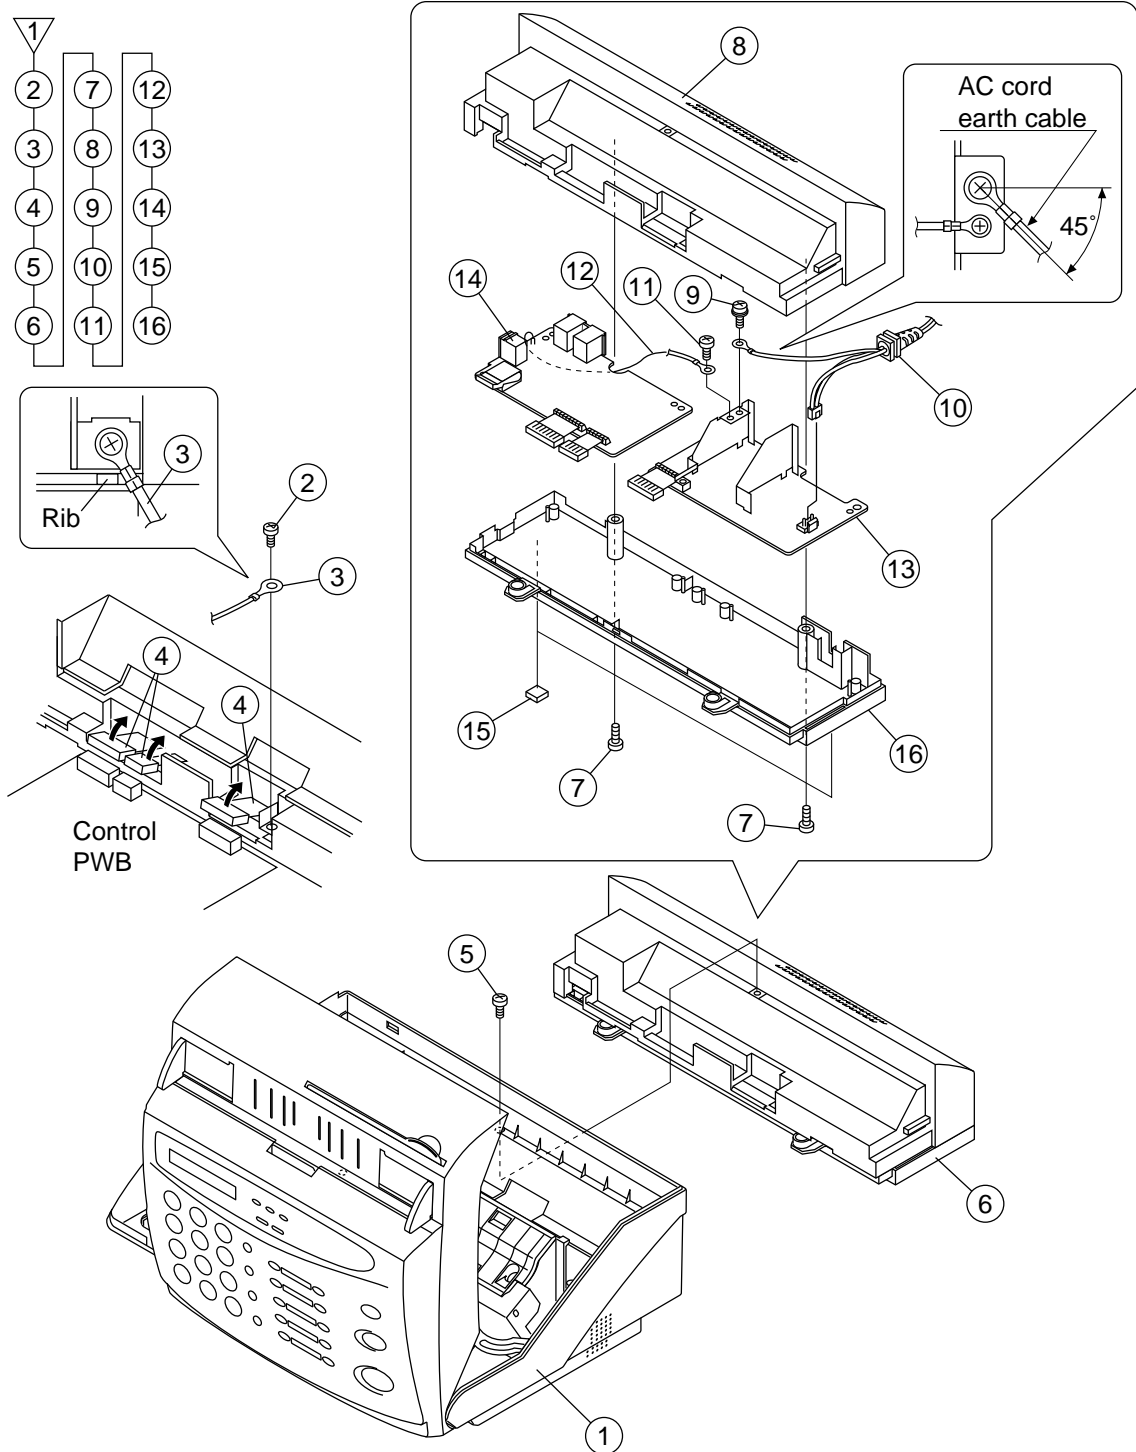


Fig. 2

3      Operation panel unit and scanner frame

Parts list (Fig. 3)

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Mechanism unit	1	9	Feed roller	1
2	Screw (3×10)	2	10	CIS cable	1
3	Scanner frame unit	1	11	CIS support, right	1
4	Document guide lower	1	12	CIS unit	1
5	Reduction gear, 17/36Z	1	13	CIS support, left	1
6	Reduction gear, 17/21Z	1	14	CIS spring	2
7	Idler gear, 25Z	1	15	Scanner frame	1
8	Feed roller shaft	1	16	Panel and head cable	2
			17	Operation panel unit	1

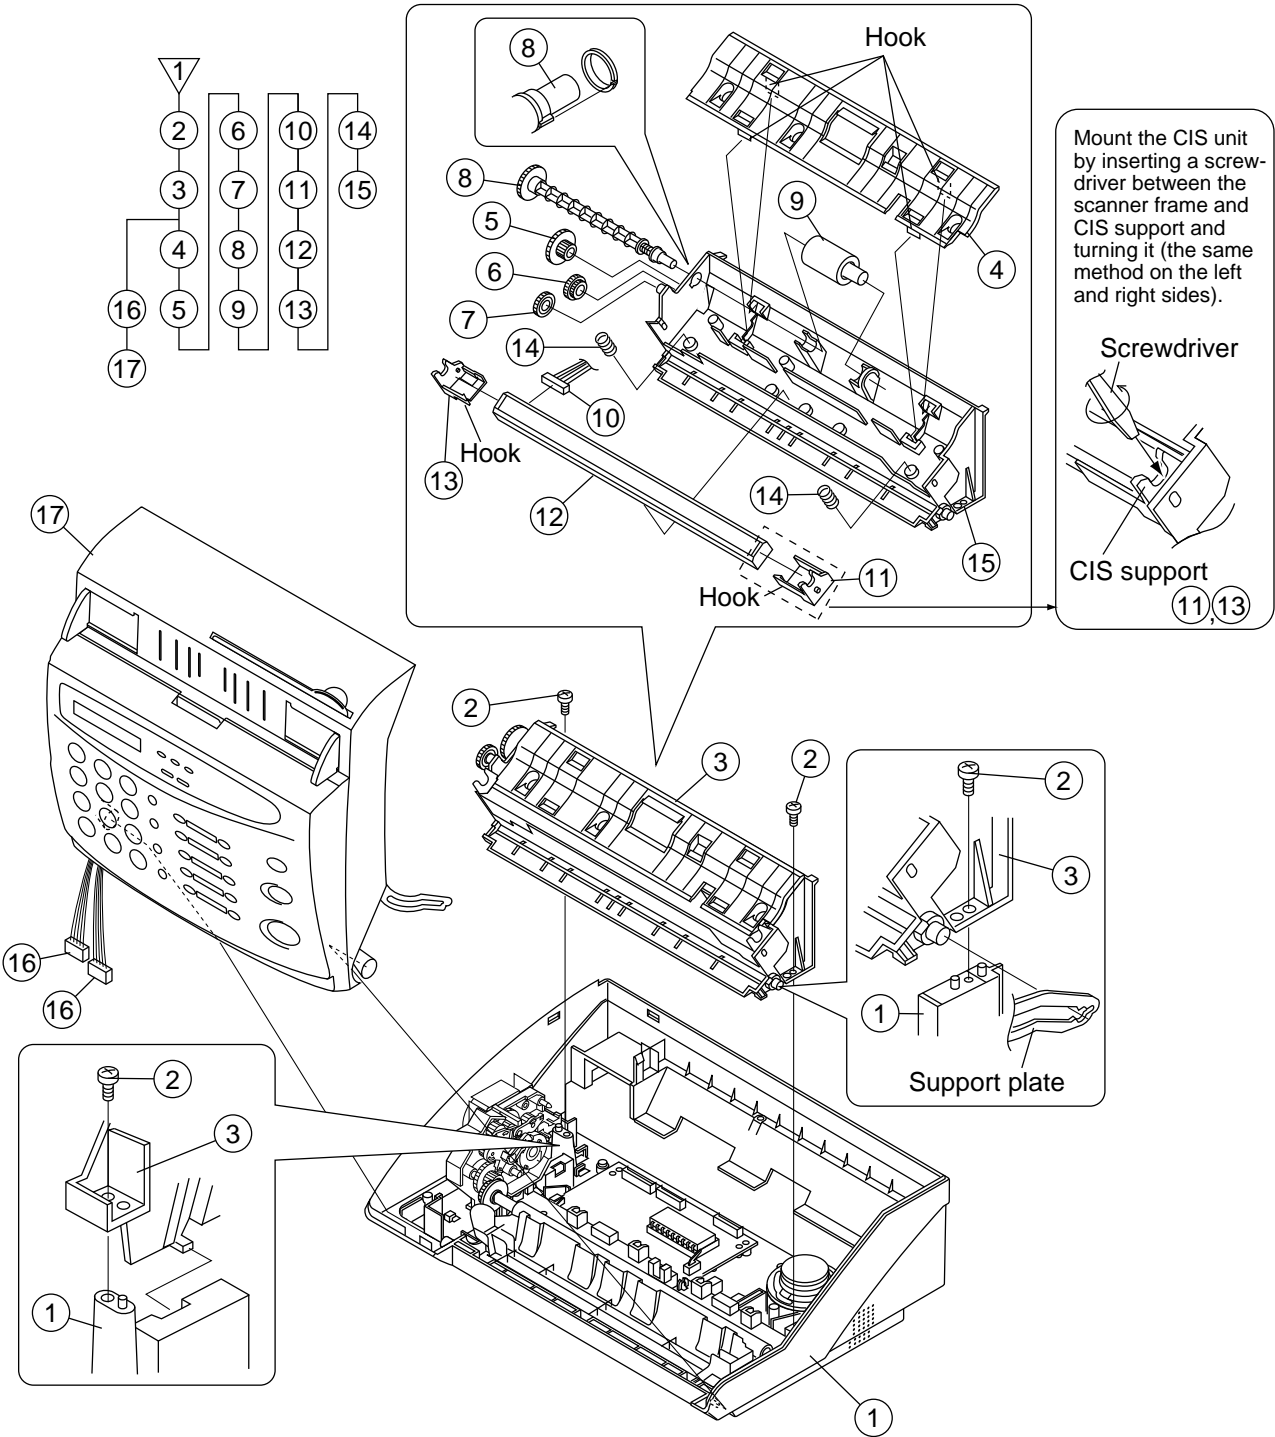


Fig. 3



4

**Document guide upper unit and head frame**

Parts list (Fig. 4)

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Operation panel unit	1	11	Head support, right	1
2	Screw (3×10)	2	12	Screw (3×6)	1
3	Support plate	1	13	Head earth cable	1
4	Document guide upper unit	1	14	Head support, left	1
5	Screw (3×10)	2	15	Thermal head	1
6	Head sheet	1	16	Pinch roller shaft	1
7	Head cable	1	17	Pinch roller	2
8	Head spring A	2	18	Pinch roller pressing spring	2
9	Head spring B	3	19	Head frame	1
10	Screw (3×6)	1			

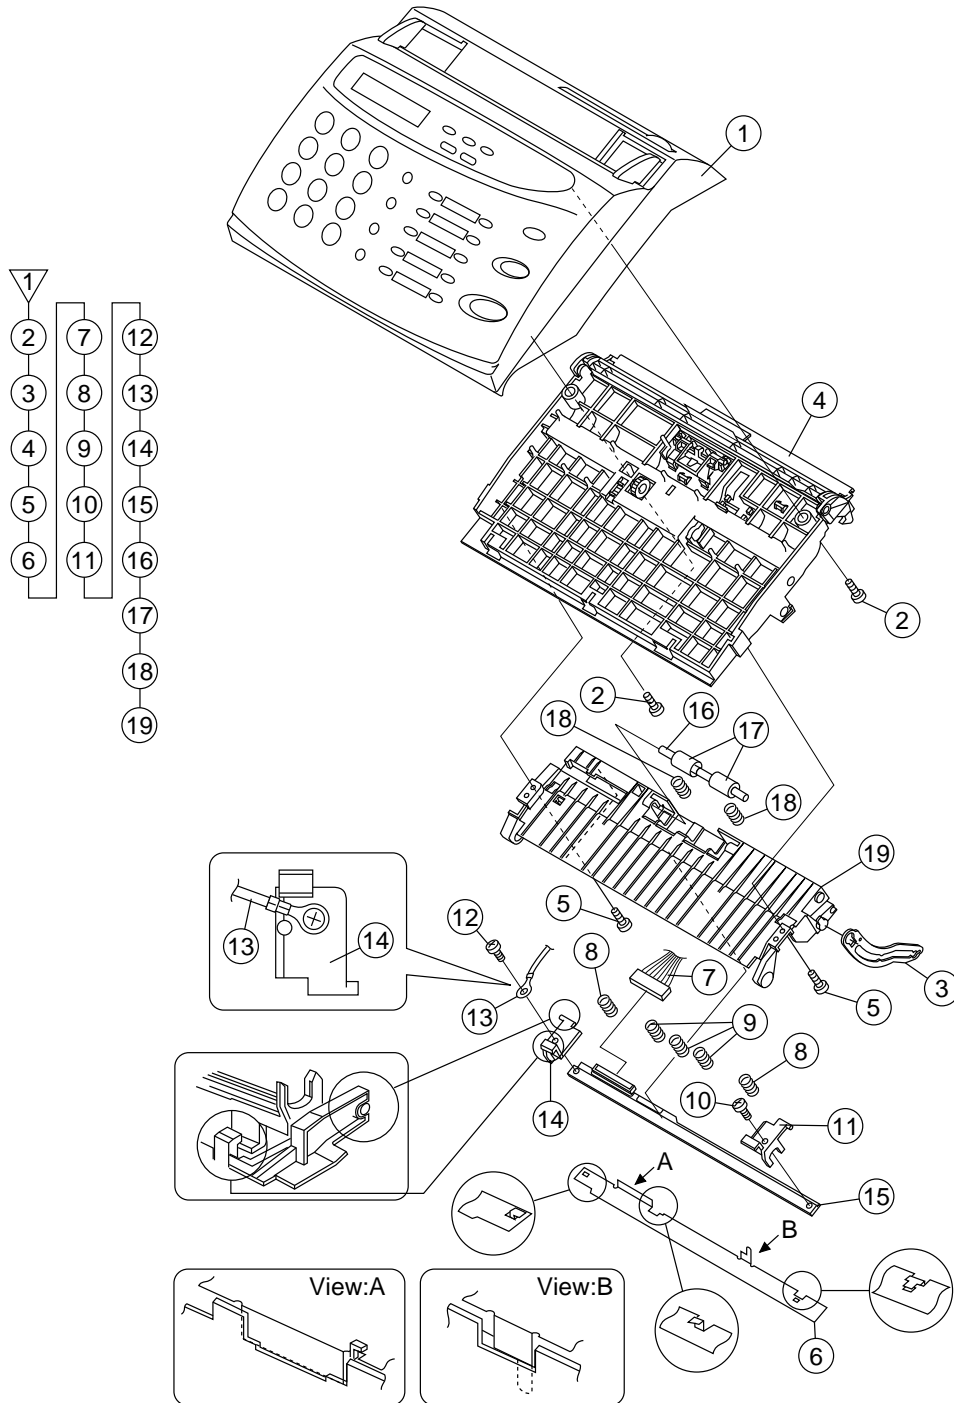


Fig. 4

5 Document guide upper

Parts list (Fig. 5)

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Rear sheet	1	11	Panel lock lever	1
2	CIS gear, 29Z	1	12	Document sensor lever spring	1
3	CIS roller A ass'y	1	13	Document sensor lever	1
4	Transfer bearing	1	14	Separate spring	1
5	Cuppling gear	1	15	Separator plate	1
6	CIS roller B ass'y	1	16	Paper feed spring	1
7	Transfer roller	1	17	Separator rubber	1
8	Transfer bearing	1	18	Document guide upper	1
9	Idler gear, 20Z	1			
10	Panel lock lever spring	1			

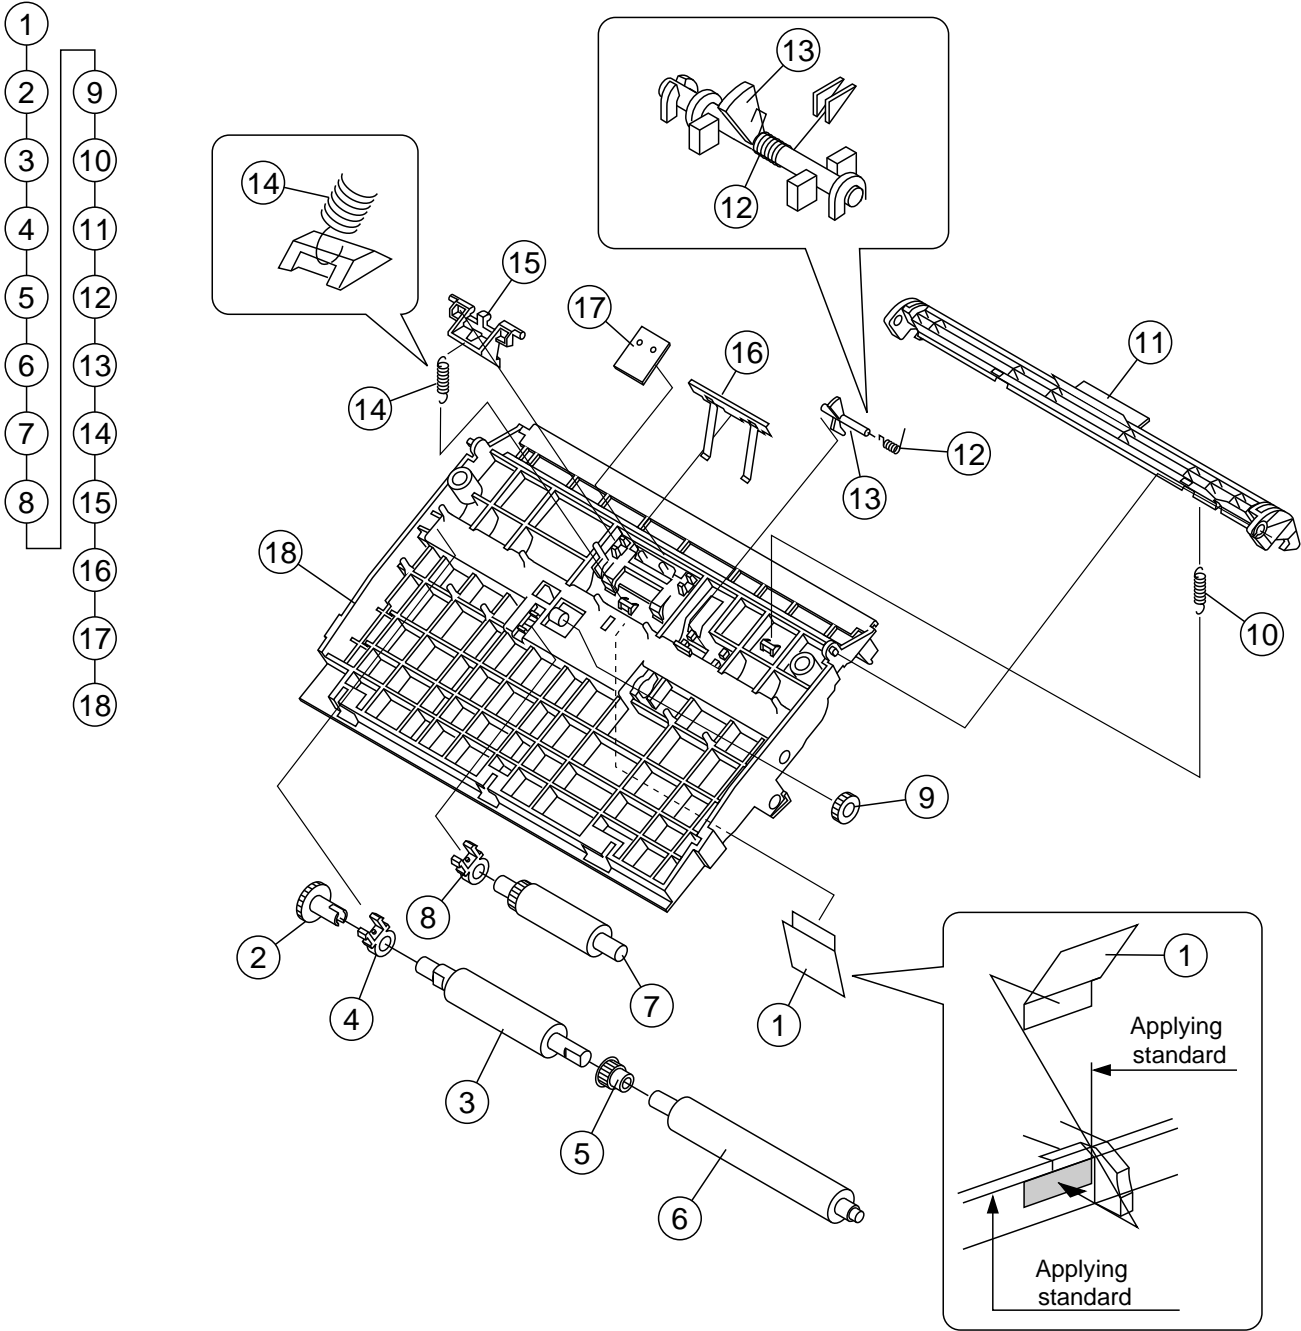


Fig. 5

6

Operation panel

Parts list (Fig. 6)

No.	Part name	Q'ty	No.	Part name	Q'ty
1	Operation panel unit	1	8	Hopper spring	1
2	Screw (2x6)	3	9	Hopper guide, right	1
3	Operation panel cable	1	10	Hopper guide, left	1
4	Operation panel PWB	1	11	Stop key	1
5	Document tray	1	12	Start key	1
6	Screw	1	13	Direct key	1
7	Pinion gear	1	14	12 key	1
			15	Operation panel	1


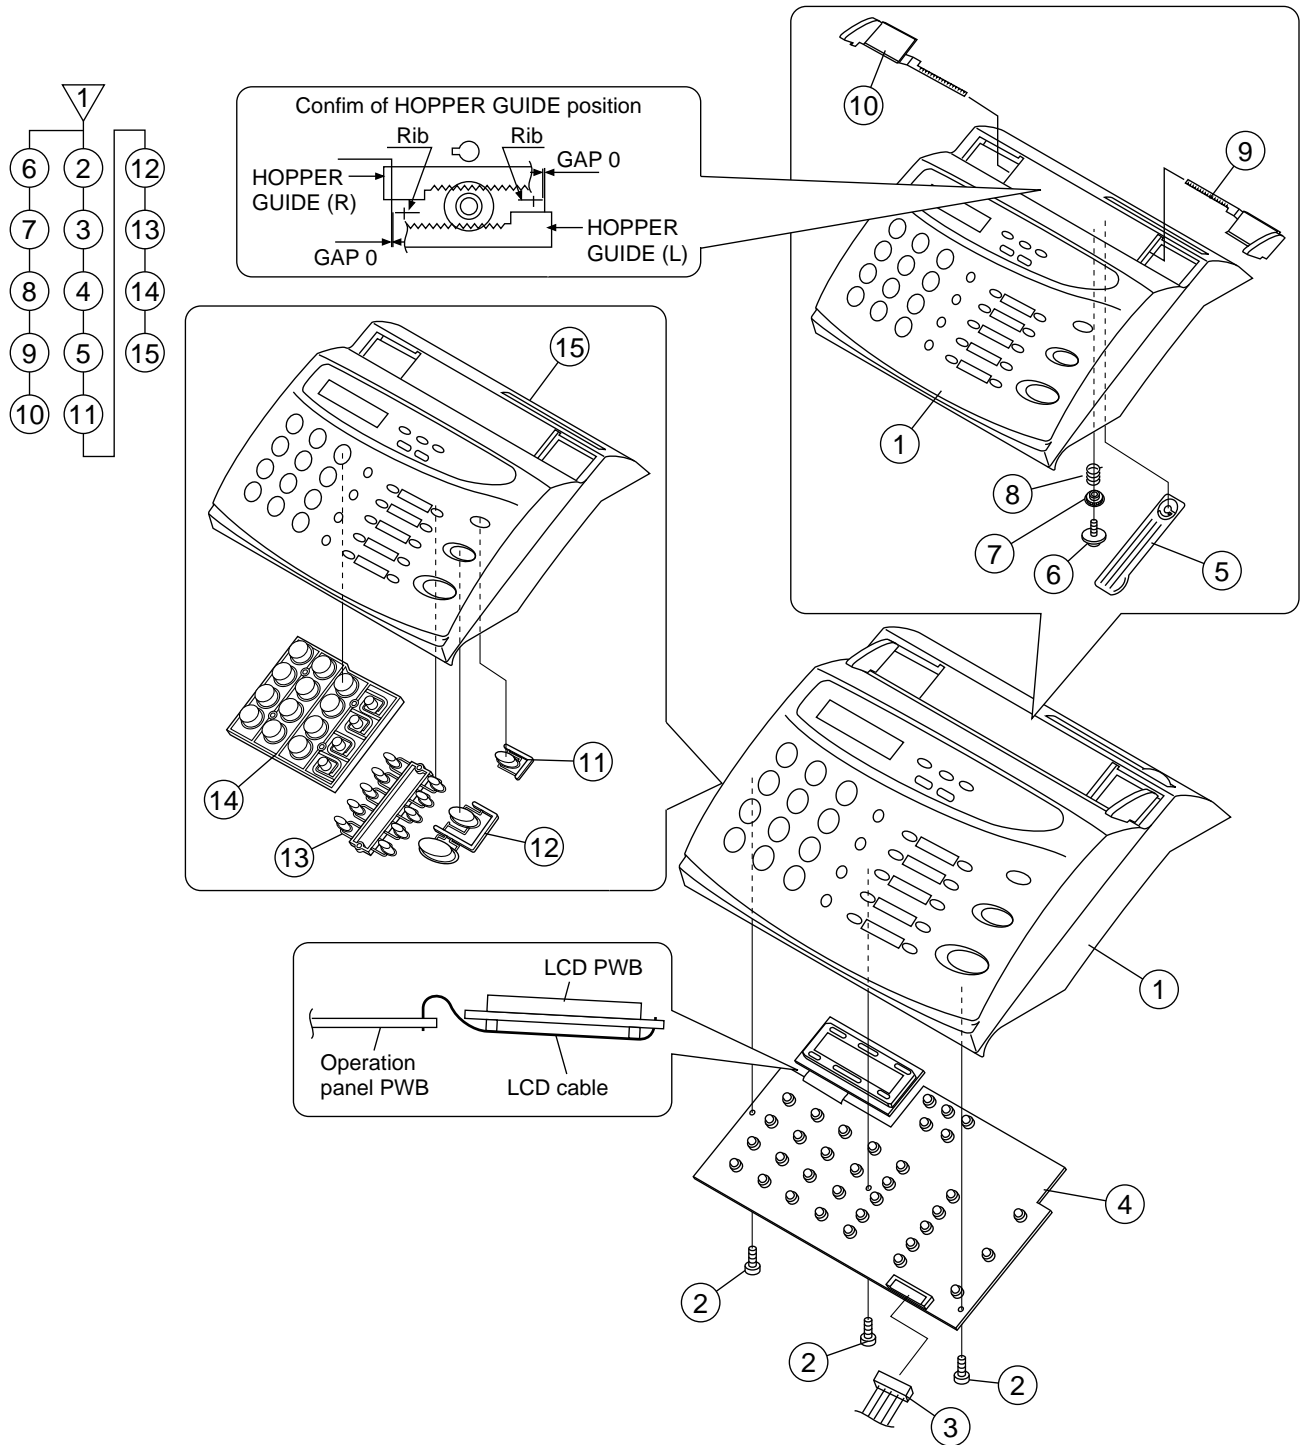


Fig. 6

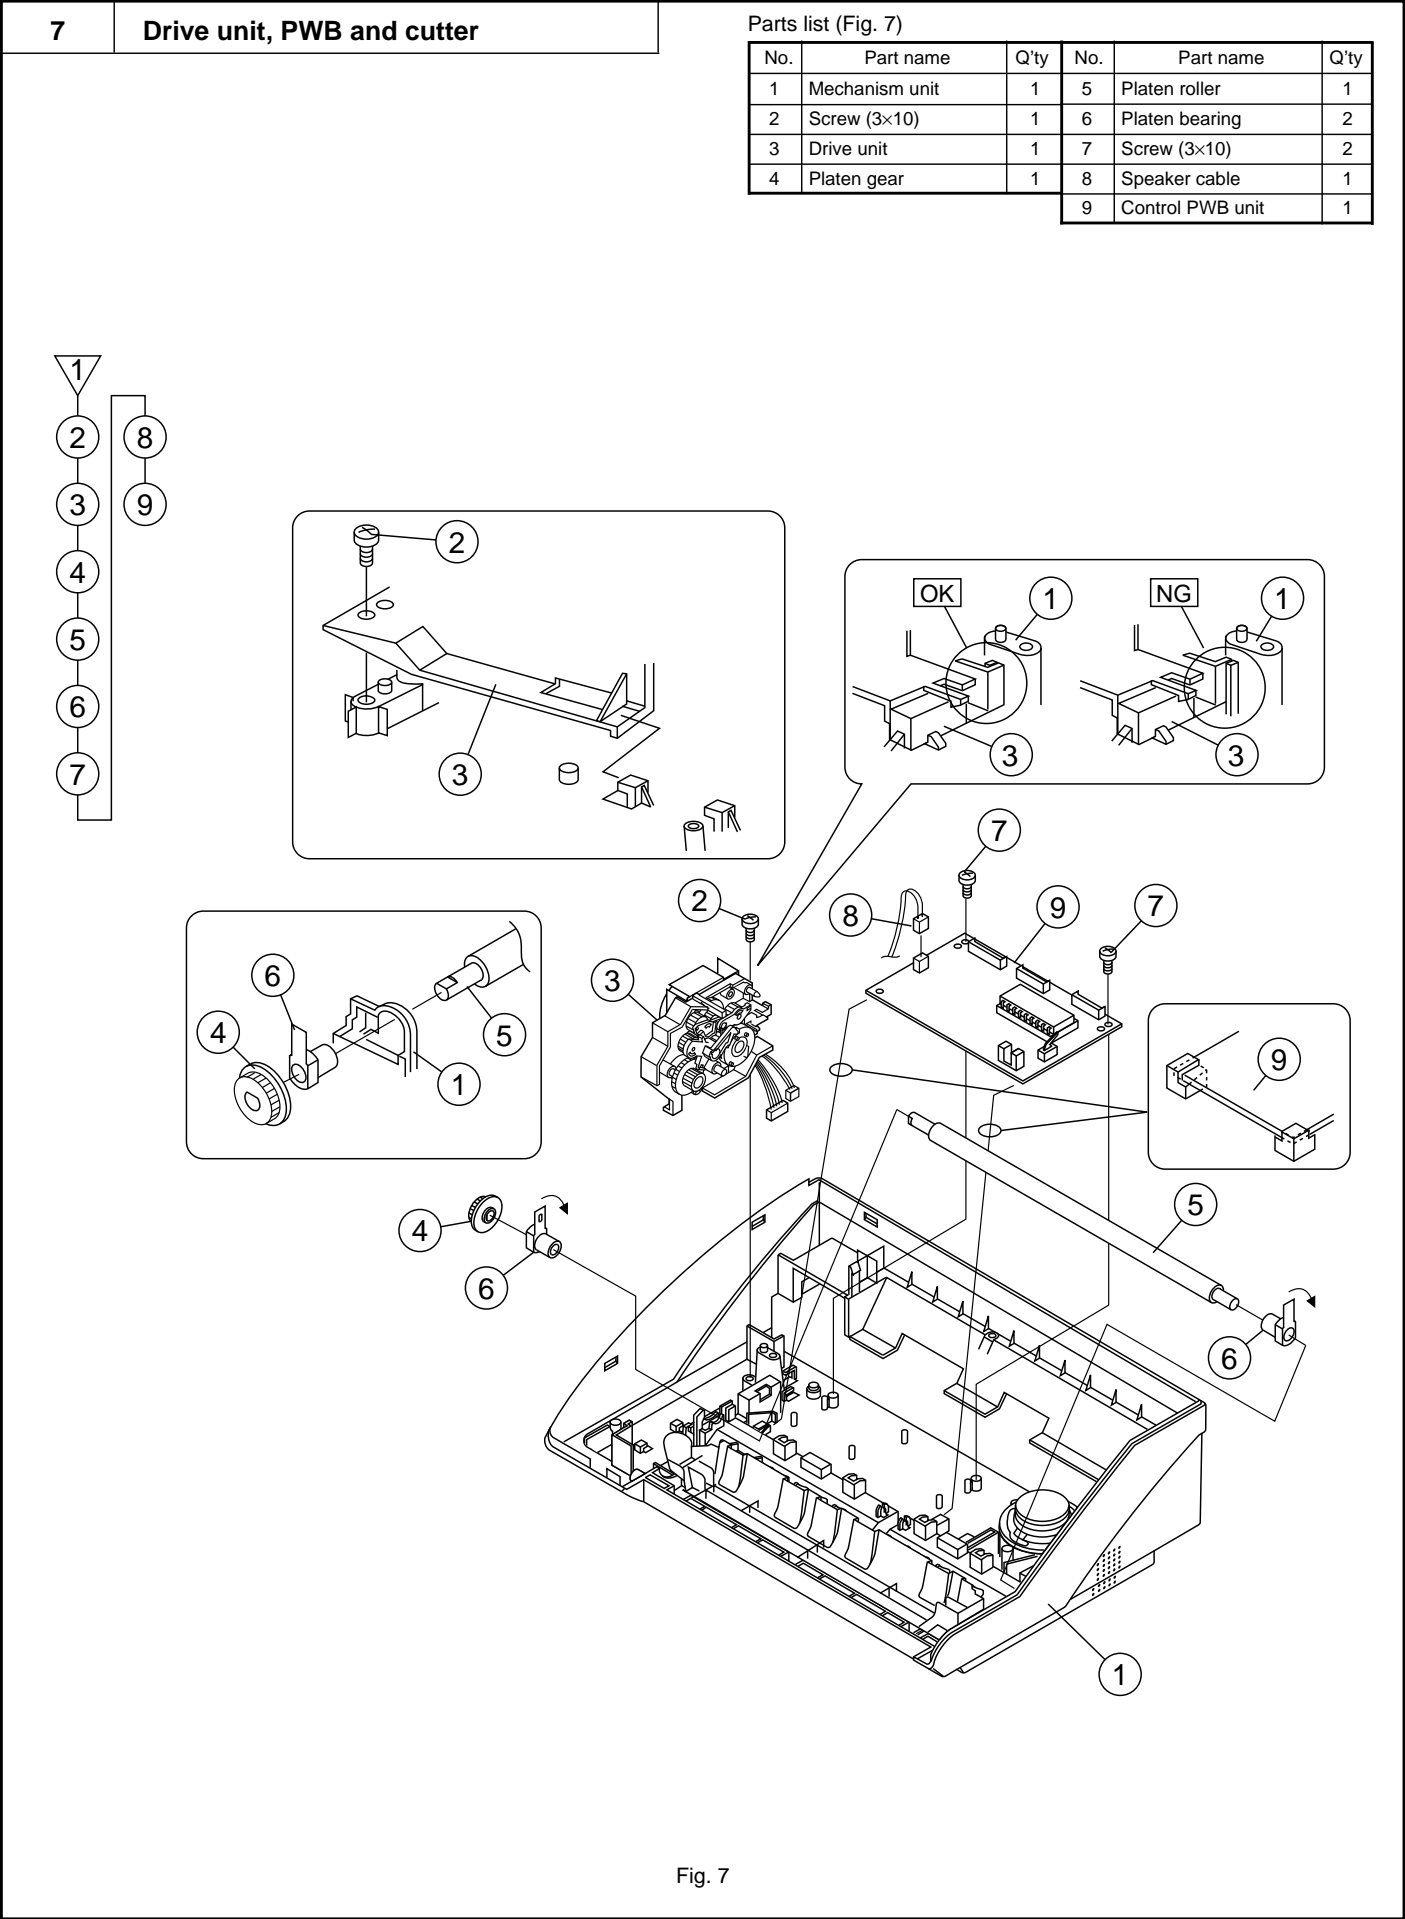

8

**Speaker, paper sensor lever and paper guide upper**

Parts list (Fig. 8)

No.	Part name	Q'ty
1	Mechanism unit	1
2	Screw	2
3	Speaker	1
4	Paper guide upper	1


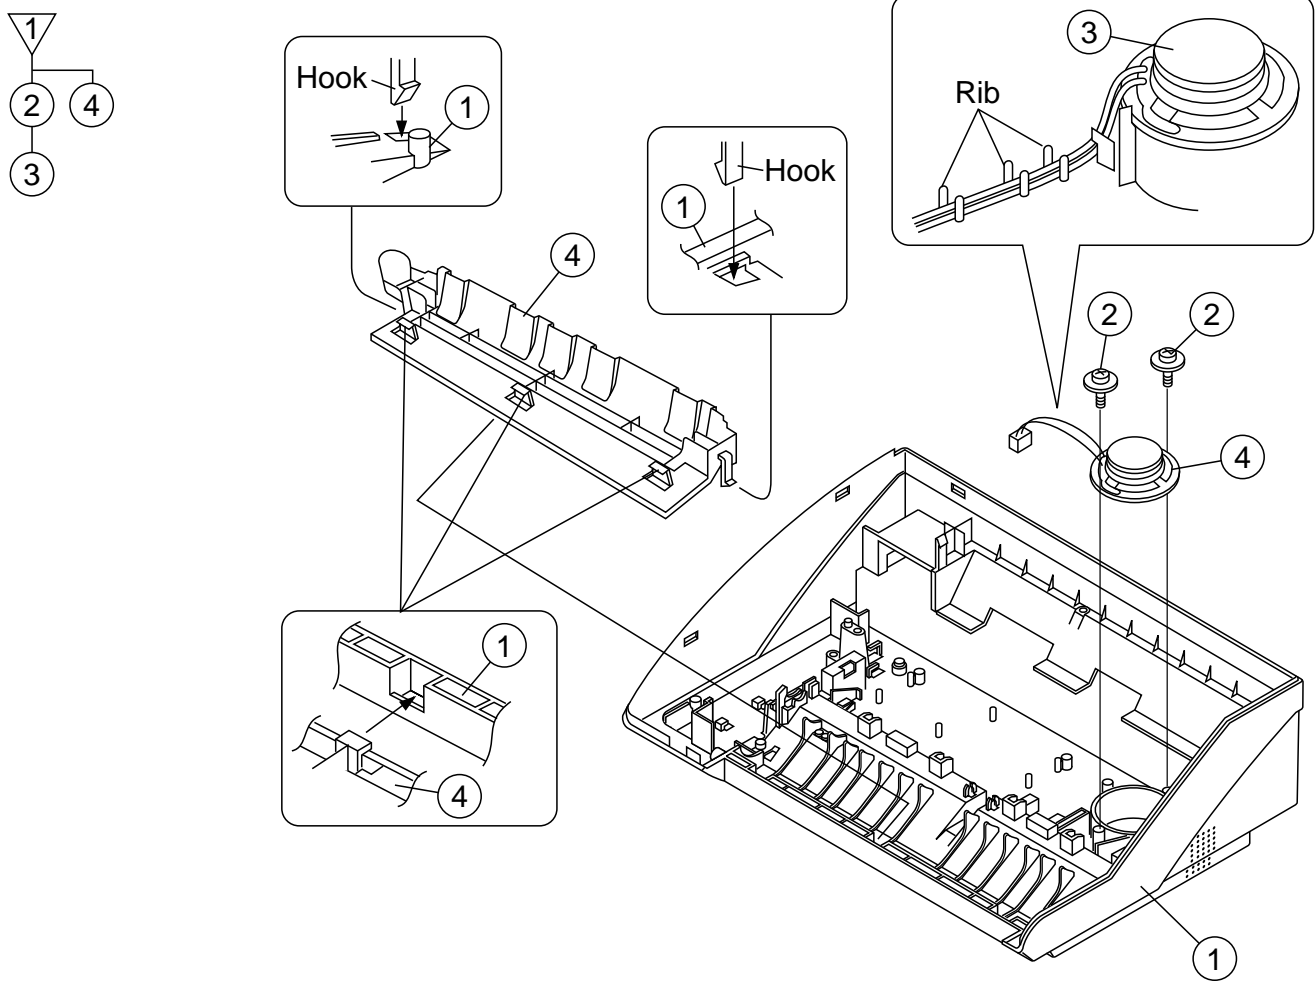


Fig. 8

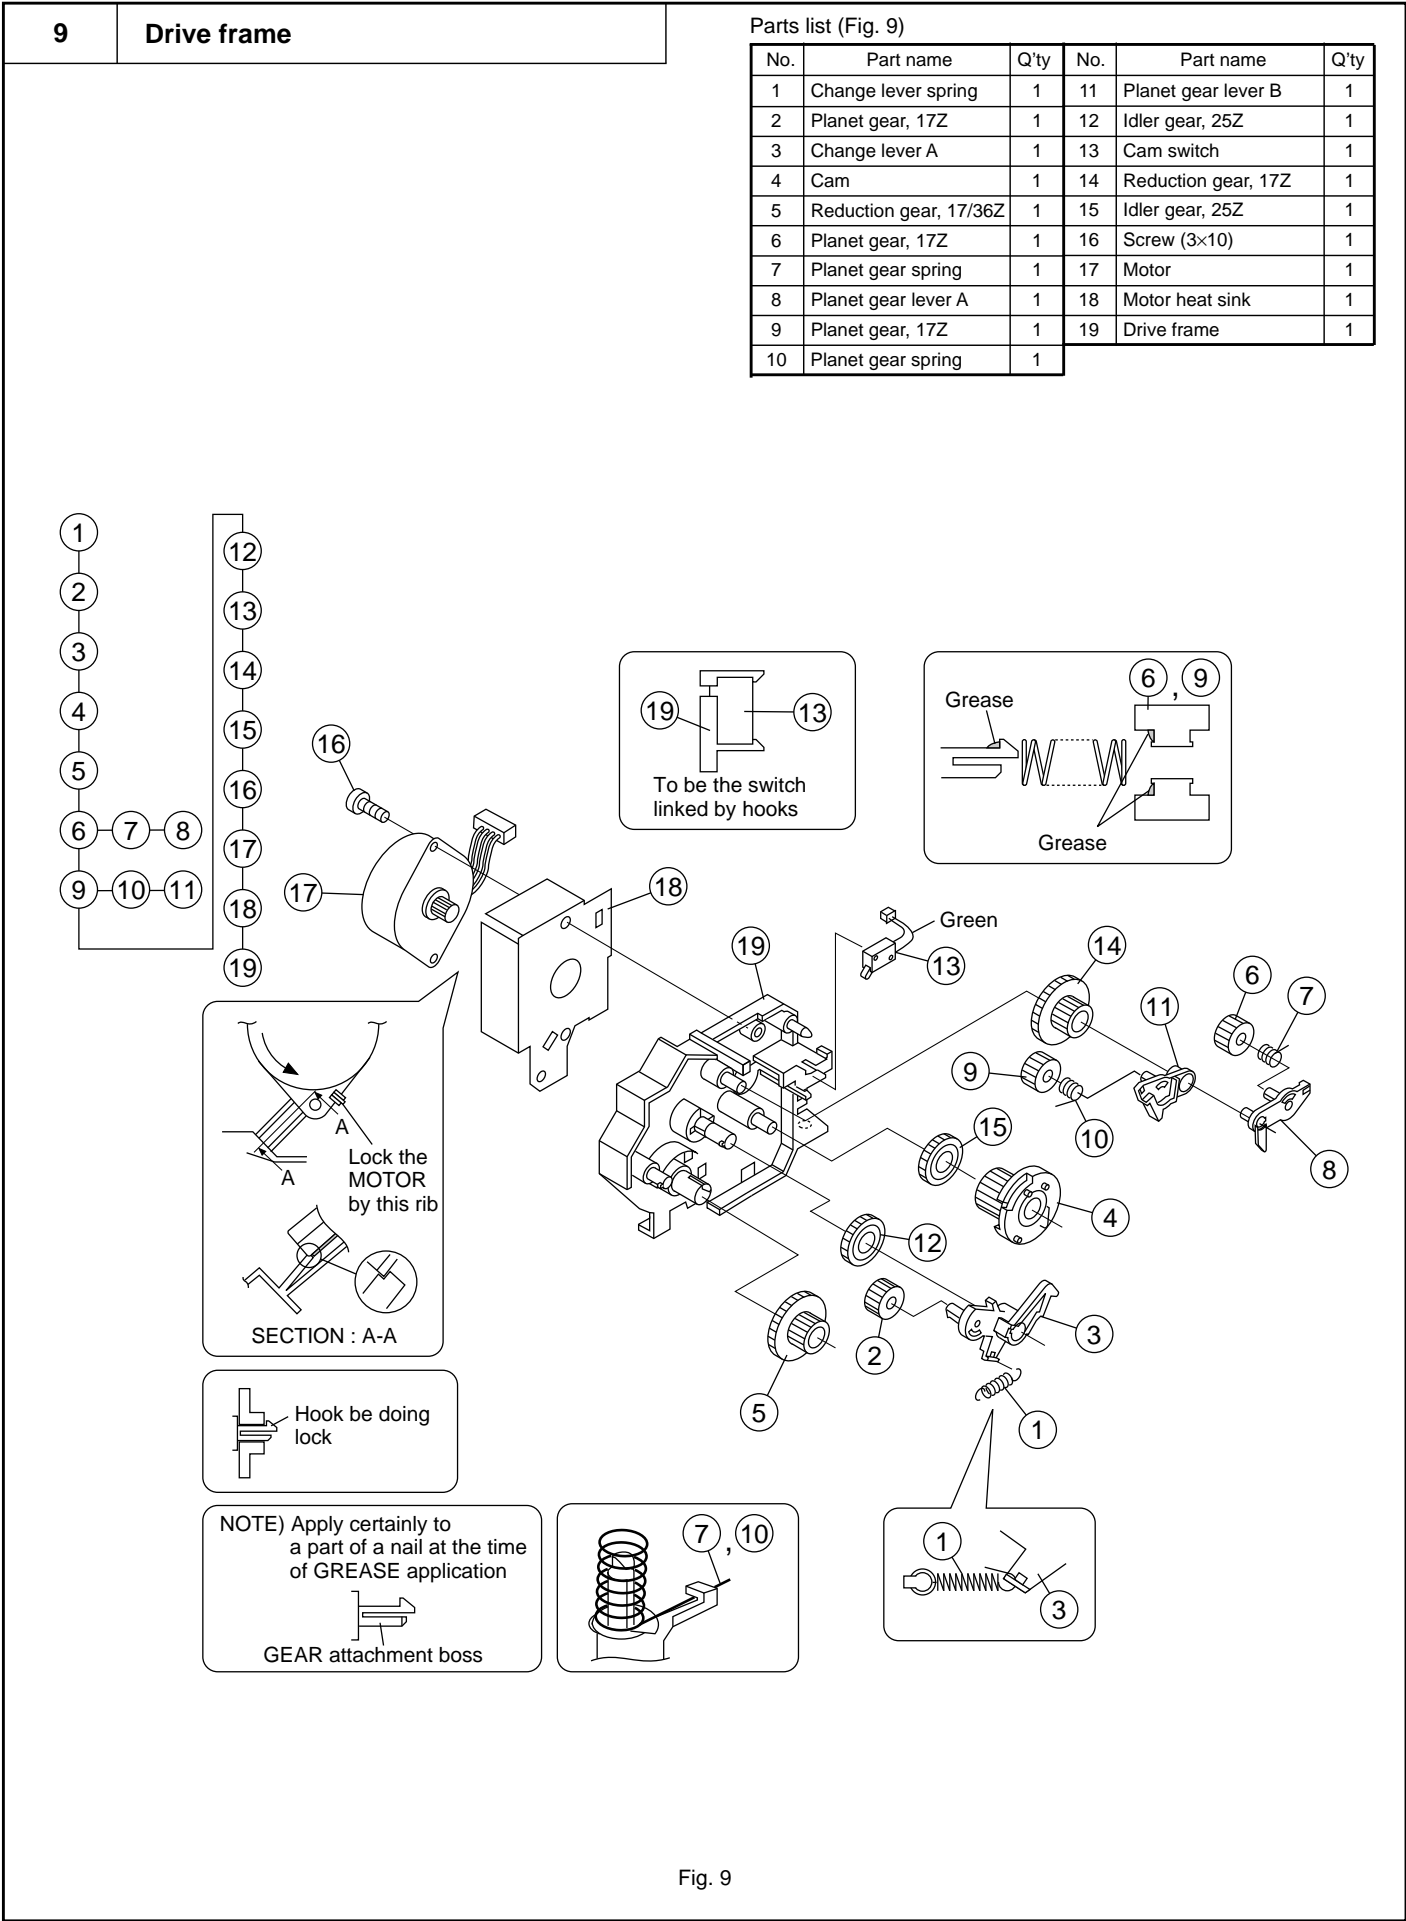

## 10

## Wire treatment

Parts list (Fig. 10)

No.	Part name	Q'ty
1	Band	5
2	Screw (3×6)	2
3	Screw (4×6)	1
4	UL tape	1
5	Core (F2064)	1
6	Core (F2063)	1
7	Band (100mm)	1

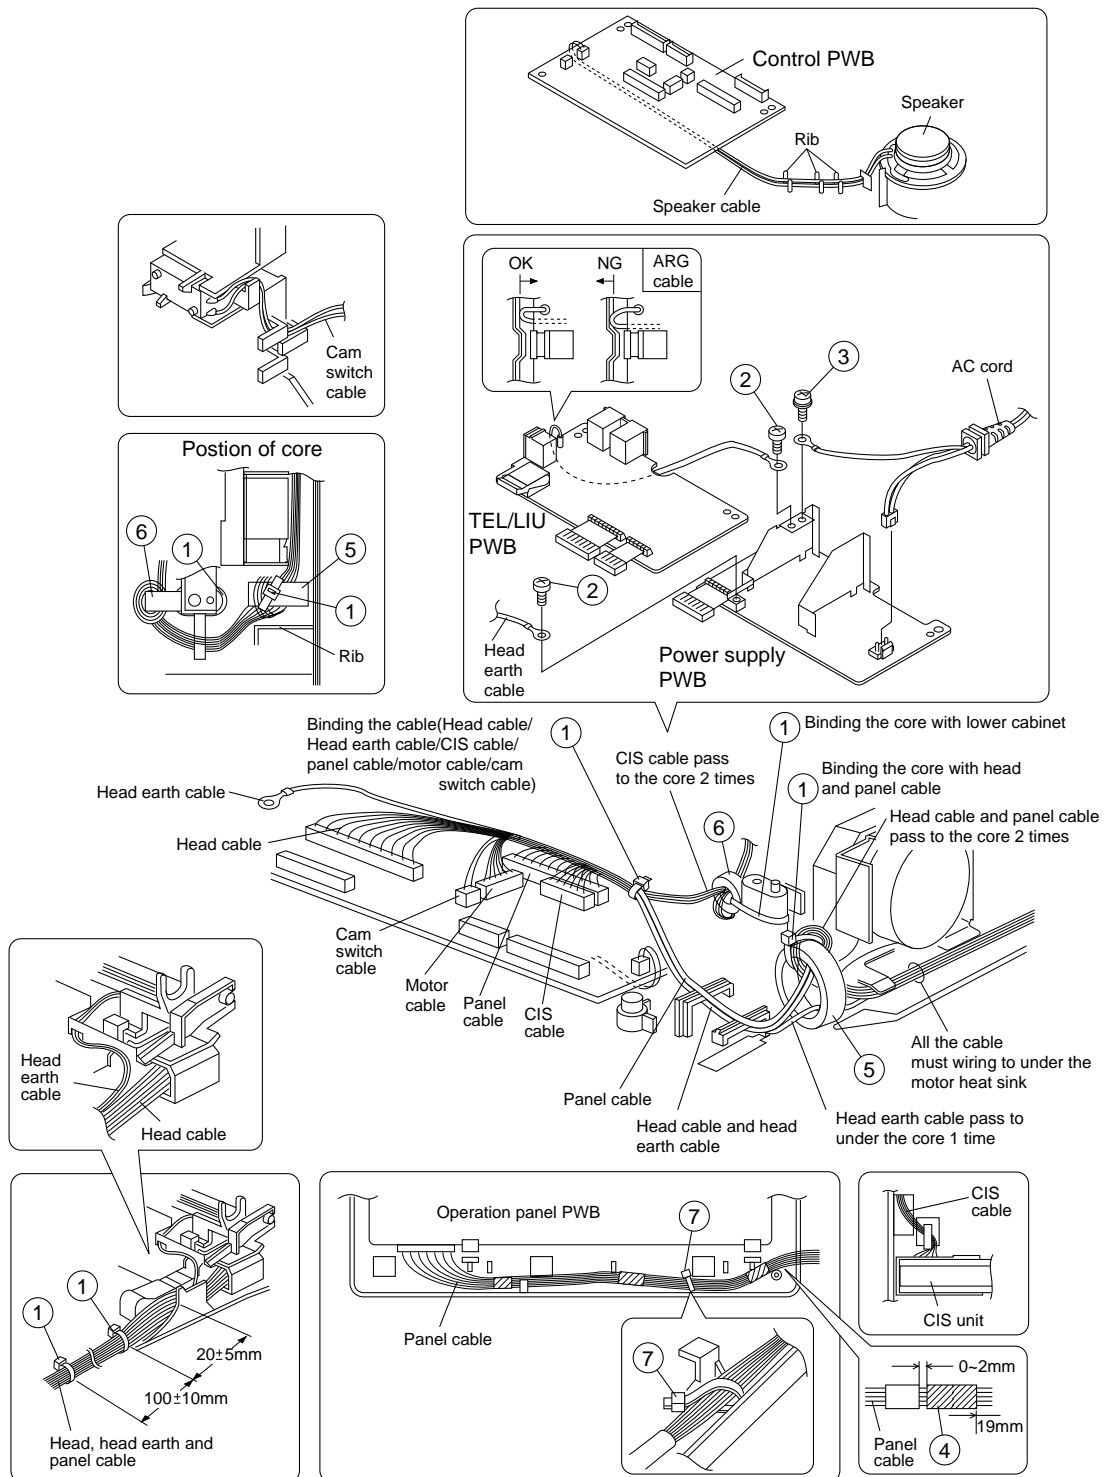



Fig. 10

MEMO




# CHAPTER 4. DIAGRAMS


[1] Block diagram

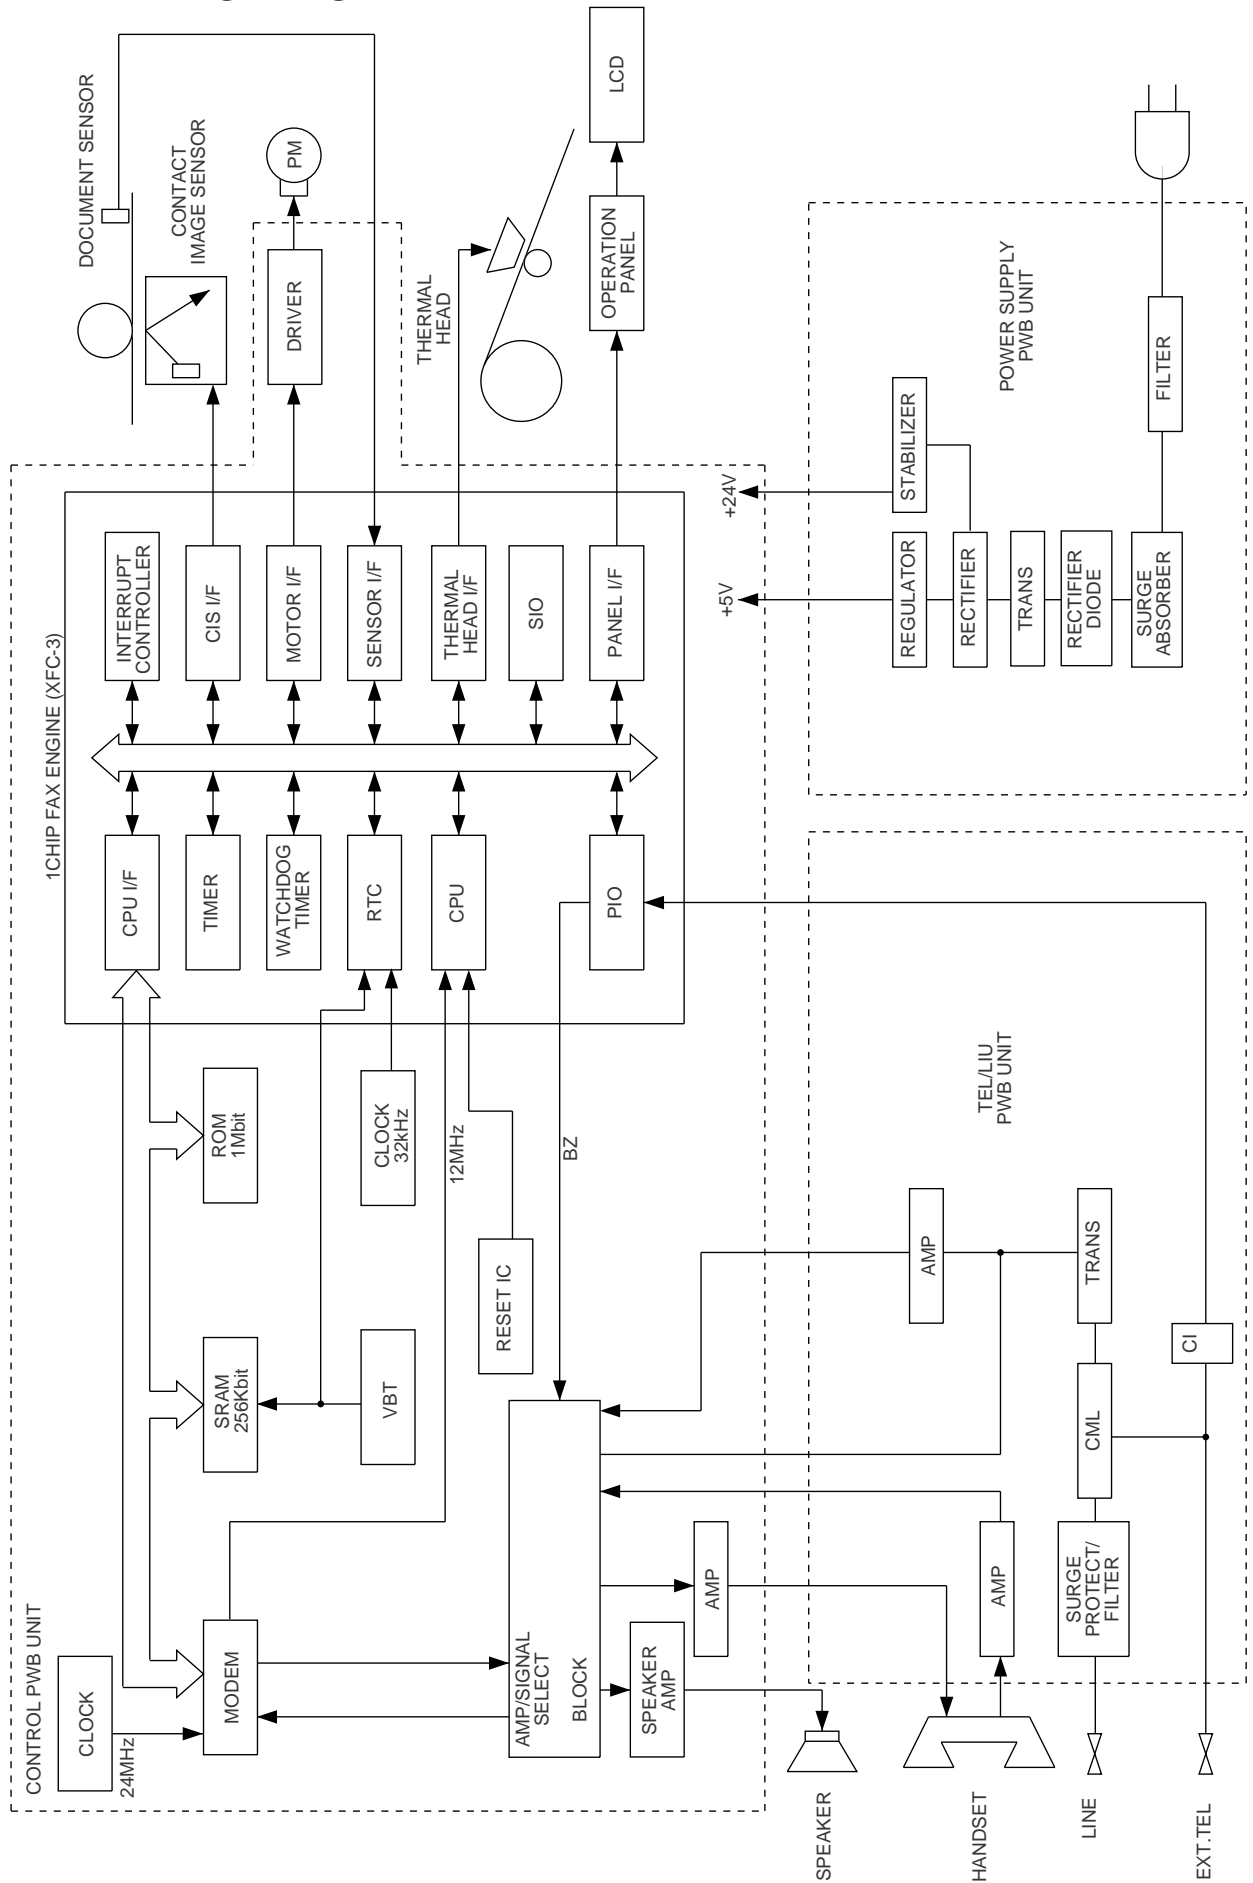

[2] Wiring diagram

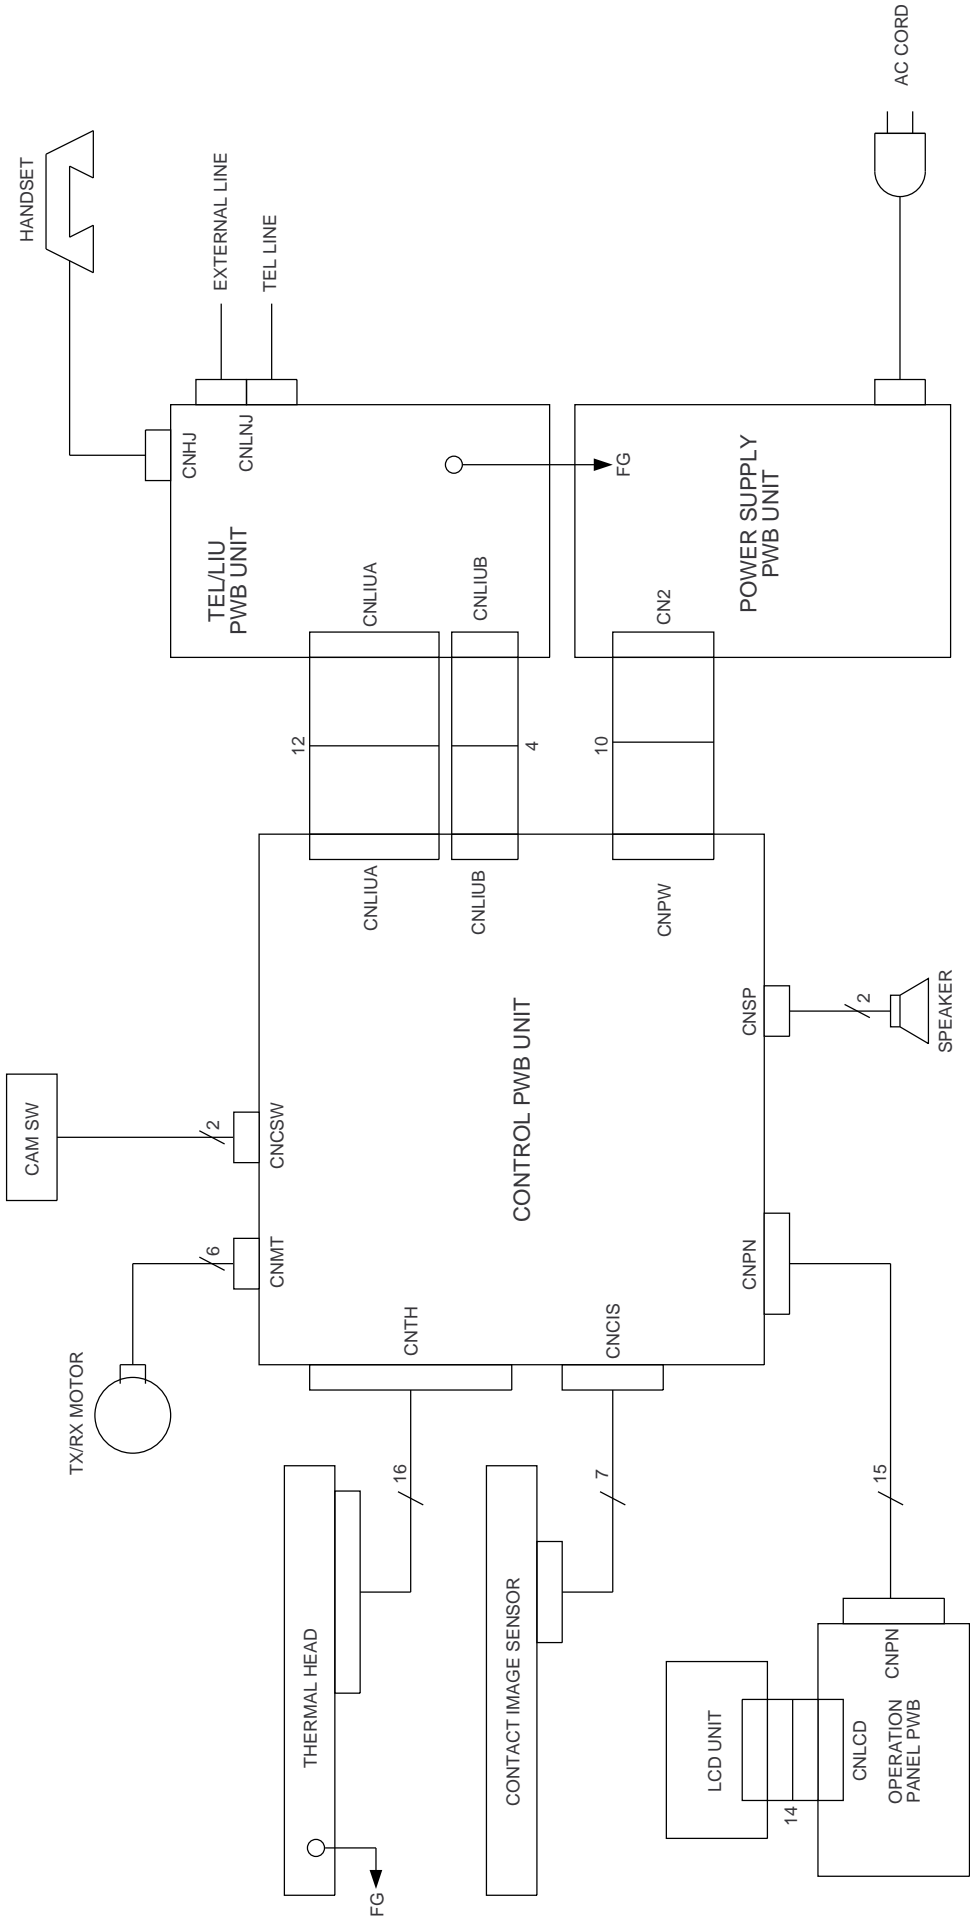

[3] Point- to-point diagram

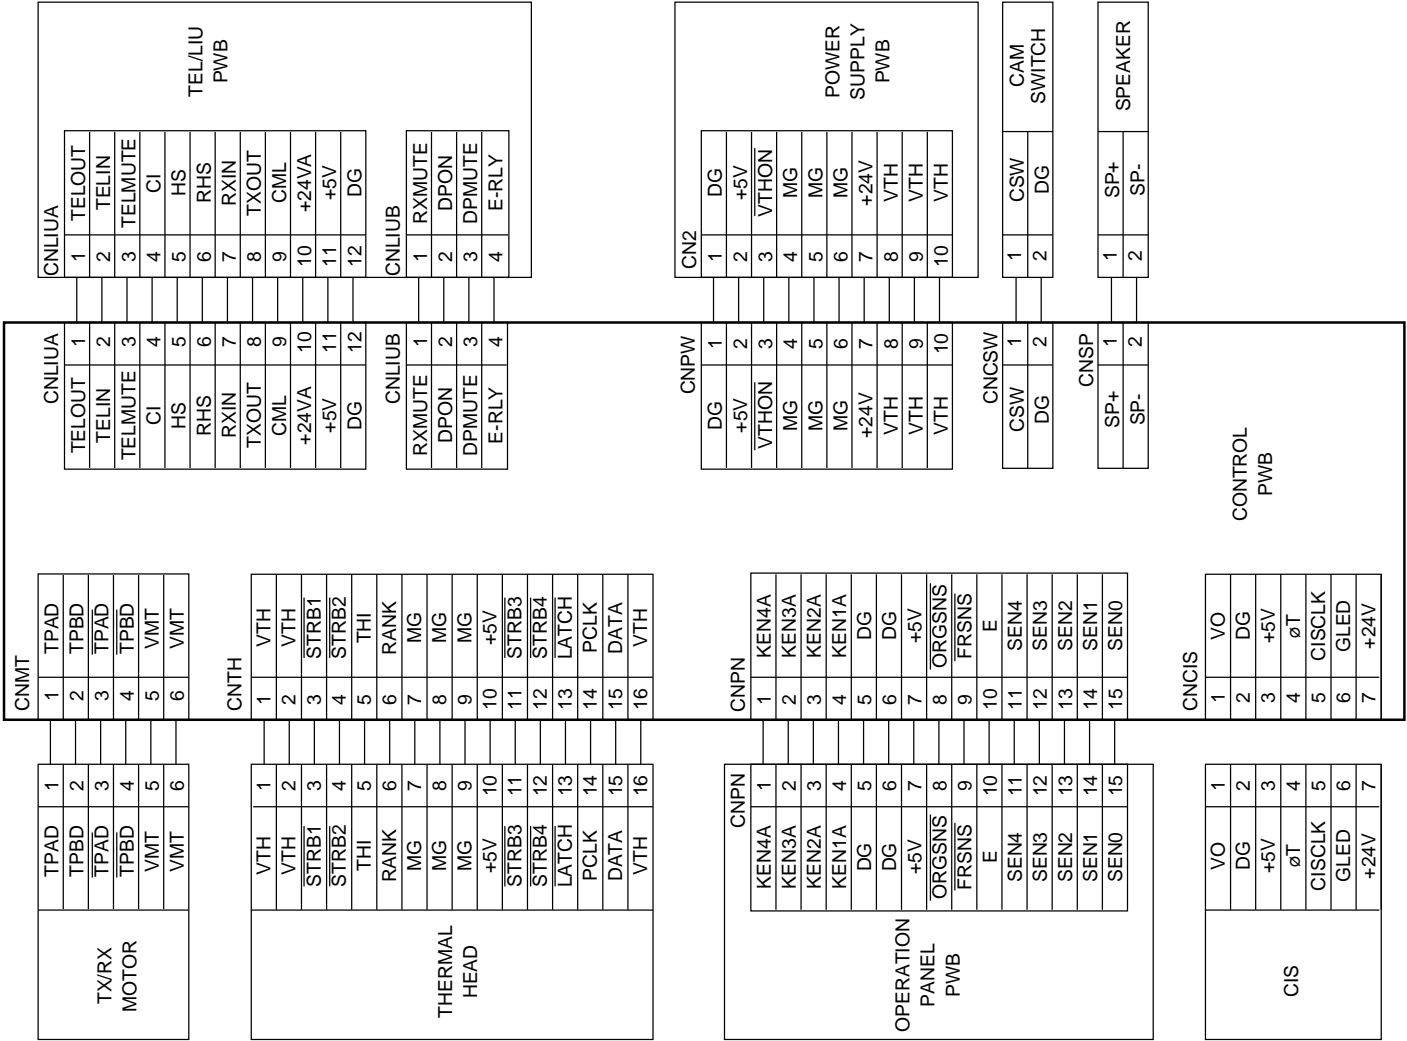

## CHAPTER 5. CIRCUIT DESCRIPTION

### [1] Circuit description

#### 1. General description

The compact design of the control PWB is obtained by using ROCKWELL fax engine in the main control section and high density printing of surface mounting parts. Each PWB is independent according to its function as shown in Fig. 1.

#### 2. PWB configuration

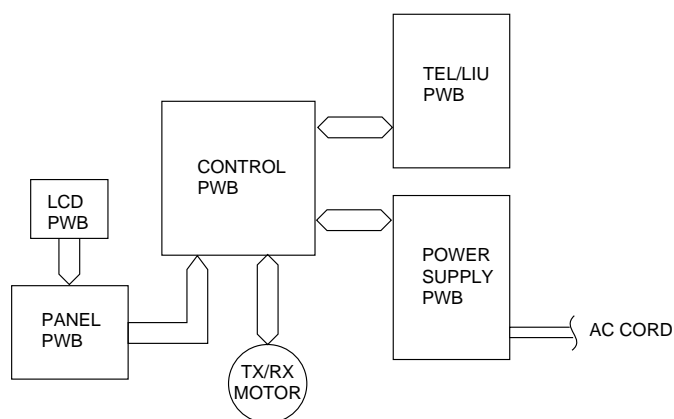


Fig. 1

##### 1) Control PWB

The control PWB controls peripheral PWBs, mechanical parts, transmission, and performs overall control of the unit. This machine employs a 1-chip modem (R96DFXL-CID) which is installed on the control PWB.

##### 2) TEL/LIU PWB

This PWB controls connection of the telephone line to the unit.

##### 3) Power supply PWB

This PWB provides voltages of +5V and +24V to the other PWBs.

##### 4) Panel PWB

The panel PWB allows input of the operation keys.

##### 5) LCD PWB

This PWB controls the LCD display.

### 3. Operational description

Operational descriptions are given below:

- Transmission operation

When a document is loaded in standby mode, the state of the document sensor is sensed via the 1 chip fax engine (XFC3). If the sensor signal was on, the motor is started to bring the document into the standby position. With depression of the START key in the off-hook state, transmission takes place.

Then, the procedure is sent out from the modem and the motor is rotated to move the document down to the scan line. In the scan processor, the signal scanned by the CIS is sent to the internal image processor and the AD converter to convert the analog signal into binary data. This binary data is transferred from the scan processor to the image buffer within the RAM and encoded and stored in the transmit buffer of the RAM. The data is then converted from parallel to serial form by the modem where the serial data is modulated and sent onto the line.

- Receive operation

There are two ways of starting reception, manual and automatic. Depression of the START key in the off-hook mode in the case of manual receive mode, or CI signal detection by the LIU in the automatic receive mode.

First, the XFC3 controls the procedure signals from the modem to be ready to receive data. When the program goes into phase C, the serial data from the modem is converted to parallel form in the modem interface of the 1 chip fax engine (XFC3) which is stored in the receive buffer of the RAM. The data in the receive buffer is decoded software-wise to reproduce it as binary image data in the image buffer. The data is DMA transferred to the recording processor within the XFC3 which is then converted from parallel to serial form to be sent to the thermal head. The data is printed line by line by the XFC3 which is assigned to control the motor rotation and strobe signal.

- Copy operation

To make a copy on this facsimile, the COPY key is pressed when the machine is in stand-by with a document on the document table and the telephone set is in the on-hook state.

First, depression of the COPY key advances the document to the scan line. Similar to the transmitting operation, the image signal from the CIS is converted to a binary signal in the DMA mode via the 1 chip fax engine (XFC3) which is then sent to the image buffer of the RAM. Next, the data is transferred to the recording processor in the DMA mode to send the image data to the thermal head which is printed line by line. The copying takes place as the operation is repeated.

## [2] Circuit description of control PWB

### 1. General description

Fig. 2 shows the functional blocks of the control PWB, which is composed of 4 blocks.

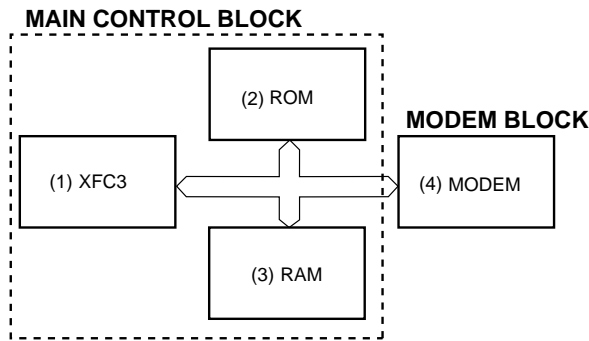


Fig. 2 Control PWB functional block diagram

### 2. Description of each block

#### (1) Main control block

The main control block is composed of ROCKWELL 1 chip fax engine (XFC3), ROM (128KByte), RAM (32KByte) and Modem (R96DFXL-CID). Devices are connected to the bus to control the whole unit.

##### 1) XFC3 (IC2) : pin-144 QFP (XFC3)

##### 2) R96DFXL-CID (IC4) : pin-100 QFP (MODEM)

The FAXENGINE Integrated Facsimile Controllers.

XFC3, contains an internal 8 bit microprocessor with an external 2 Mbyte address space and dedicated circuitry optimized for facsimile image processing and facsimile machine control and monitoring.

##### 3) 27C01012 (IC7): pin-32 DIP (ROM)

EPROM of 1Mbit equipped with software for the main CPU.

##### 3) W24257S-70LL (IC5): pin-28 SOP (RAM)

Line memory for the main CPU system RAM area and coding/decoding process. Used as the transmission buffer.

Memory of recorded data such as daily report and auto dials. When the power is turned off, this memory is backed up by the lithium battery.

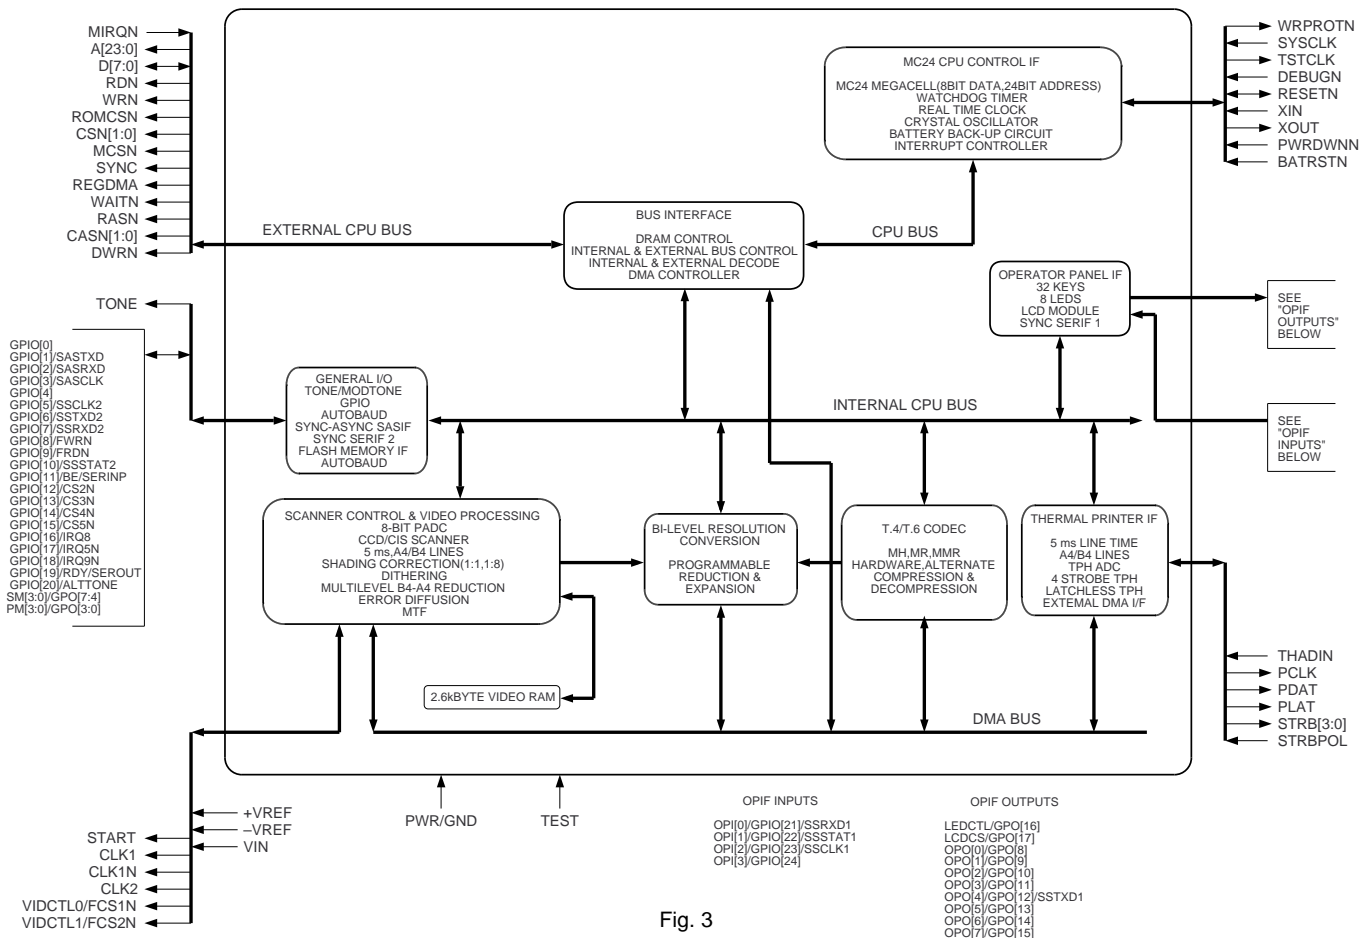


Fig. 3

**XFC3 (IC2) Terminal descriptions**

Pin Name	Pin No.	I/O	Input Type	Output Type	Pin Description (Note: Active low signals have an "n" pin name ending.)
<b>CPU Control Interface</b>					
MIRQn	135	I	HU	–	Modem interrupt, active low. (Hysteresis In, Internal Pullup.)
SYSCLK	133	I	H	–	System clock. (Hysteresis In.)
TSTCLK	130	O	–	123XT	Test clock.
<b>Bus Control Interface</b>					
A[23:0]	[1:6][8:13] [15:20][22:27]	O	TU	123XT	Address bus (24-bit).
D[7:0]	[136:139] [141:144]	I/O	TU	123XT	Data bus (8-bit).
RDn	128	O	–	123XT	Read strobe.
WRn	127	O	–	123XT	Write strobe.
ROMCSn	120	O	–	123XT	ROM chip select.
CS1n	122	O	–	123XT	I/O chip select.
CS0n	57	O	–	123XT	SRAM chip select. (Battery powered.)
MCSn	121	O	–	123XT	Modem chip select.
SYNC	126	O	–	123XT	Indicates CPU op code fetch cycle (active high).
REGDMA	124	O	–	123XT	Indicates REGSEL cycle and DMA cycle.
WAITn	125	O	–	123XT	Indicates current TSTCLK cycle is a wait state or a halt state.
RASn	113	O	–	123XT	DRAM row address select. (Battery powered.)
CAS[1:0]n	[111:112]	O	–	123XT	DRAM column address select. (Battery powered.)
DWRn	109	O	–	123XT	DRAM write. (Battery powered.)
<b>Prime Power Reset Logic and Test</b>					
DEBUGn	129	I	HU	–	External non-maskable input (NMI).
RESETn	131	I/O	HU	2XO	XFC3 Reset.
TEST	58	I	C	–	Sets Test mode (Battery powered).
<b>Battery Power Control and Reset Logic</b>					
XIN	59	I	OSC	–	Crystal oscillator input pin.
XOUT	60	O	–	OSC	Crystal oscillator output pin.
PWRDWNn	62	I	H	–	Used by external system to indicate loss of power to XFC3. (Results in NMI)
BATRSTn	61	I	H	–	Battery power reset input.
WRPROTn	110	O	–	1XC	(Battery powered.) Write protect during loss of VDD power.
<b>Scanner Interface</b>					
START	101	O	–	2XS	Scanner shift gate control.
CLK1	100	O	–	2XS	Scanner clock.
CLK1n	99	O	–	2XS	Scanner clock-inverted.
CLK2	98	O	–	2XS	Scanner reset gate control (or clock for CIS scanner).
FCS1n/VIDCTL0	96	O	–	2XT	Flash memory chip select or Video Control signal.
FCS2n/VIDCTL1	97	O	–	2XT	Flash memory chip select or Video Control signal.
<b>Printer Interface</b>					
PCLK	29	O	–	3XC	Thermal Print Head (TPH) clock, or external DMAACK.
PDAT	30	O	–	2XP	Serial printing data (to TPH).
PLAT	31	O	–	3XP	TPH data latch.
STRB[3:0]	[33:36]	O	–	1XP	Strobe signals for the TPH.
STRBPOL	37	I	C	–	Sets strobe polarity, active high/low.
<b>Operator Panel Interface</b>					
OPO[0]/GPO[8]/ SMPWRCTRL	47	O	–	2XL	Keyboard/LED strobe [0] or GPO[8] or Scan Motor Power Control
OPO[1]/GPO[9]/ PMPWRCTRL	46	O	–	2XL	Keyboard/LED strobe [1] or GPO[9] or Print Motor Power Control
OPO[2]/GPO[10]/ RINGER	44	O	–	2XCT	Keyboard/LED strobe [2] or GPO[10] or RINGER
OPO[3]/GPO[11]	43	O	–	2XL	Keyboard/LED strobe [3] or GPO[11]
OPO[4]/GPO[12]/ SSTXD1	42	O	–	2XL	Keyboard/LED strobe [4] or GPO[12] or SSTXD1 (for SSIF1)
OPO[5]/GPO[13]	40	O	–	2XL	Keyboard/LED strobe [5] or GPO[13]
OPO[6]/GPO[14]	39	O	–	2XL	Keyboard/LED strobe [6] or GPO[14]
OPO[7]/GPO[15]	38	O	–	2XL	Keyboard/LED strobe [7] or GPO[15]
OPI[0]/GPIO[21]/ SSRXD1	52	I/O	HU	2XC	(Pullup, Hysteresis In) Keyboard return [0] or GPIO[21] or SSRXD1 (for SSIF1)
OPI[1]/GPIO[22]/ SSSTAT1	51	I/O	HU	2XC	(Pullup, Hysteresis In) Keyboard return [1] or GPIO[22] or SSSTAT1 (for SSIF1)
OPI[2]/GPIO[23]/ SSCLK1	50	I/O	HU	2XC	(Pullup, Hysteresis In) Keyboard return [2] or GPIO[23] or SSCLK1 (for SSIF1)

**XFC3 (IC2) Terminal descriptions**

Pin Name	Pin No.	I/O	Input Type	Output Type	Pin Description
Operator Panel Interface					
OPI[3]/GPIO[24]	49	I/O	HU	2XC	(Pullup, Hysteresis In) Keyboard return [3] or GPIO[24]
LEDCTL	55	O	–	4XC	Indicates outputs OPO[7:0] are for LEDs.
LCDCS	54	O	–	1XC	LCD chip select.
General Purpose I/O					
GPIO[0]	94	I/O	H	2XC	(Hysteresis In) GPIO[0].
GPIO[1]/SASTXD	93	I/O	H	2XC	(Hysteresis In) GPIO[1] or SASTXD (for SERIF).
GPIO[2]/SASRXD	92	I/O	H	2XC	(Hysteresis In) GPIO[2] or SASRXD (for SERIF).
GPIO[3]/SASCLK	91	I/O	H	2XC	(Hysteresis In) GPIO[3] or SASCLK (for SERIF).
GPIO[4]/CPCIN	90	I/O	H	2XC	(Hysteresis In) GPIO[4] or Calling Party Control Input.
GPIO[5]/SSCLK2	89	I/O	H	2XC	(Hysteresis In) GPIO[5] or SSCLK2 (for SSIF2).
GPIO[6]/SSTXD2	87	I/O	H	2XC	(Hysteresis In) GPIO[6] or SSTXD2 (for SSIF2).
GPIO[7]/SSRXD2	86	I/O	H	2XC	(Hysteresis In) GPIO[7] or SSRXD2 (for SSIF2).
GPIO[8]/FWRn	85	I/O	H	2XC	(Hysteresis In) GPIO[8] or flash write enable signal for NAND-type flash memory.
GPIO[9]/FRDn	84	I/O	H	2XC	(Hysteresis In) GPIO[9] or flash read enable signal for NAND-type flash memory.
GPIO[10]/SSSTAT2	83	I/O	H	2XC	(Hysteresis In) GPIO[10] or SSSTAT2 (for SSIF2).
GPIO[11]/BE/SERINP	82	I/O	H	1XC	(Hysteresis In) GPIO[11] or bus enable or serial port data input for autobaud detection.
GPIO[12]/CS[2]n	80	I/O	H	2XC	(Hysteresis In) GPIO[12] or I/O chip select [2].
GPIO[13]/CS[3]n	79	I/O	H	2XC	(Hysteresis In) GPIO[13] or I/O chip select [3].
GPIO[14]/CS[4]n	78	I/O	H	2XC	(Hysteresis In) GPIO[14] or I/O chip select [4].
GPIO[15]/CS[5]n	77	I/O	H	2XC	(Hysteresis In) GPIO[15] or I/O chip select [5].
GPIO[16]/IRQ[8]	76	I/O	H	1XC	(Hysteresis In) GPIO[16] or external interrupt 8.
GPIO[17]/IRQ[5]n	75	I/O	H	1XC	(Hysteresis In) GPIO[17] or external interrupt 5.
GPIO[18]/IRQ[9]n	74	I/O	H	1XC	(Hysteresis In) GPIO[18] or external interrupt 9.
GPIO[19]/RDY/SEROUT	73	I/O	H	1XC	(Hysteresis In) GPIO[19] or ready signal or Serial port data output for autobaud detection.
GPIO[20]/ALTTONE	107	I/O	H	1XC	(Hysteresis In) GPIO[20] or ALTTONE.
Miscellaneous					
SM[3:0]/GPO[7:4]	[103:106]	O	–	1XC	Programmable: scan motor control pins or GPO pins.
PM[3:0]/GPO[3:0]	[115:118]	O	–	1XC	Programmable: print motor control pins or GPO pins.
TONE	119	O	–	1XC	Tone output signal.
Power, Reference Voltages, Ground					
-Vref/CLREF	66	I	-VR	–	Negative Reference Voltage for Video A/D or Reference Voltage for the Clamp Circuit.
ADXG	68	I	VXG	–	A/D Internal GND. (NOTE: This pin requires an external 0.22μF decoupling capacitor to ADGA.)
ADGA	69		VADG		A/D Analog Ground
ADVA	70		VADV		A/D Analog Power
ADGD	72		VADG		A/D Digital Ground
+Vref	71	I	+VR		Positive Reference Voltage for Video A/D.
VIN	67	I	VA	–	Analog Video A/D input.
THADI	65	I	TA	–	Analog Thermal A/D input.
Power and Ground					
VSS(12)	7,21,28,45,53,56,64,88,95,108,132,134				Digital Ground
VDD(8)	14,32,41,48,81,102,123,140				Digital Power
VBAT	63				Battery Power
VDRAM	114				DRAM Battery Power

(2) Panel control block

The following controls are performed by the XFC3.

- Operation panel key scanning
- Operation panel LCD display

(3) Mechanism/recording control block

- Recording control block diagram (1)

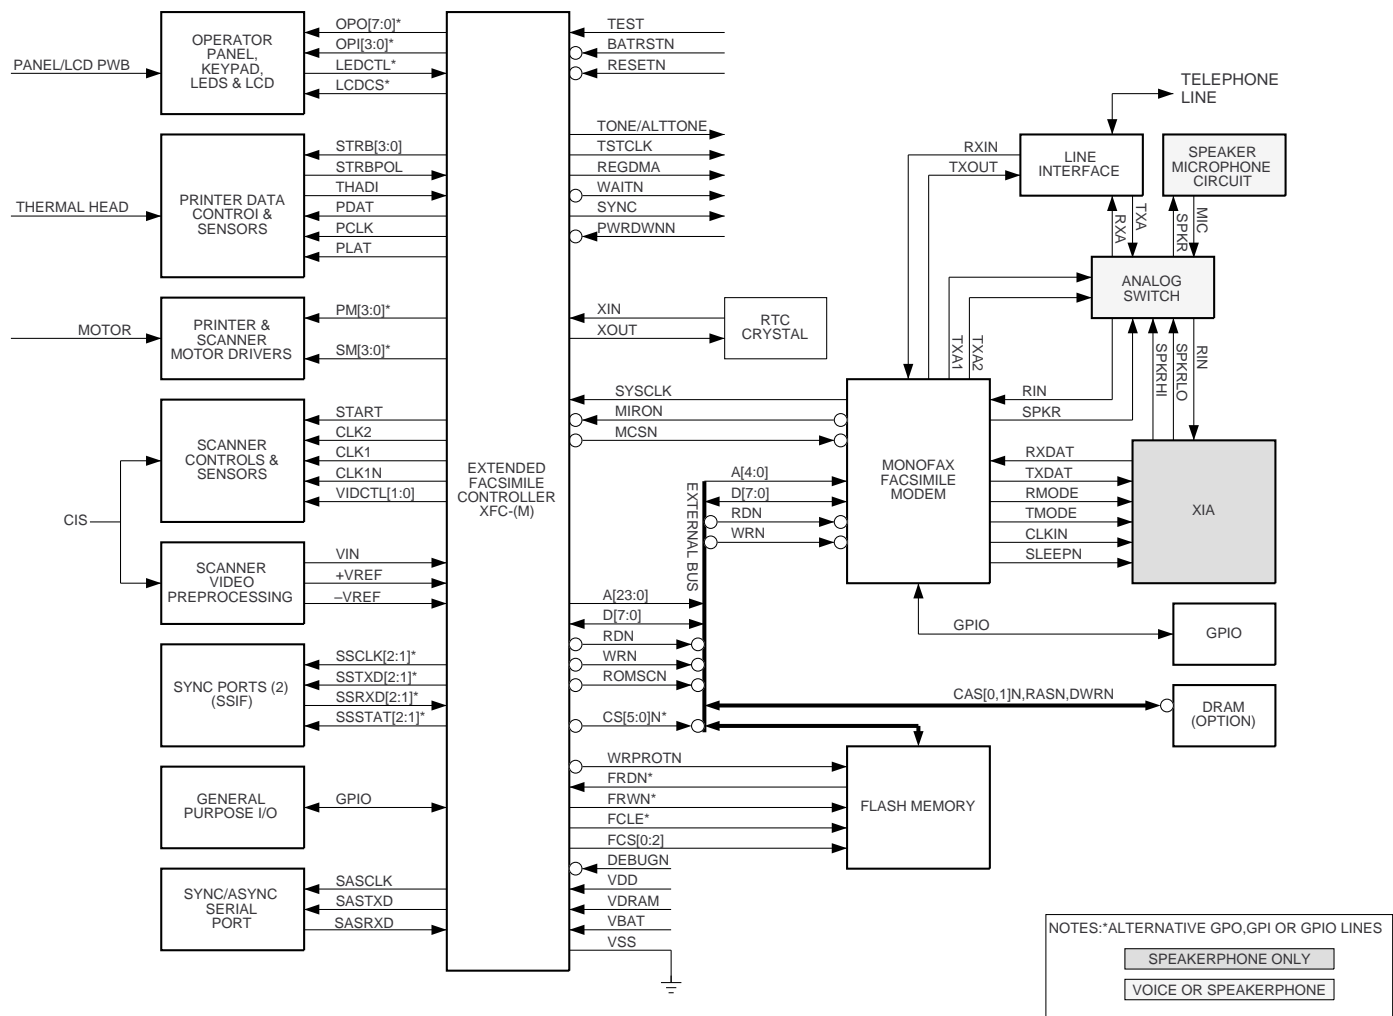


Fig. 4



## (4) Modem (R96DFXL-CID) block

### INTRODUCTION

The Rockwell R96DFXL-CID MONOFAX modem is a synchronous 9600 bits per second (bps) half-duplex modem with error detection and DTMF reception. It has low power consumption and requires only a single +5V DC power supply. The modem is housed in a single VLSI device package.

The modem can operate over the public switched telephone network (PSTN) through line terminations provided by a data access arrangement (DAA).

The R96DFXL-CID is designed for use in Group 3 facsimile machines. The modem satisfies the requirements specified in CCITT recommendations V.29, V.27 ter, V.21 Channel 2 and T.4, and meets the binary signaling requirements of T.30.

The modem can operate at 9600, 7200, 4800, 2400, or 300 bps, and also includes the V.27 ter short training sequence option.

The modem can also perform HDLC framing according to T.30 at 9600, 7200, 4800, 2400, or 300 bps.

The modem features a programmable DTMF receiver and three programmable tone detectors which operate concurrently with the V.21 channel 2 receiver.

The voice mode allows the host computer to efficiently transmit and receive audio signals and messages.

The modem is available in either a 100-pin plastic quad flat pack (PQFP) or a 64-pin quad in-line package (QUIP).

General purpose input/output (GPIO) pins are available for host as signment in the 100-pin PQFP.

The modem's small size, single voltage supply, and low power consumption allow the design of compact system enclosures for use in both office and home environments.

MONOFAX is a registered trademark of Rockwell International.

### FEATURES

- Group 3 facsimile transmission/reception
  - ITU-TS V.29, V.27 ter, T.30, V.21 Channel 2, T.4
  - HDLC Framing at all speeds
- V.27 ter short train
- Concurrent DTMF, FSK, and tone reception
- Voice mode transmission/reception
- Half-duplex (2-wire)
- Programmable maximum transmit level:
  - 0 dBm to –15 dBm
- Programmable transmit analog attenuation:
  - 0 dB to 14 dB in 2 dB steps
- Receive dynamic range: 0 dBm to –43 dBm
- Programmable dual tone generation
- Programmable tone detection
- Programmable turn-on and turn-off thresholds
- Programmable interface memory interrupt
- Diagnostic capability
  - Allows telephone line quality monitoring
- Equalization
  - Automatic adaptive equalizer
  - Fixed digital compromise equalizer
- DTE interface: two alternate ports
  - Selectable microprocessor bus (6500 or 8085)
  - CCITT V.24 (EIA-232-D compatible) interface
- TTL and CMOS compatible
- Low power consumption: 275 mW (typical)
- Single Package
  - 100-pin PQFP
  - 64-pin QUIP
- Single +5VDC power supply
- Software compatible with R96MFX, R96EFX, R96SHF, and R96VFX modems

**R96DFXL-CID (IC4) Hardware Interface Signals****Pin Signals – 100-Pin PQFP**

Pin No.	Signal Name	I/O Type
1	GP03	IA/OB
2	GP04	IA/OB
3	GP05	IA/OB
4	GP06	IA/OB
5	GP07	IA/OB
6	0VD2	GND
7	0VD2	GND
8	D7	IA/OB
9	D6	IA/OB
10	D5	IA/OB
11	D4	IA/OB
12	D3	IA/OB
13	D2	IA/OB
14	D1	IA/OB
15	D0	IA/OB
16	0VD2	GND
17	0VA	GND
18	RAMPIN	R
19	NC	
20	NC	
21	0VA	GND
22	+5VD2	PWR
23	0VD1	GND
24	SWGAINI	R
25	ECLKIN1	R
26	SYNCIN1	R
27	NC	
28	NC	
29	NC	
30	0VA	GND
31	NC	
32	NC	
33	NC	
34	DAIN	R
35	ADOUT	R
36	BYPASS	IC
37	RCVI	R
38	TXLOSS3	IC
39	TXLOSS2	IC
40	TXLOSS1	IC
41	NC	
42	NC	
43	0VA	GND
44	TXOUT	AA
45	RXIN	AB
46	+5VA	PWR
47	0VA	GND
48	AGD	R
49	AOUT	R
50	0VD1	GND
51	NC	
52	IRQ	OC
53	WRITE-R/W	IA
54	CS	IA
55	READ-φ2	IA
56	RS4	IA
57	RS3	IA
58	RS2	IA
59	RS1	IA

Pin No.	Signal Name	I/O Type
60	RS0	IA
61	GP13	IA/OB
62	NC	
63	GP11	IA/OB
64	RTS	IA
65	EN85	R
66	0VD2	GND
67	POR1	ID
68	XTLI	R
69	XTLO	R
70	XCLK	OD
71	YCLK	OD
72	+5VD1	PWR
73	DCLK1	R
74	SYNCIN2	R
75	GP16	IA/OB
76	GP17	IA/OB
77	0VD2	GND
78	CTS	OA
79	TXD	IA
80	0VD2	GND
81	0VD2	GND
82	DCLK	OA
83	EYESYNC	OA
84	EYECLKX	OA
85	EYECLK	OA
86	EYEX	OA
87	ADIN	R
88	DAOUT	R
89	0VD2	GND
90	EYEX	OA
91	GP21	IA/OB
92	0VD2	GND
93	GP20	IA/OB
94	GP19	IA/OB
95	RXD	OA
96	RLSD	OA
97	0VD2	GND
98	RCVO	R
99	SWGAINO	R
100	GP02	IA/OB

**Notes:**  
1. NC = No connection; leave pin disconnected (open).  
2. I/O Type: = Digital signals: see Table 9;  
Analog signals: see Table 10.  
3. R = Required modem inter-connection; no connection to host equipment.

### [3] Circuit description of TEL/LIU PWB

#### (1) TEL/LIU block operational description

##### 1) Block diagram

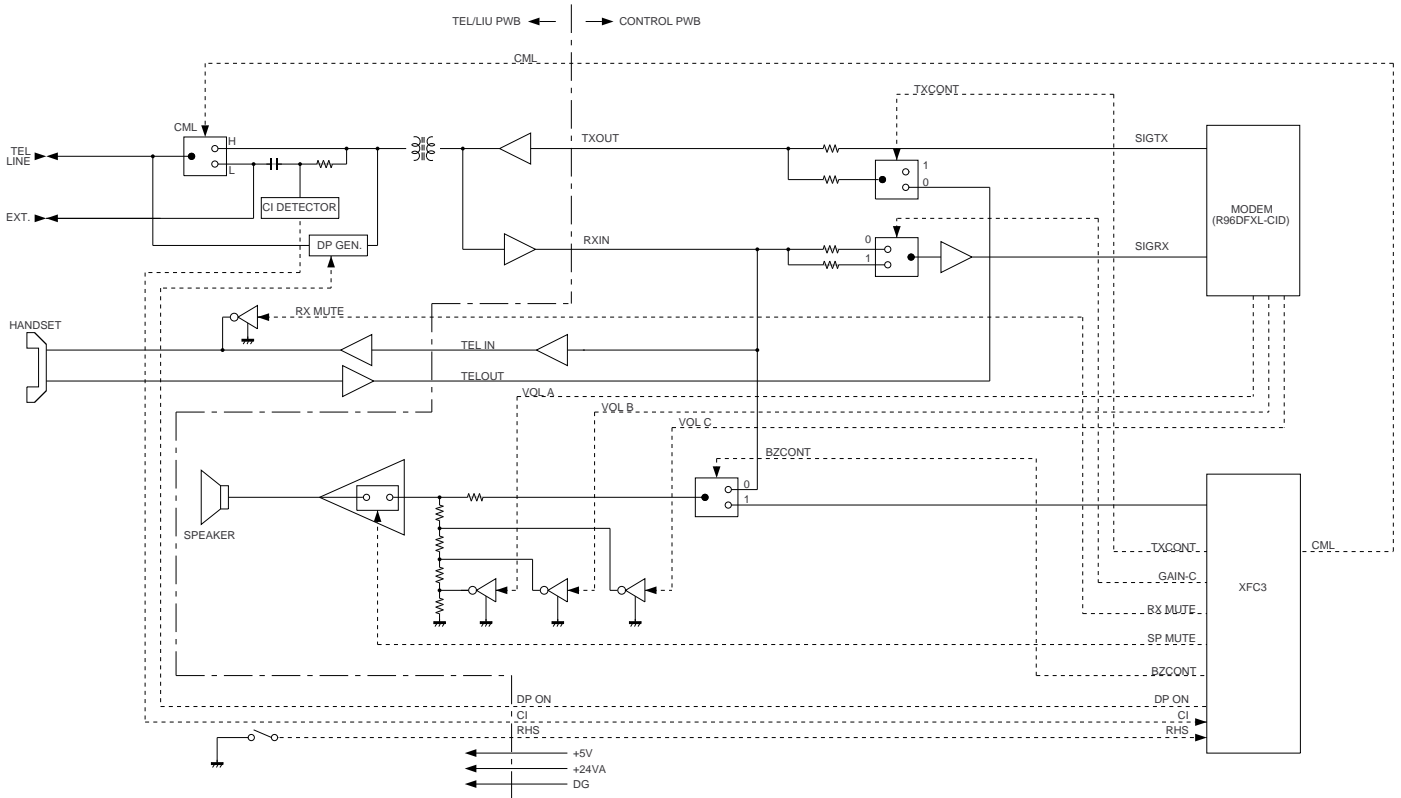


Fig. 5

#### 2) Circuit description

The TEL/LIU PWB is composed of the following 9 blocks.

1. Surge protection circuit
2. Noise filter
3. Dial pulse generation circuit
4. CML relay
5. Matching transformer
6. Hybrid circuit
7. Signal selection
8. CI detection circuit
9. Power supply and bias circuit

#### 3) Block description

##### 1. Surge Protection circuit

This circuit protects the circuit from the surge voltage occurring on the telephone line.

- The AR1, AR2 protects the circuit from the 425V or higher line surge voltages.

## 2. Noise filter

The noise filter comprises the RF choke coil, L4A, L4B.

## 3. Dial pulse generation circuit

The pulse dial generation circuit comprises the photo-coupler PC2, PC3, polarity guard REC1, and resistor R1.

The photo-coupler PC3 shunts the line current using the DP signal before transmitting the dial signal, then turns off the CML relay.

After the pulse dial signal is transmitted by turning on/off the DP signal, the CML relay is turned on again.

## 4. CML relay

The CML relay switches over connection to the matching transformer T1 while the FAX or built-in telephone is being used.

## 5. Matching transformer

The matching transformer performs electrical insulation from the telephone line and impedance matching for transmitting the TEL/FAX signal.

## 6. Hybrid circuit

The hybrid circuit performs 2-wire-to-4-wire conversion using the IC101 of operational amplifier, transmits the voice transmission signal to the line, and feeds back the voice signal to the voice reception circuit as the side tone.

## 7. Signal selection

The following signals are used to control the transmission line of TEL/FAX signal. For details, refer to the signal selector matrix table.

[Control signals from output port]

Signal Name	Description																														
CML (The circuit is located in the TEL/LIU PWB.)	<u>Line connecting relay and DP generating relay</u> H: Line make L: Line break																														
SP MUTE (The circuit is located in the TEL/LIU PWB.)	<u>Speaker tone mute control signal</u> H: Muting (Power down mode) L: Muting cancel (Normal operation)																														
RX MUTE	<u>Handset reception mute control signal</u> H: Muting L: Muting cancel																														
DP ON	<u>DP generating relay</u> H: DP make L: DP break																														
VOL A VOL B VOL C  (The circuit is located in the control PWB.)	<u>Speaker volume control signal</u> VRSEL1 VRSEL2 matrix <table><tr><th>VOL A</th><th>VOL B</th><th>VOL C</th><th>RING</th><th>SP.REC.</th><th>BUZZER /DTMF</th></tr><tr><td>H</td><td>L</td><td>L</td><td>High</td><td>High</td><td>—</td></tr><tr><td>L</td><td>H</td><td>L</td><td>—</td><td>Middle</td><td>—</td></tr><tr><td>L</td><td>L</td><td>H</td><td>Middle</td><td>—</td><td>—</td></tr><tr><td>L</td><td>L</td><td>L</td><td>Low</td><td>Low</td><td>Fixed</td></tr></table>	VOL A	VOL B	VOL C	RING	SP.REC.	BUZZER /DTMF	H	L	L	High	High	—	L	H	L	—	Middle	—	L	L	H	Middle	—	—	L	L	L	Low	Low	Fixed
VOL A	VOL B	VOL C	RING	SP.REC.	BUZZER /DTMF																										
H	L	L	High	High	—																										
L	H	L	—	Middle	—																										
L	L	H	Middle	—	—																										
L	L	L	Low	Low	Fixed																										
TXCONT (The circuit is located in the control PWB.)	<u>TXOUT mute signal</u> H: Signal sending, when transmitting L: During reception, transmission mute, (during standby)																														
GAIN-C (The circuit is located in the control PWB.)	<u>Reception gain switching signal</u> L: When connected to line, 1: 1 gain H: When not connected to line, HIGH gain																														
BZCONT (The circuit is located in the control PWB.)	<u>Speaker output signal switching</u> H: Buzzer signal output L: When monitoring line signal																														

[Signals for status recognition according to input signals]

Signal Name	Function
RHS	H: The handset is in the on-hook state. L: The handset is in the off-hook state.
CI	Incoming call (CI) detection signal.

[Other signals]

Signal Name	Function
TEL IN	Receiving signal from line or modem
TEL OUT	Transfer signal to line
SPOUT	Speaker output signal
TXOUT	Transmission (DTMF) analog signal output from modem
RXIN	Reception (DTMF, others) analog signal input into modem

NO	Signal Name (CNLIUA)	NO	Signal Name (CNLIUA)
1	TELOUT	7	RXIN
2	TELIN	8	TXOUT
3	TELMUTE	9	CML
4	CI	10	+24VA
5	HS	11	+5V
6	RHS	12	DG

NO	Signal Name (CNLIUB)	NO	Signal Name (CNLIUB)
1	RXMUTE	3	DPMUTE
2	DPON	4	E-RLY

### 8. CI detection circuit

The CI detection circuit detects the CI signals. A CI signal, which is provided to the photo-coupler PC6 through the C4 (0.56  $\mu$ F), R2 (10 K), and ZD3 when the ring signal is inputted from the telephone line.

### 9. Power supply and bias circuits

The voltages of +5V and +24VA are supplied from the control PWB unit.

(Example: Fax signal send)

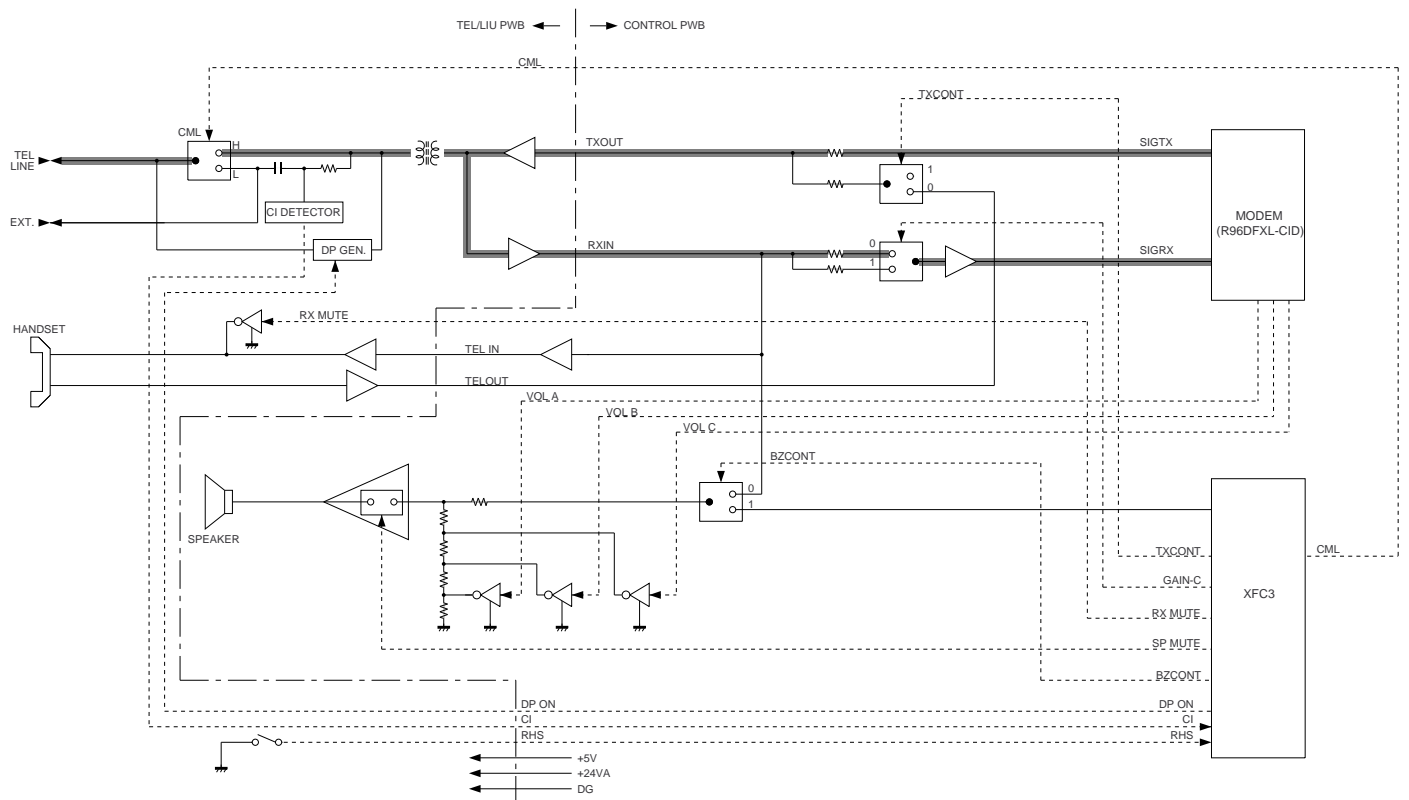


Fig. 6

[4] Circuit description of power supply PWB

1. Block diagram

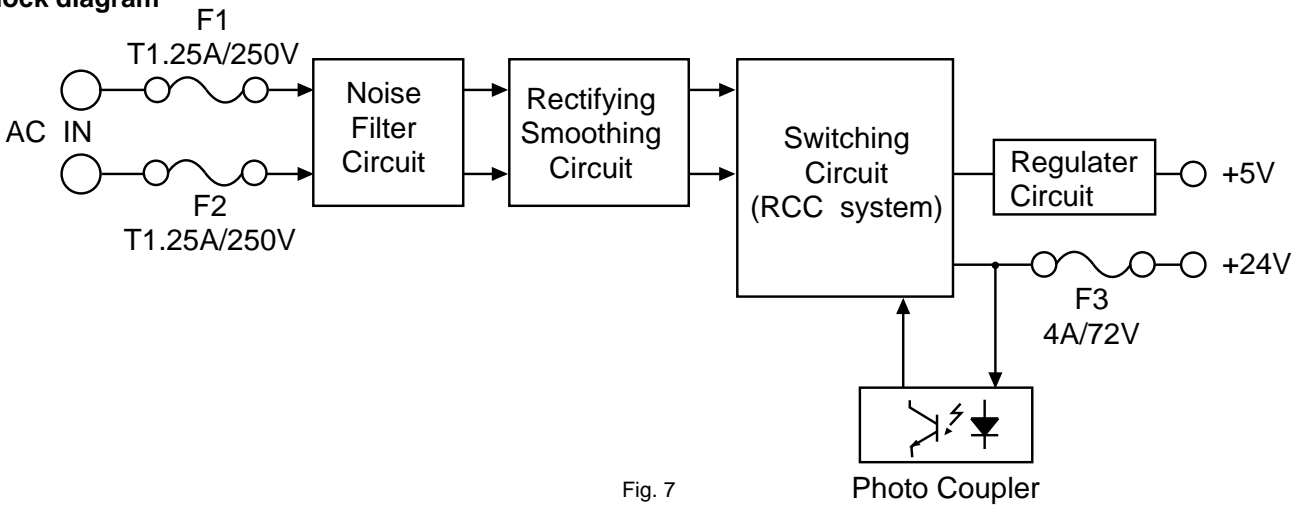


Fig. 7

2-1. Noise filter circuit

The input noise filter section is composed of L and C, which reduces normal mode noise from the AC line and common mode noise to the AC line.

2-2. Rectifying/smoothing circuit

The AC input voltage is rectified by diode D1, 2, 3, 4 and smoothed by capacitor C5 to supply DC voltage to the switching circuit section.

Power thermistor TH1 suppresses inrush current at power switch-on.

2-3. Switching circuit

This circuit employs the self excited ringing choke converter (RCC) system. In this system, the DC voltage supplied from the rectifying/smoothing section is converted into high frequency pulses by ON/OFF repetition of MOS FET Q1.

Energy is charged in the primary winding of T1 during ON period of Q1, and discharged to the secondary winding during OFF period.

The output voltage is controlled by adjusting ON period of Q1 which changes charge time of C9 through operation of photo-coupler PC1 from +24V output.

The overcurrent protection is performed by bringing Q1 to OFF state through detection of voltage increase in the auxiliary winding of T1 by ZD2 and R9.

The overvoltage protection is performed by operating the overcurrent protection circuit through destruction of zener diode ZD4 and short-circuiting of load.

2-4. +5V circuit

Each DC voltage supplied by rectifying the output of transformer T1 with diode D8 is stabilized by 3-terminal regulator IC1.

2-5. VTH circuit

VTH output is supplied through the relay RY1. Relay RY1 is operated by VTH-ON signal.

[5] Circuit description of CIS unit

1. CIS

Cis is an image sensor which puts the original paper in close contact with the full-size sensor for scanning, being a monochromatic type with the pixel number of 1,728 dots and the main scanning density of 8 dots/mm.

It is composed of sensor, rod lens, LED light source, light-conductive plate, control circuit and so on, and the reading line and focus are previously adjusted as the unit.

Due to the full-size sensor, the focus distance is so short that the set is changed from the light weight type to the compact type.

2. Waveforms

The following clock is supplied from XFC3 of the control board, and VO is output.


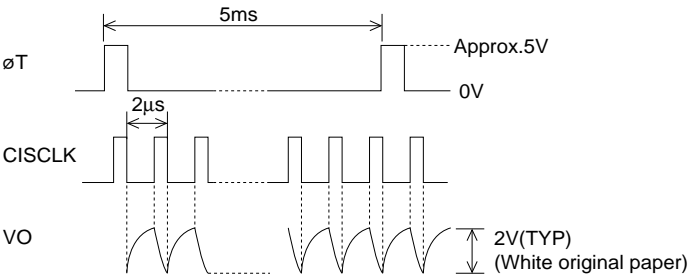


Fig. 8







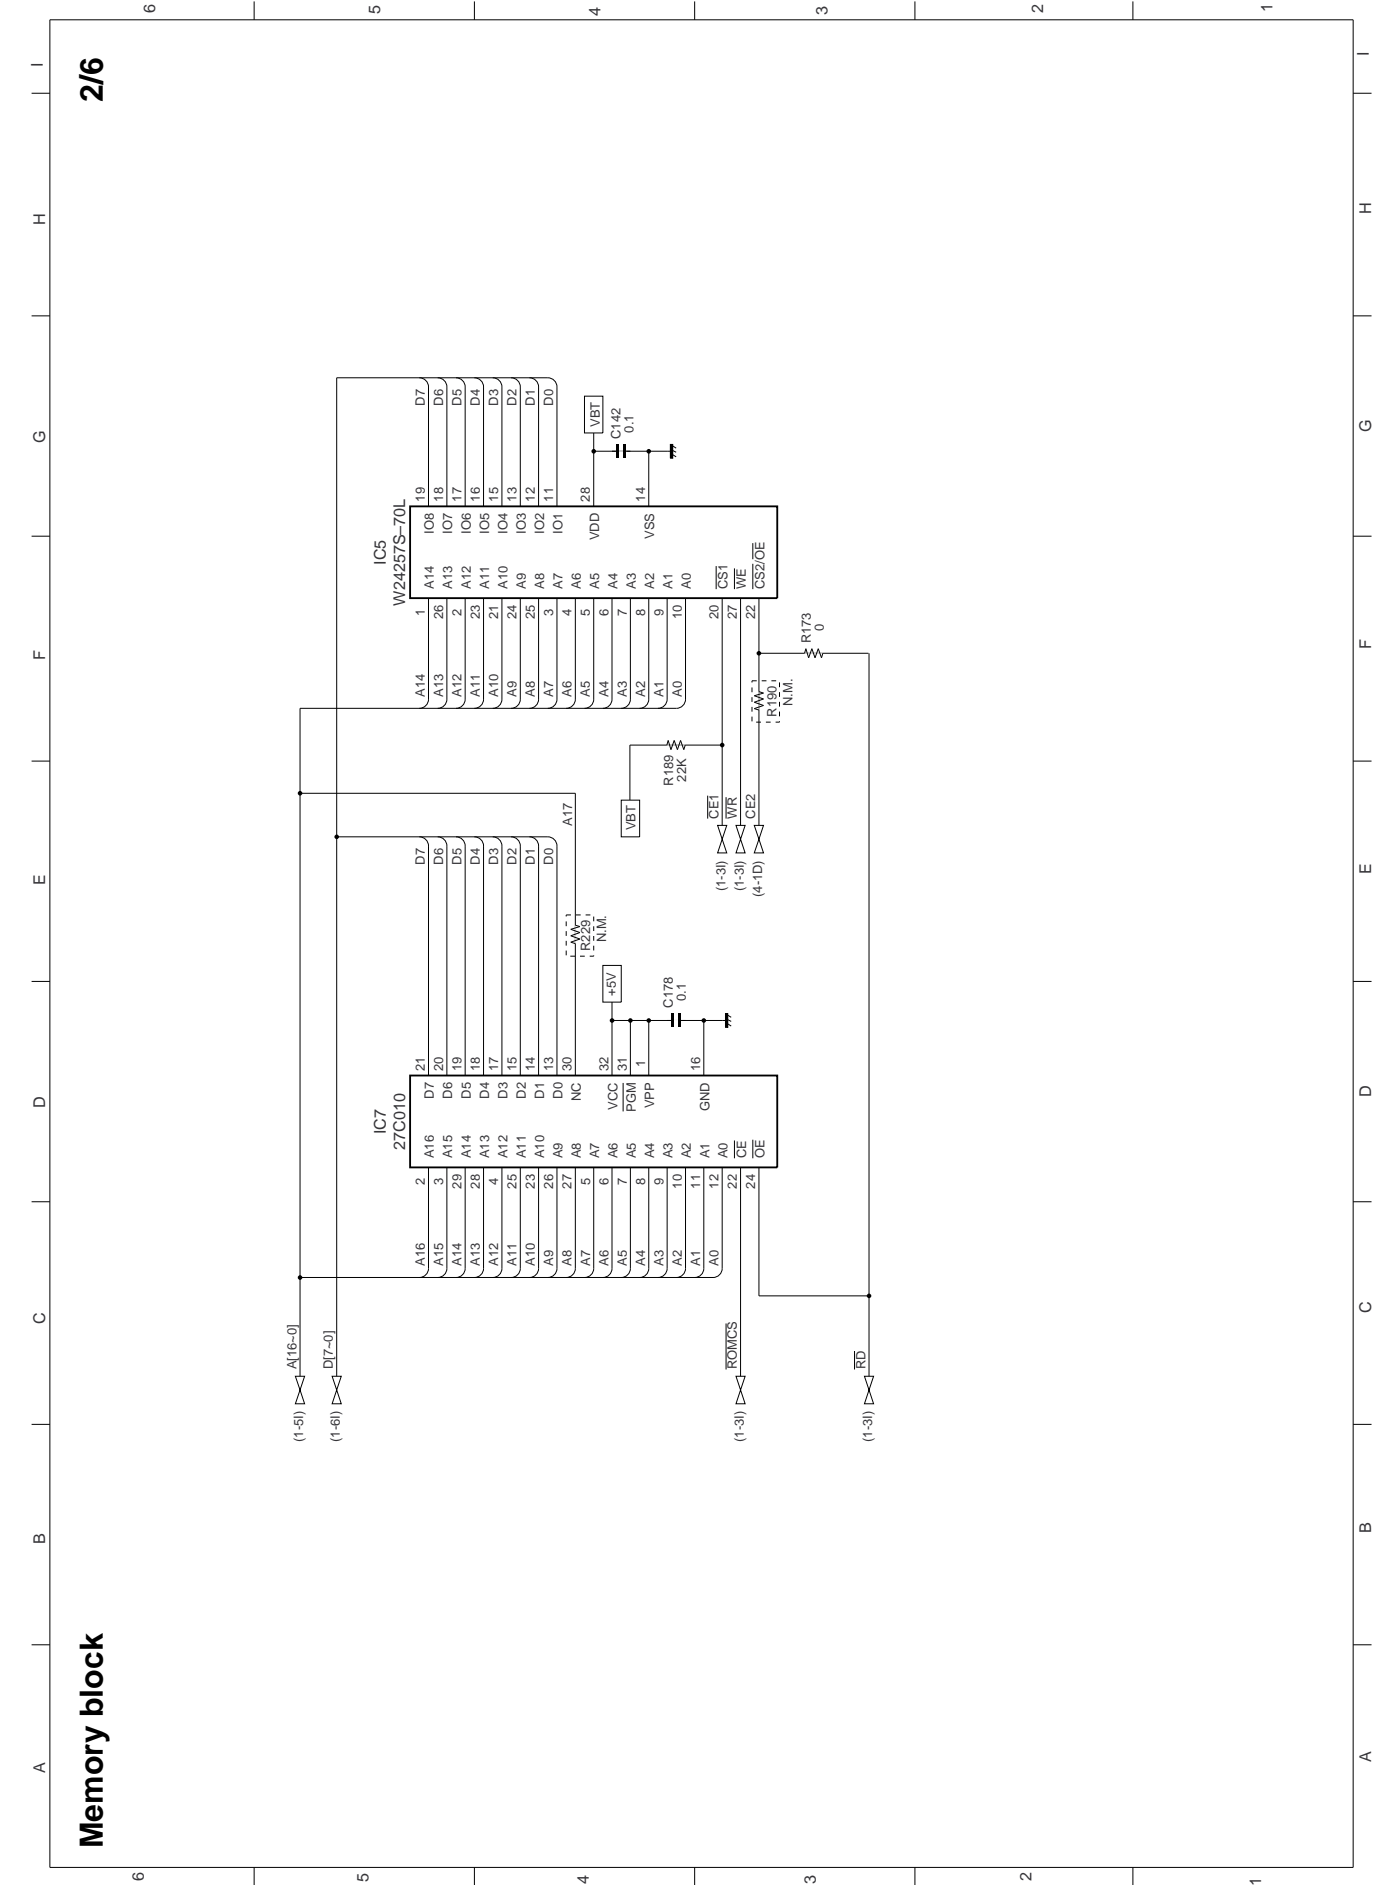


## Modem block

3/6

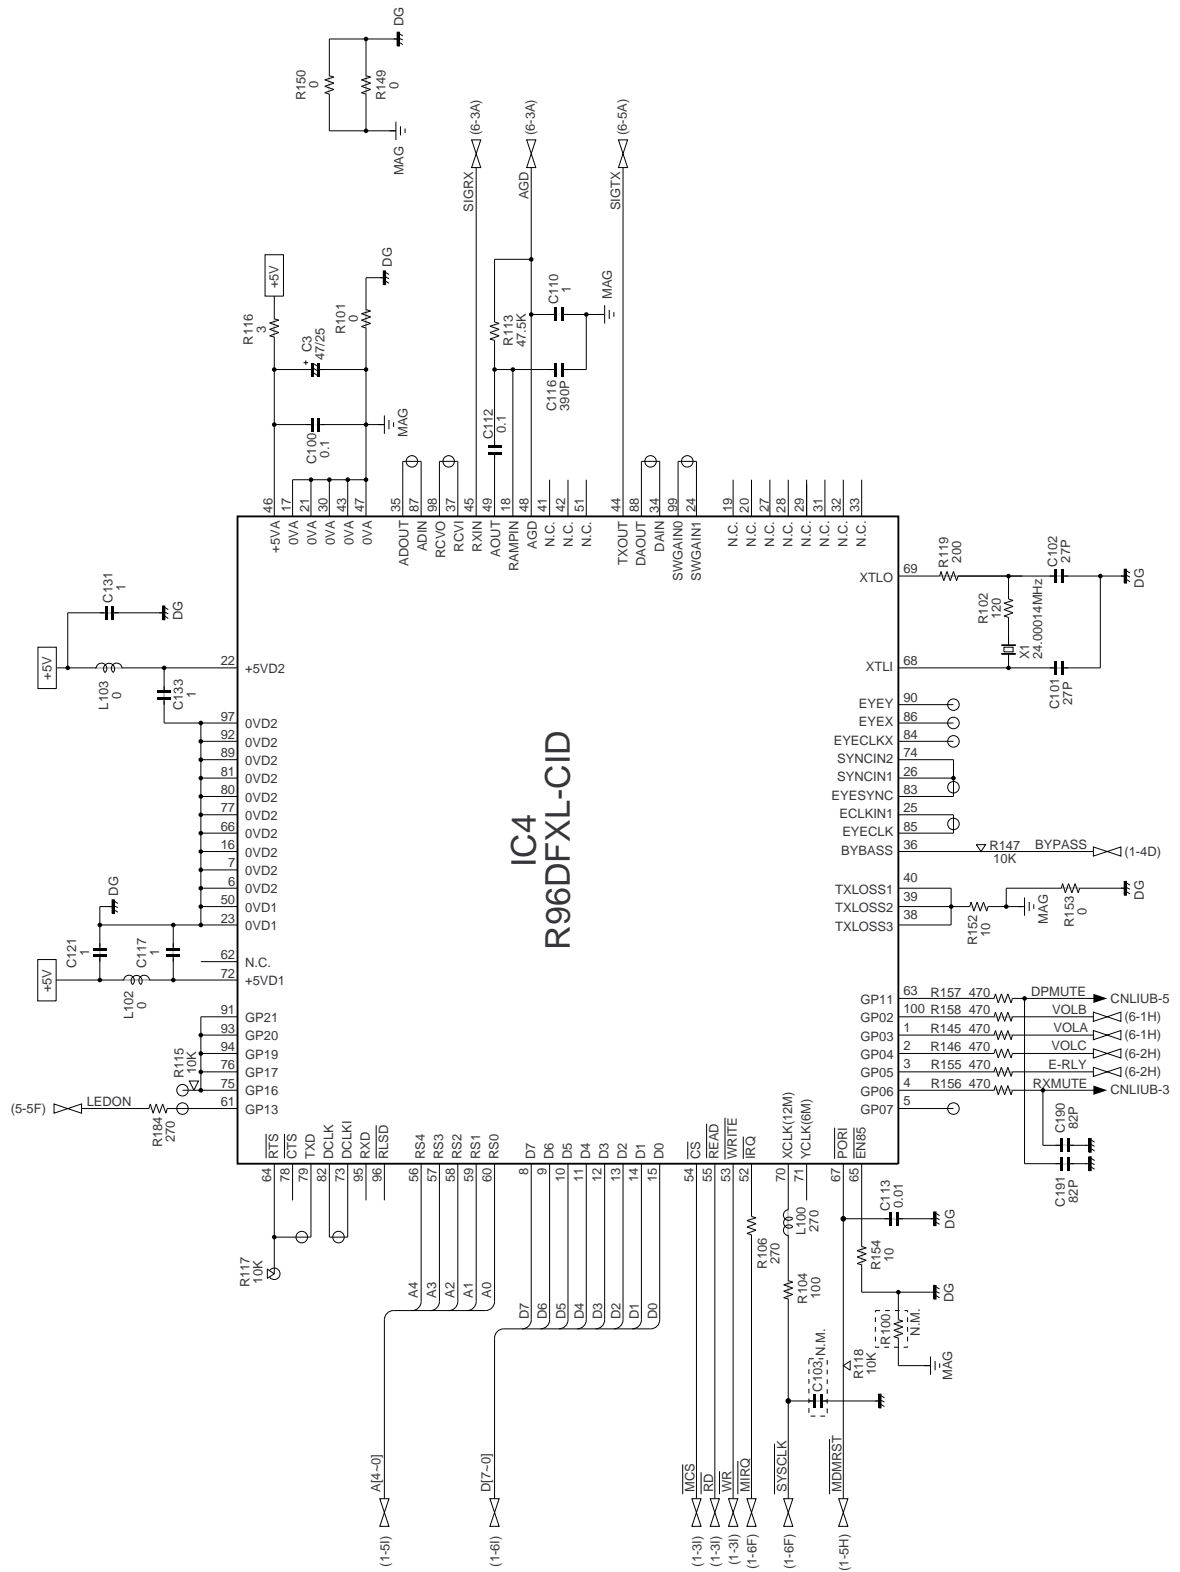

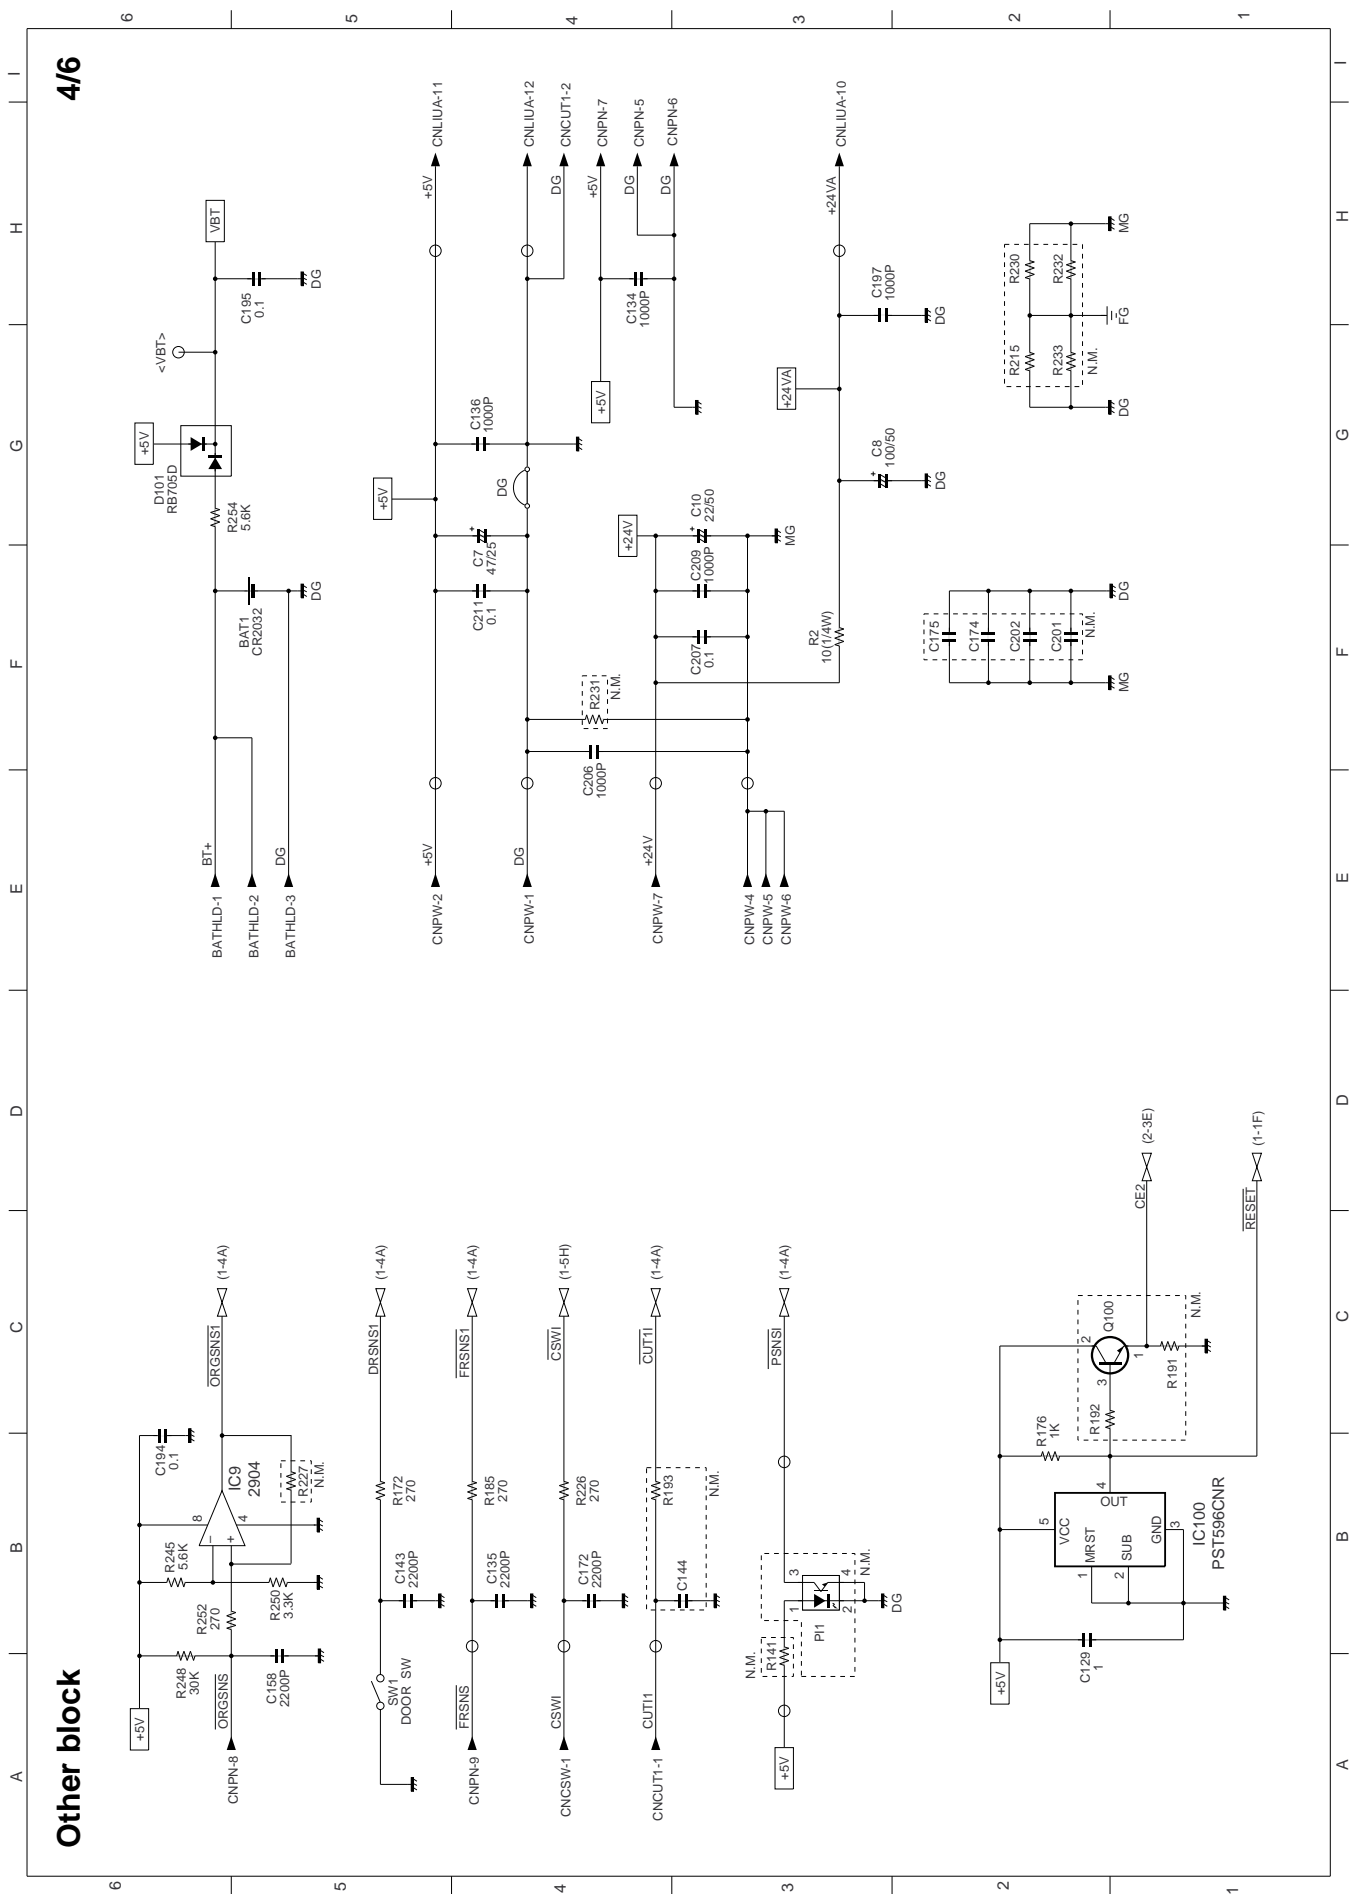


5/6

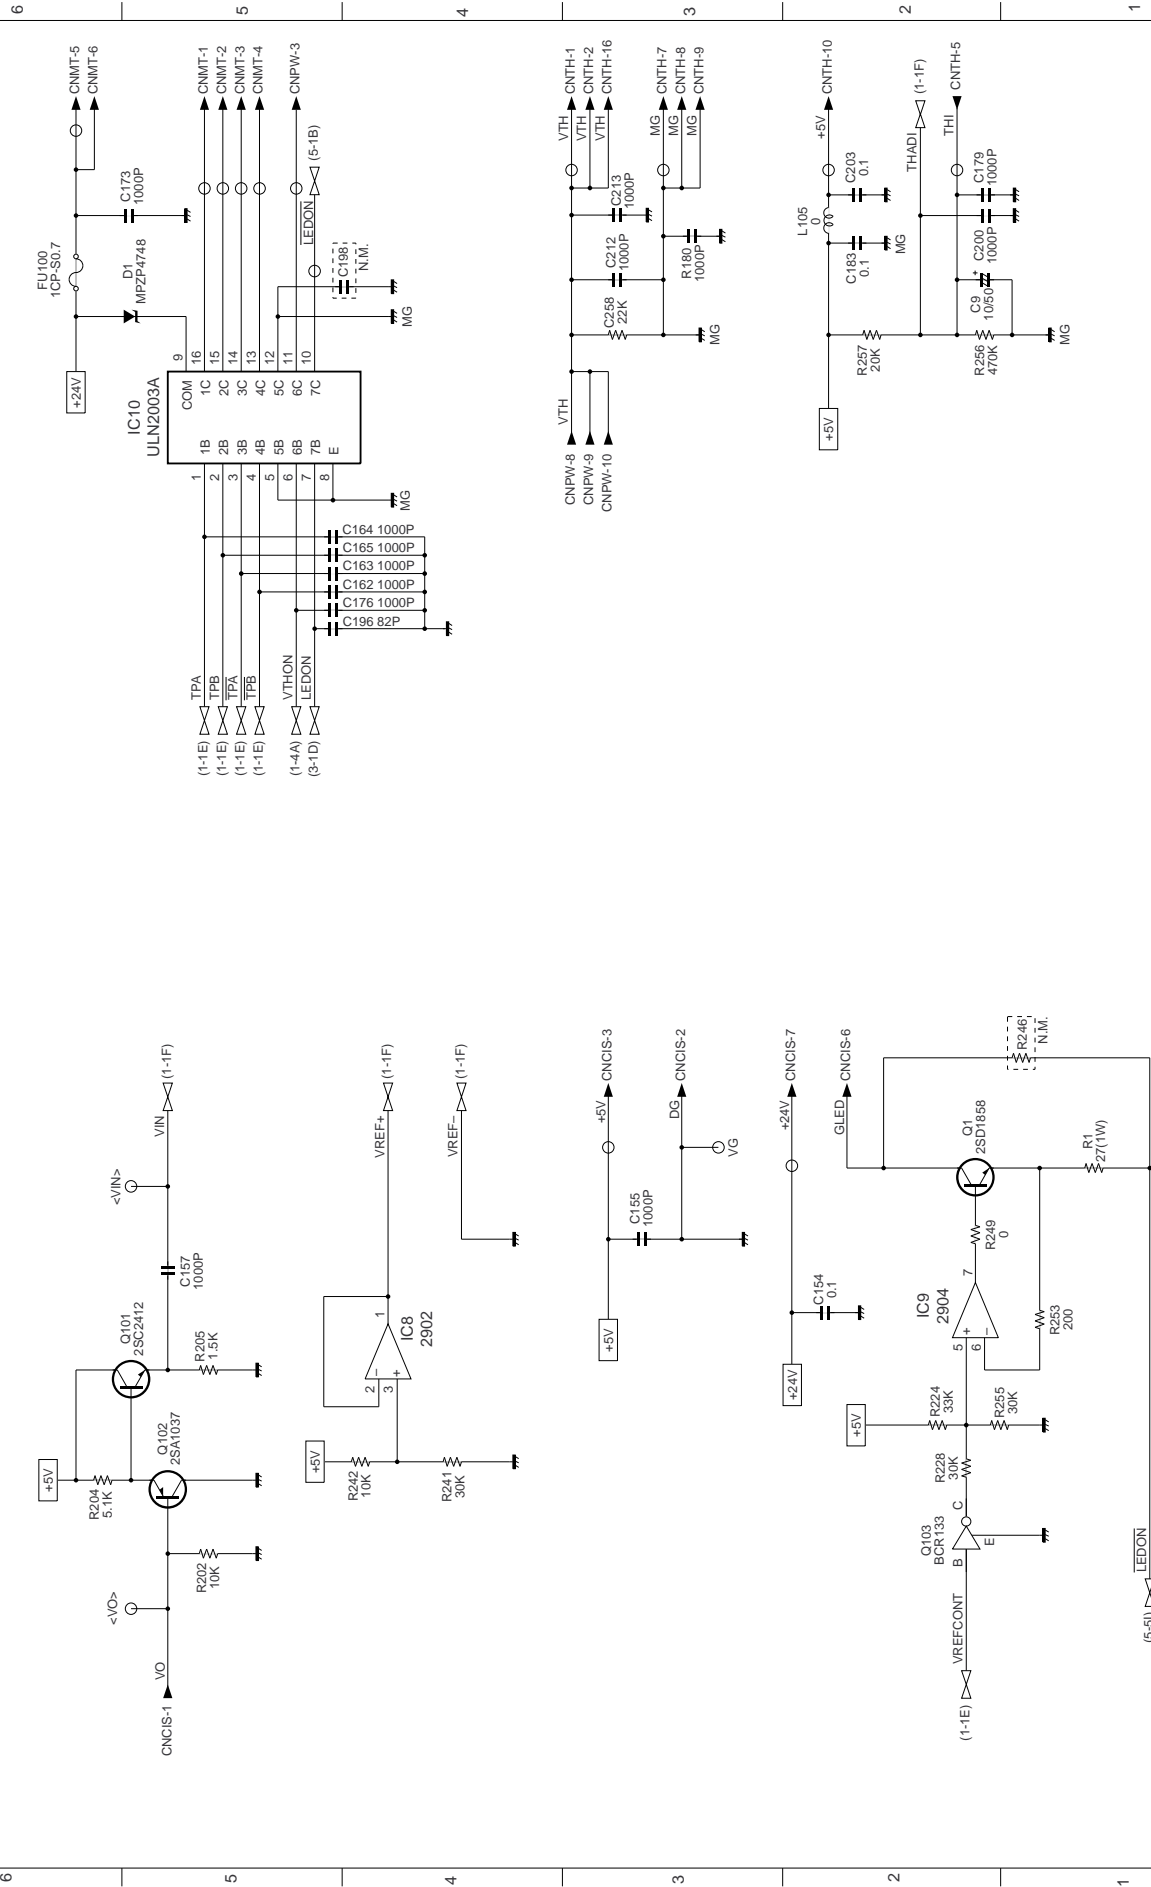


Analog signal block


6/6

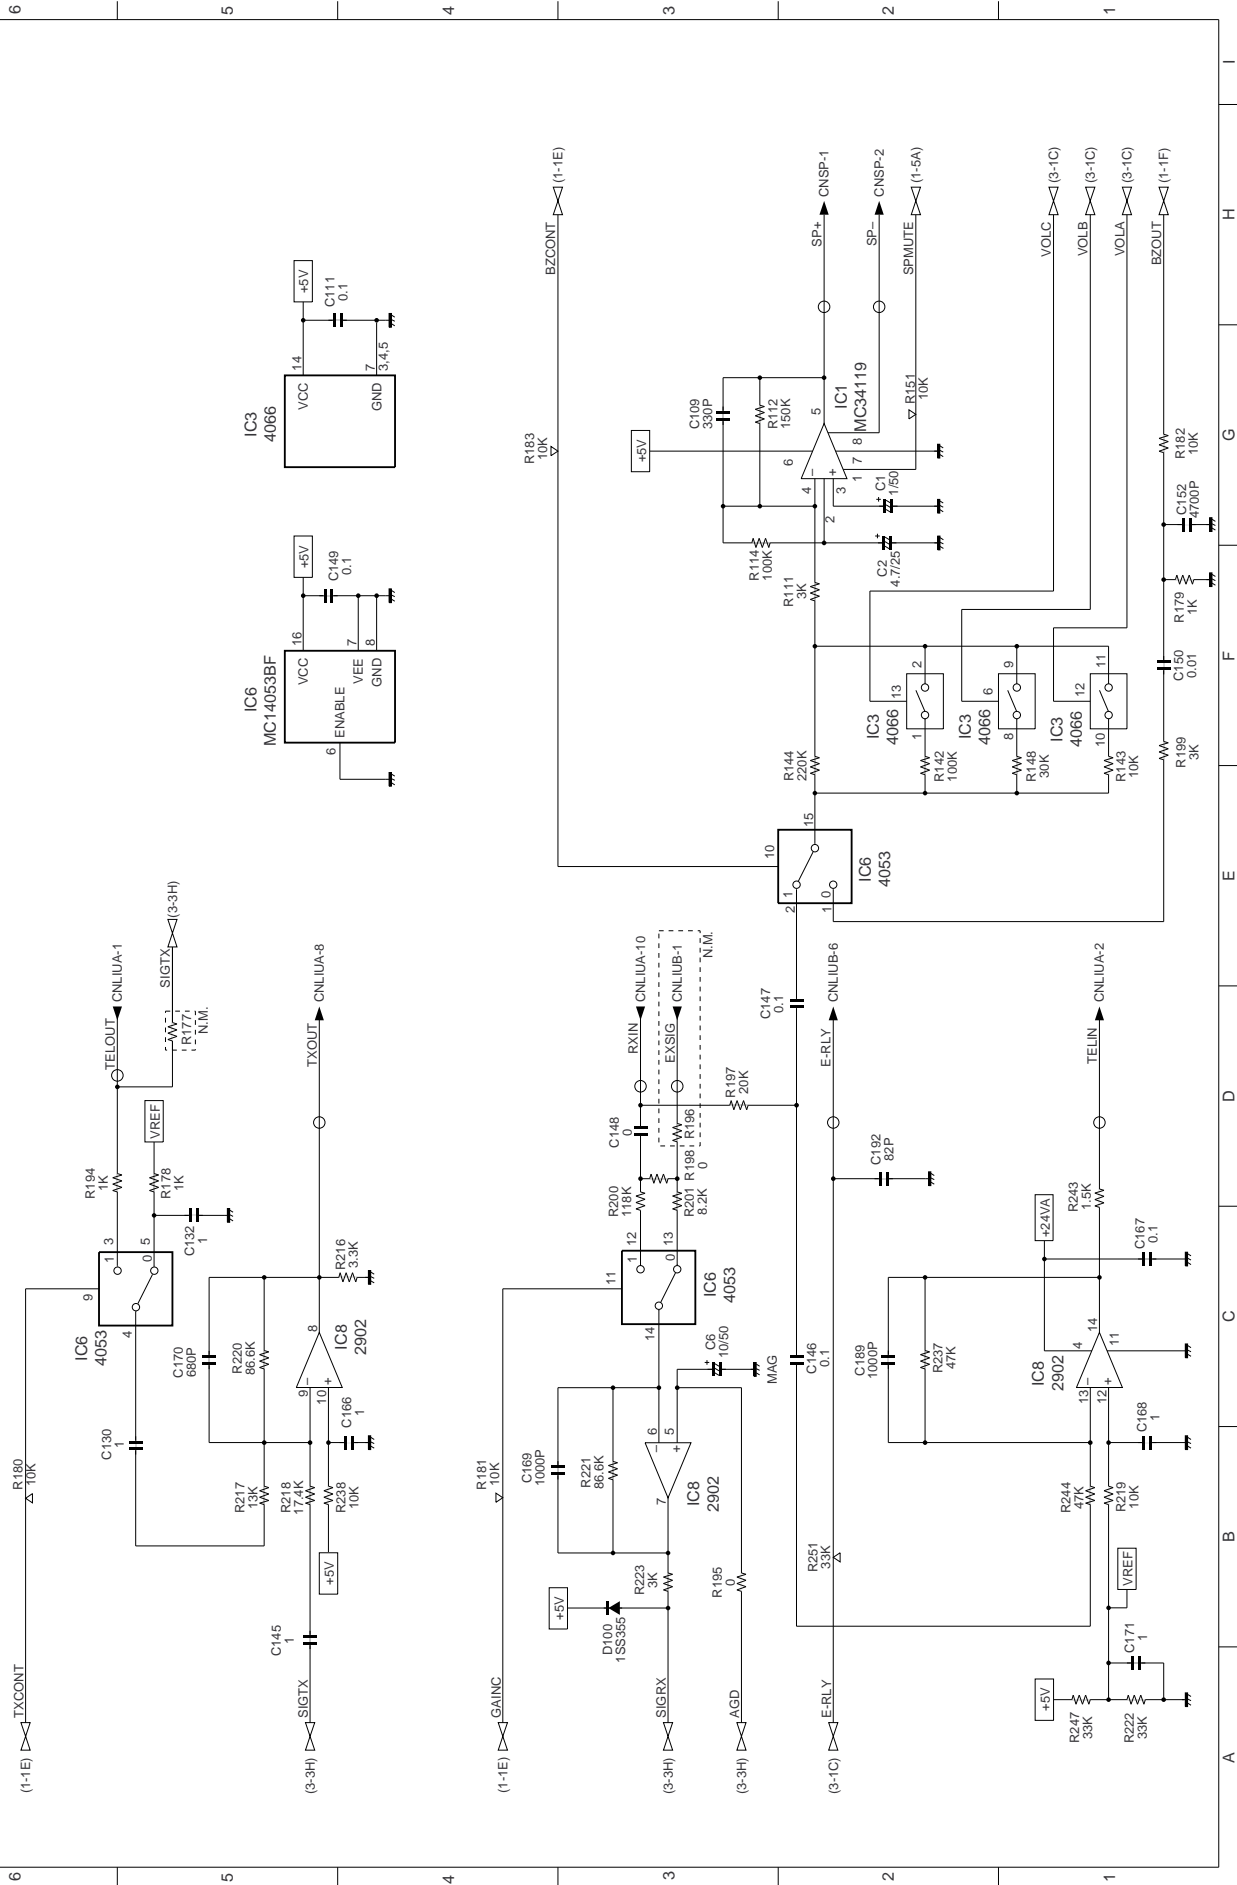


### Control PWB parts layout (Top side)

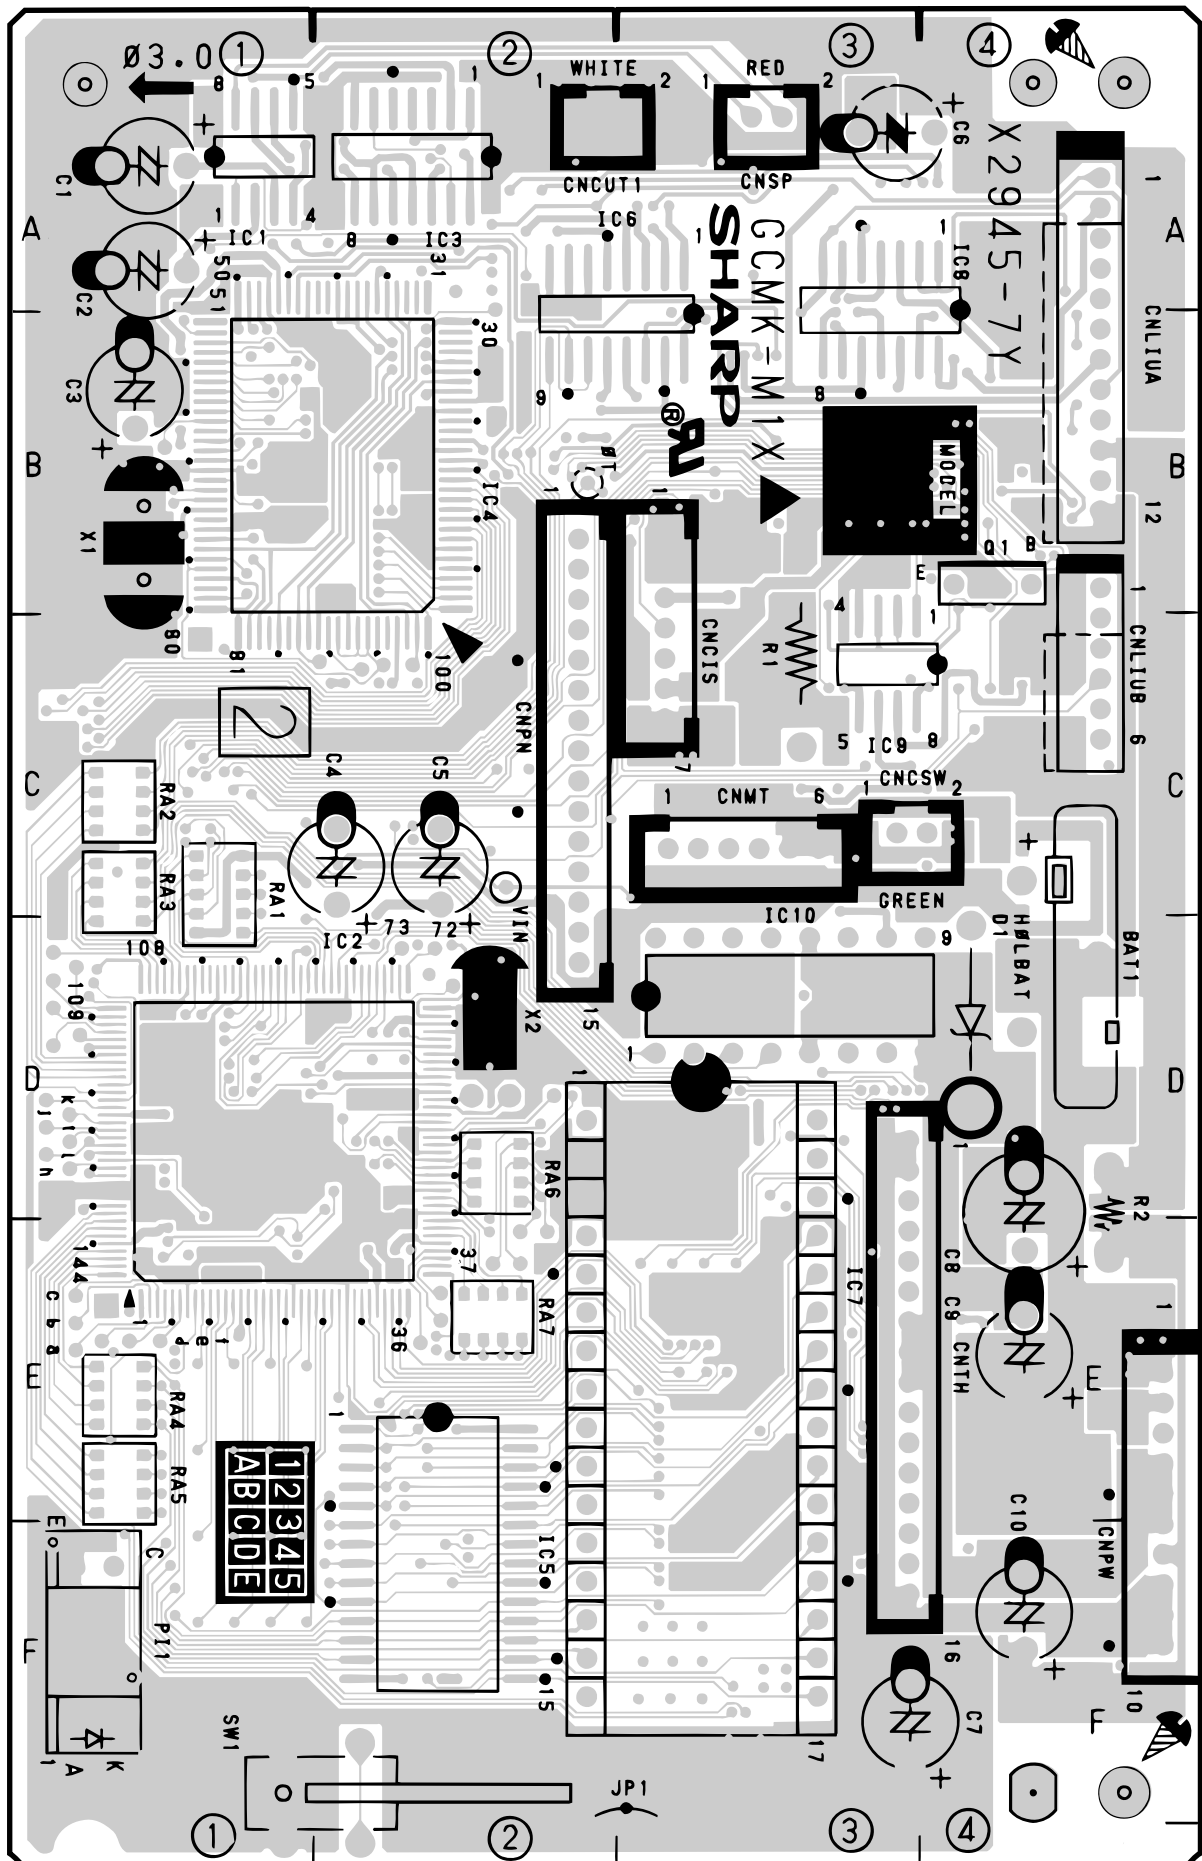


Control PWB parts layout (Bottom side)

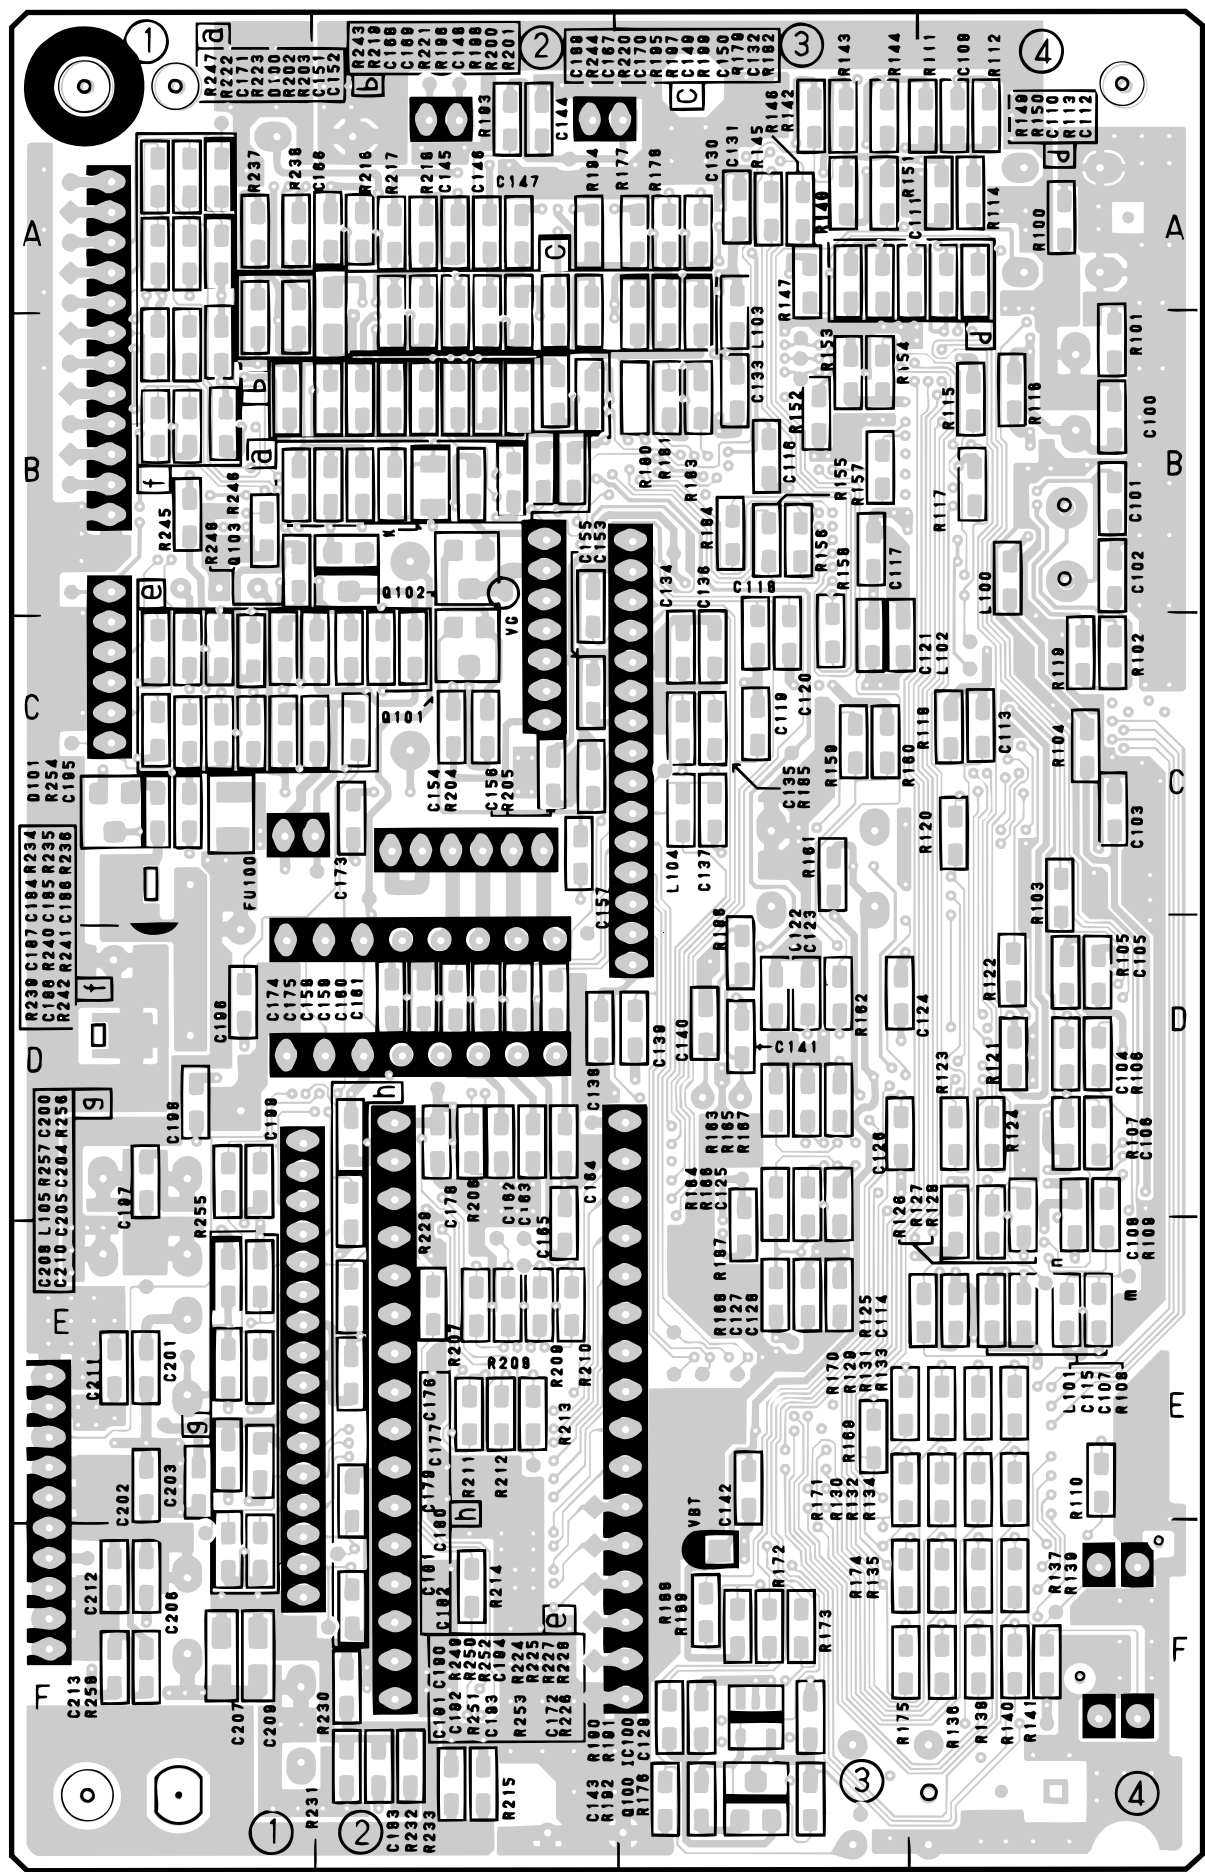

 


TEL/LIU PWB circuit

2/2

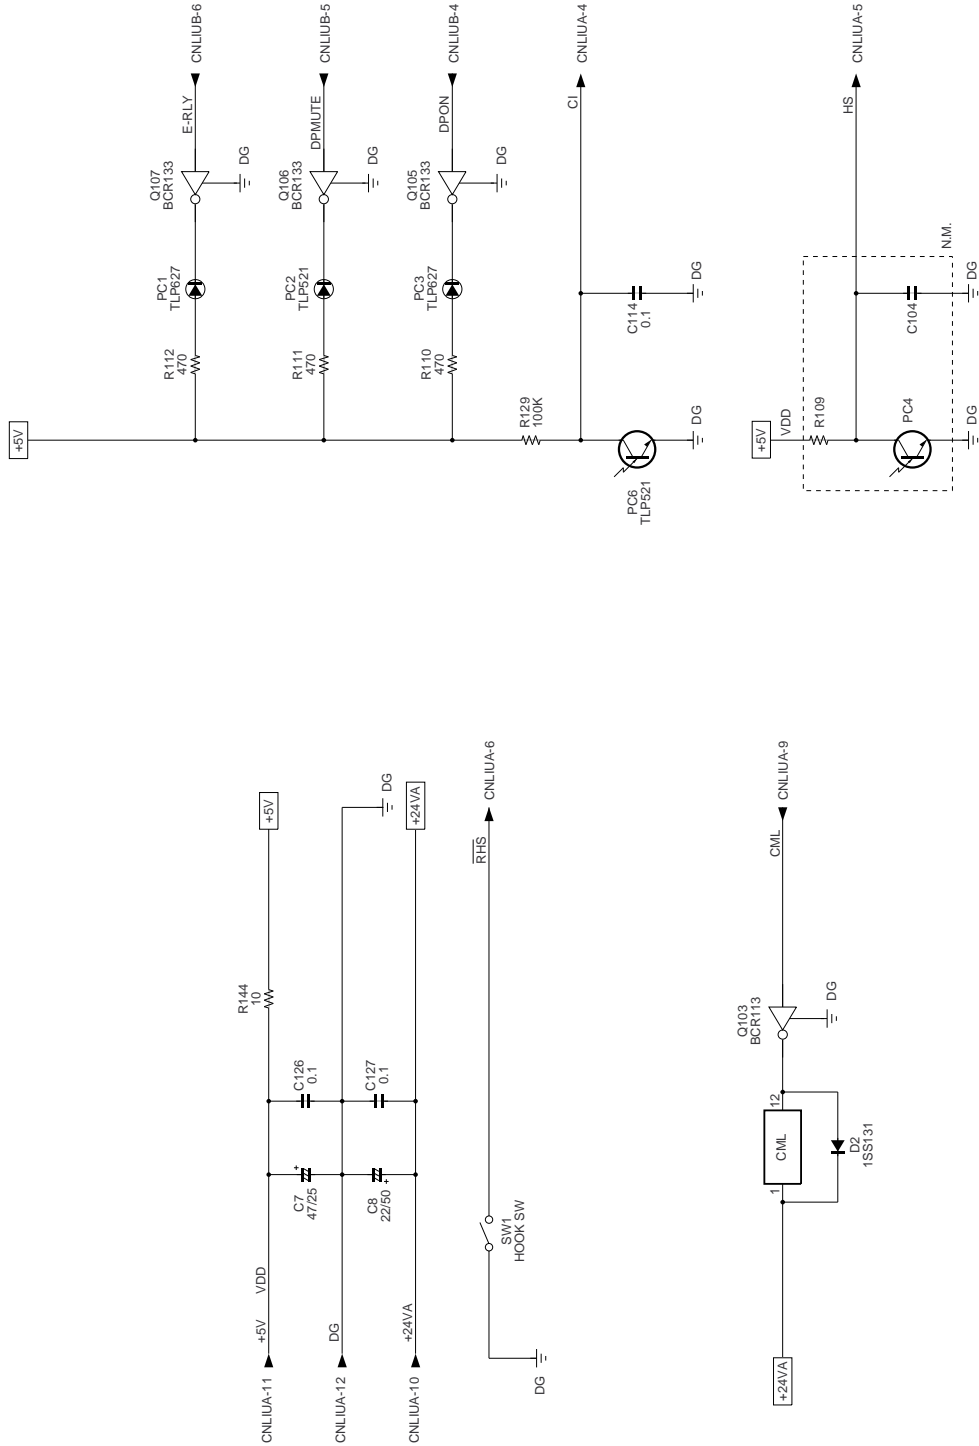




TEL/LIU PWB parts layout (Top side)

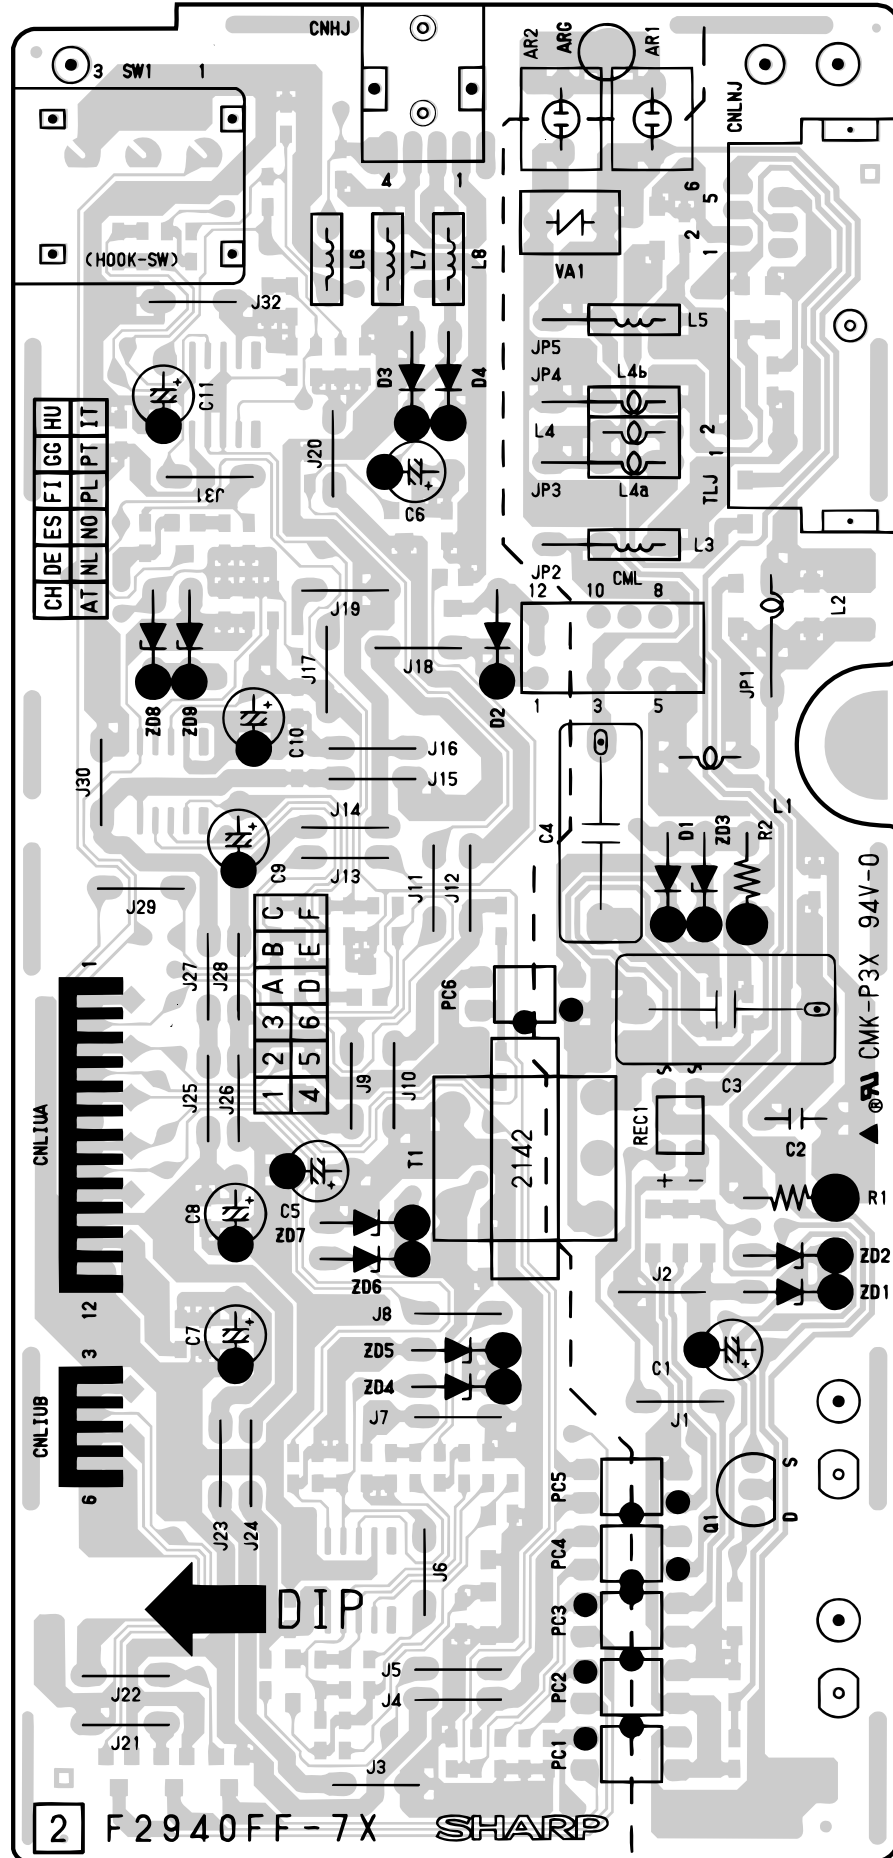





### [3] Power supply PWB circuit

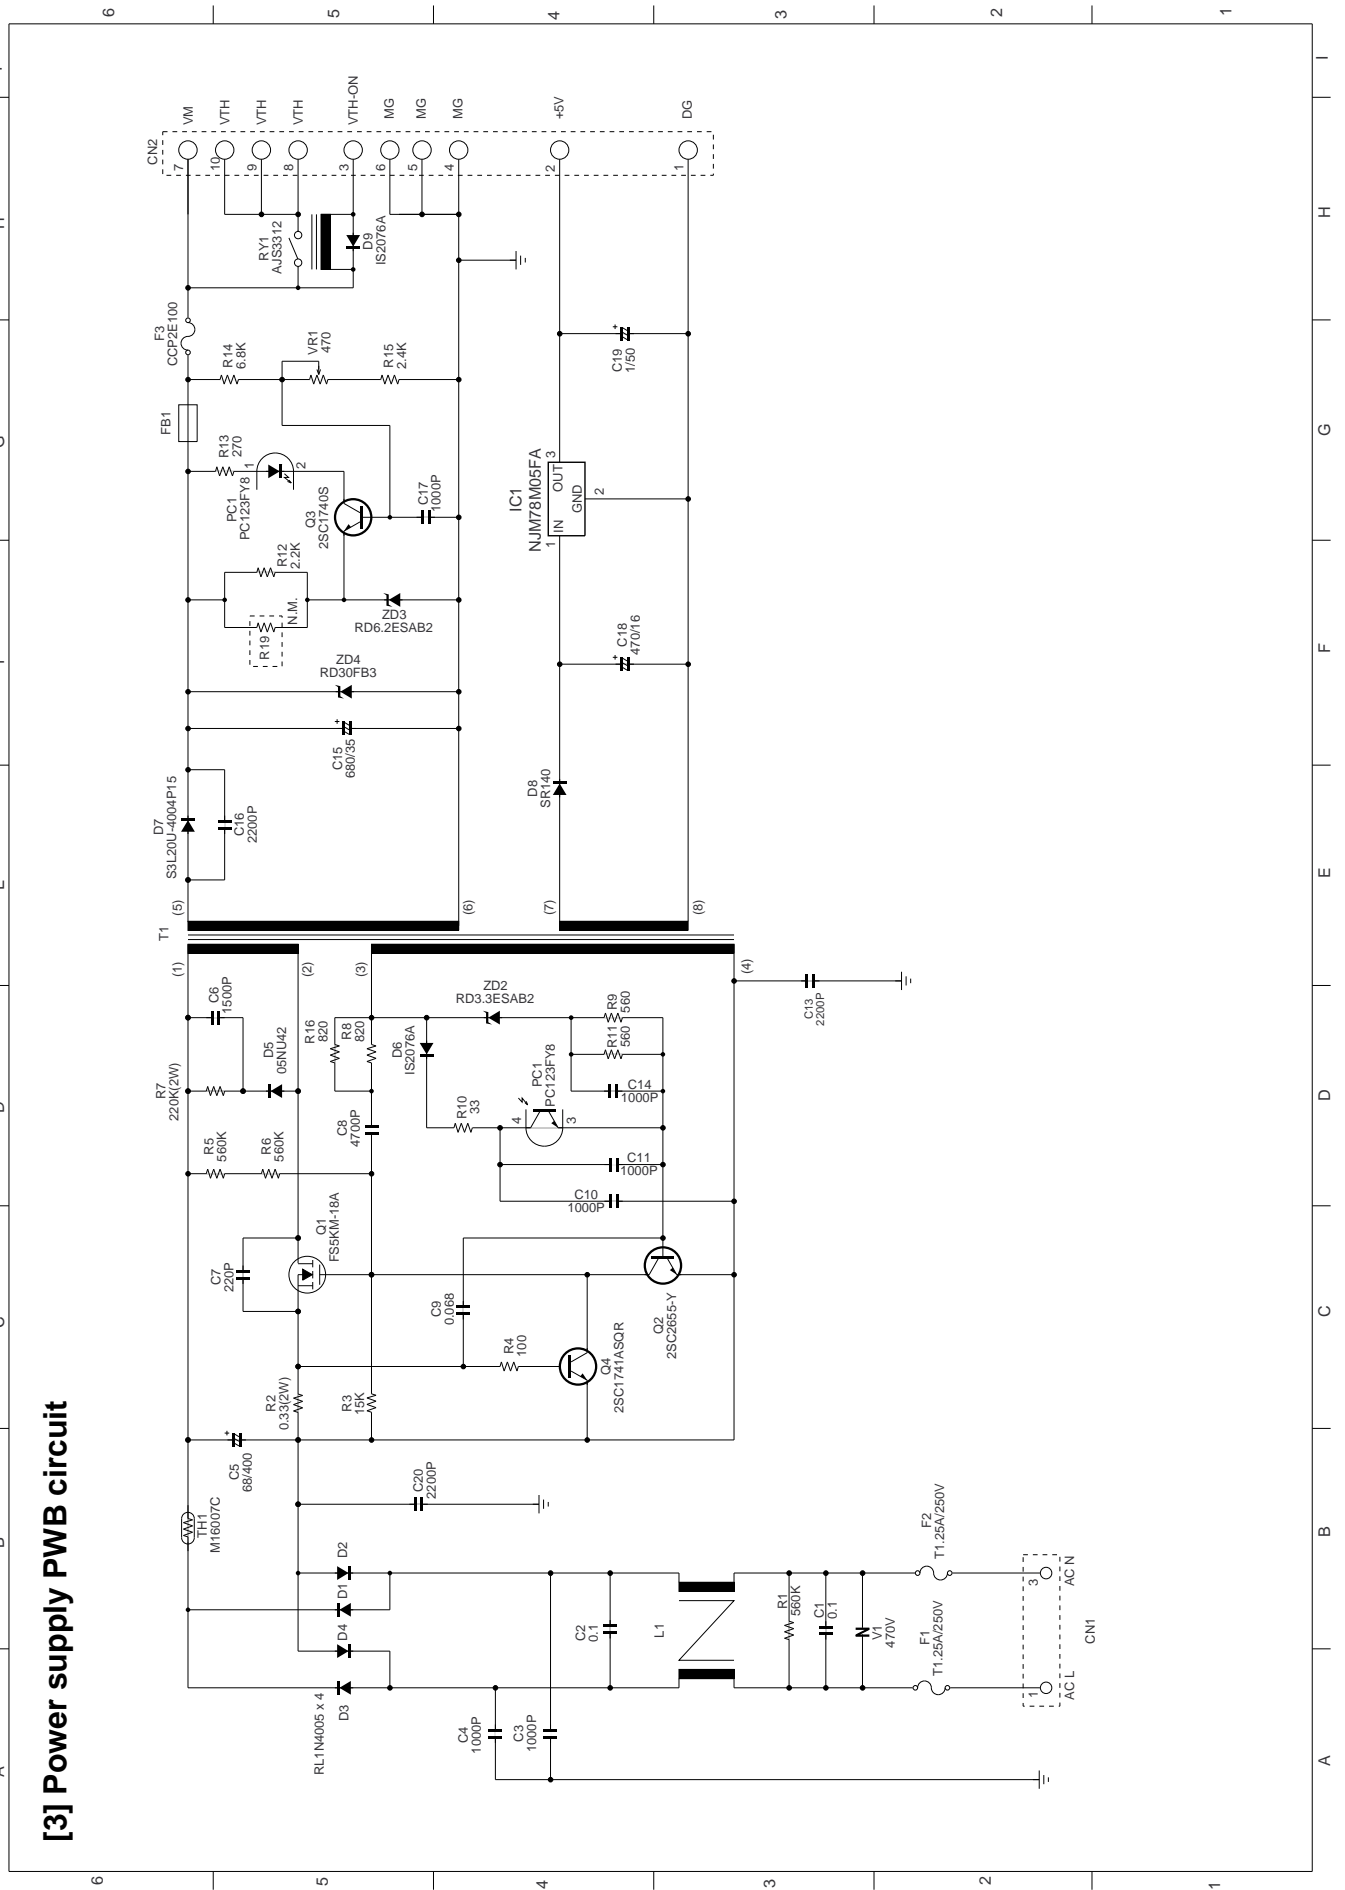

Power supply PWB parts layout

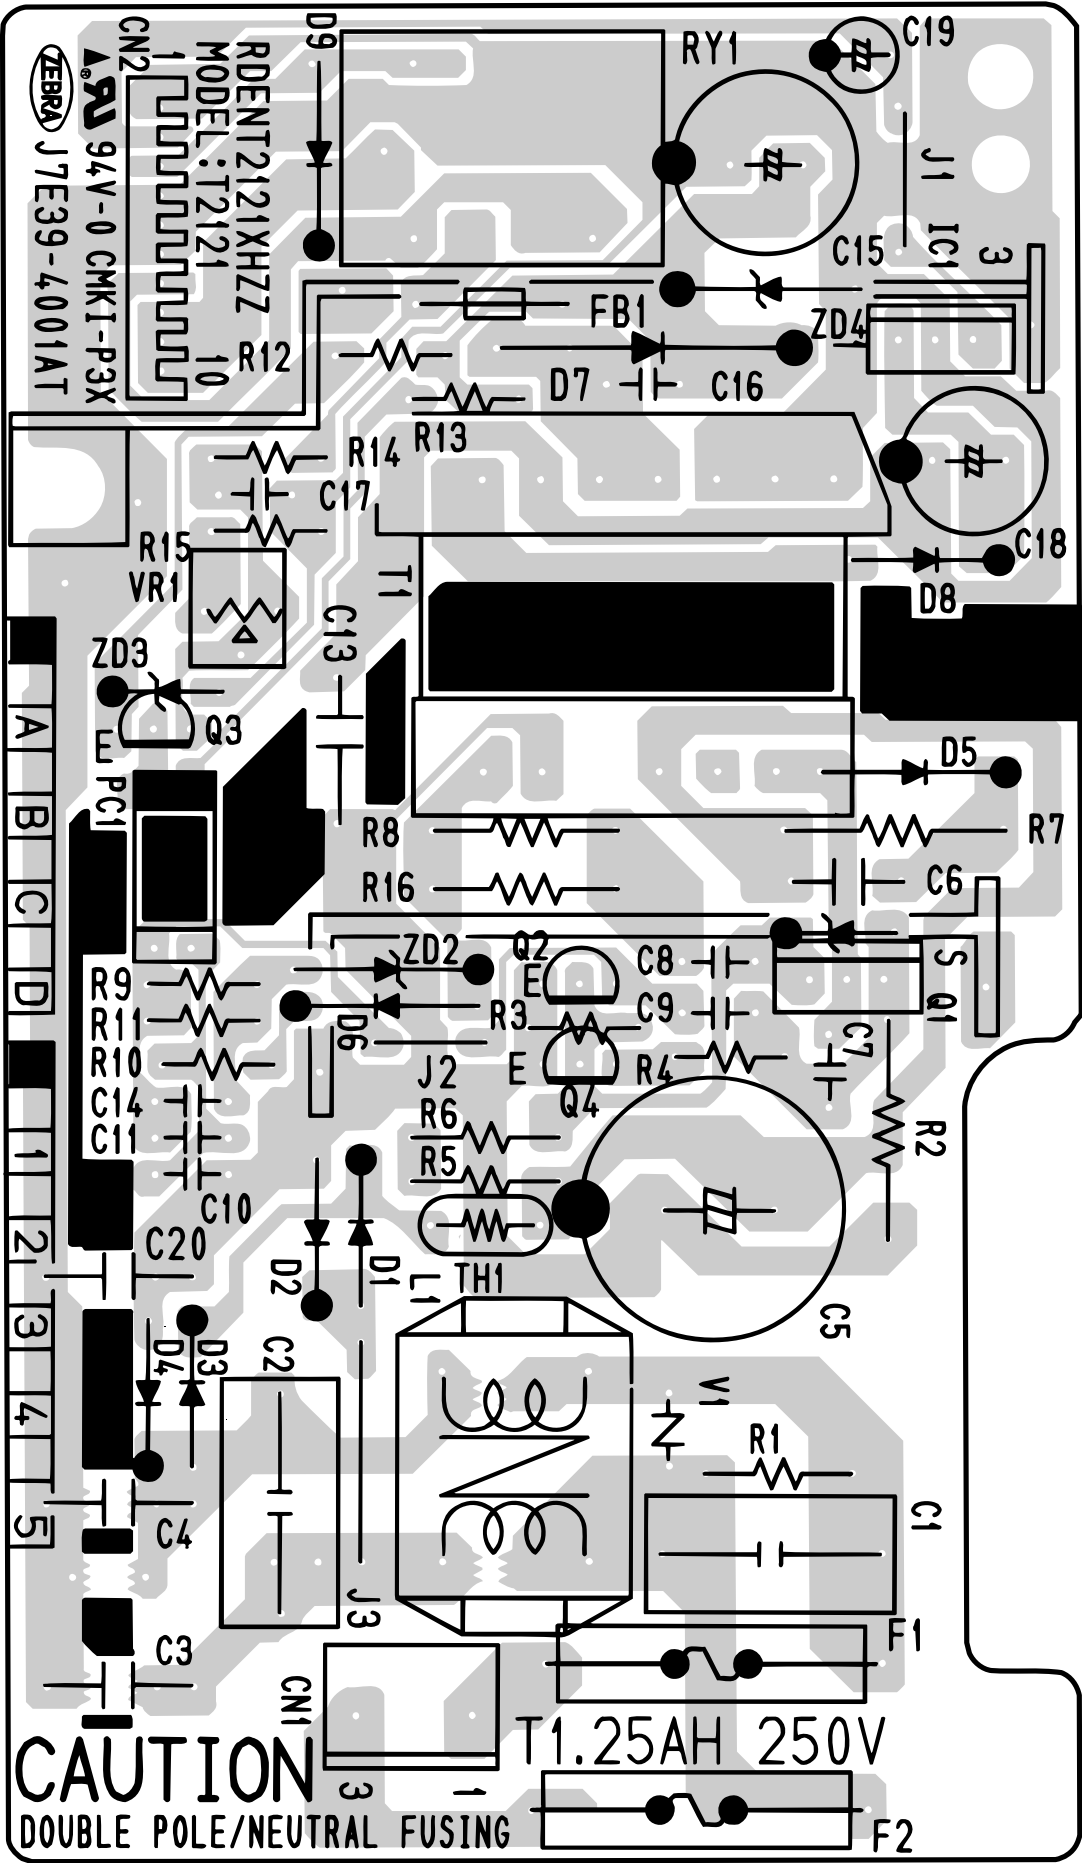


# [4] Operation panel PWB circuit

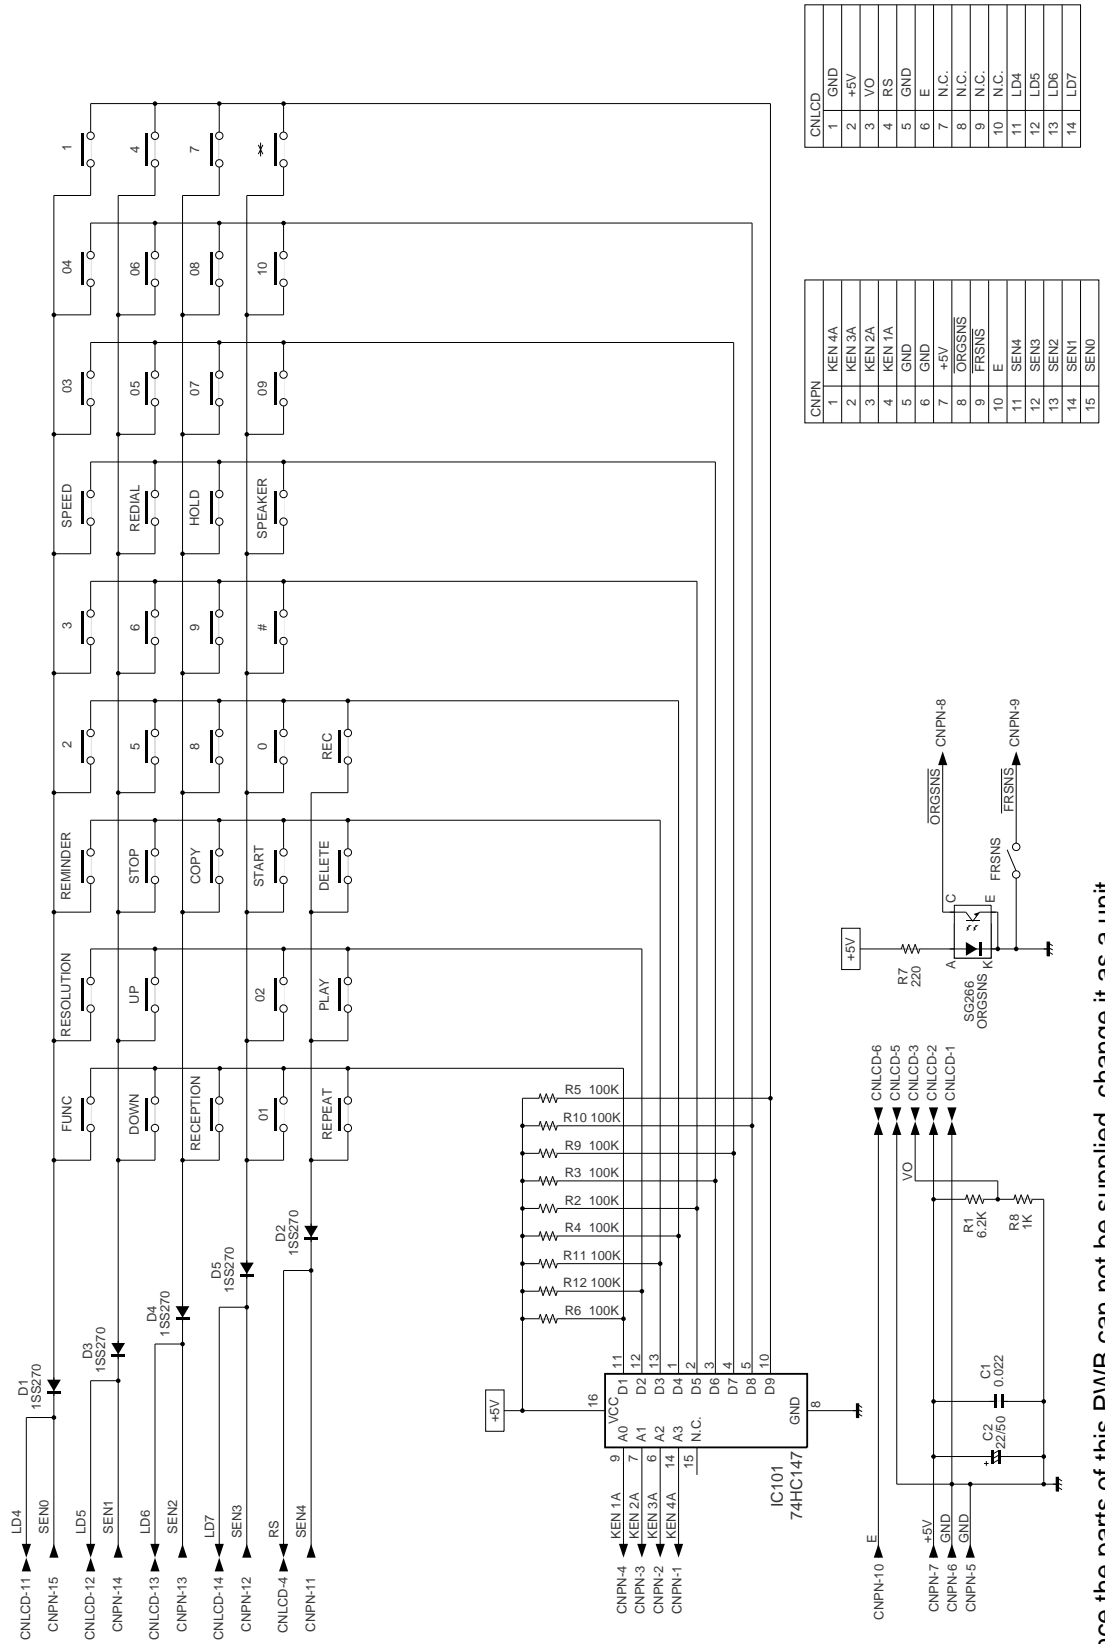


Note: Since the parts of this PWB can not be supplied, change it as a unit.

CHAPTER 7. OPERATION FLOWCHART

[1] Protocol

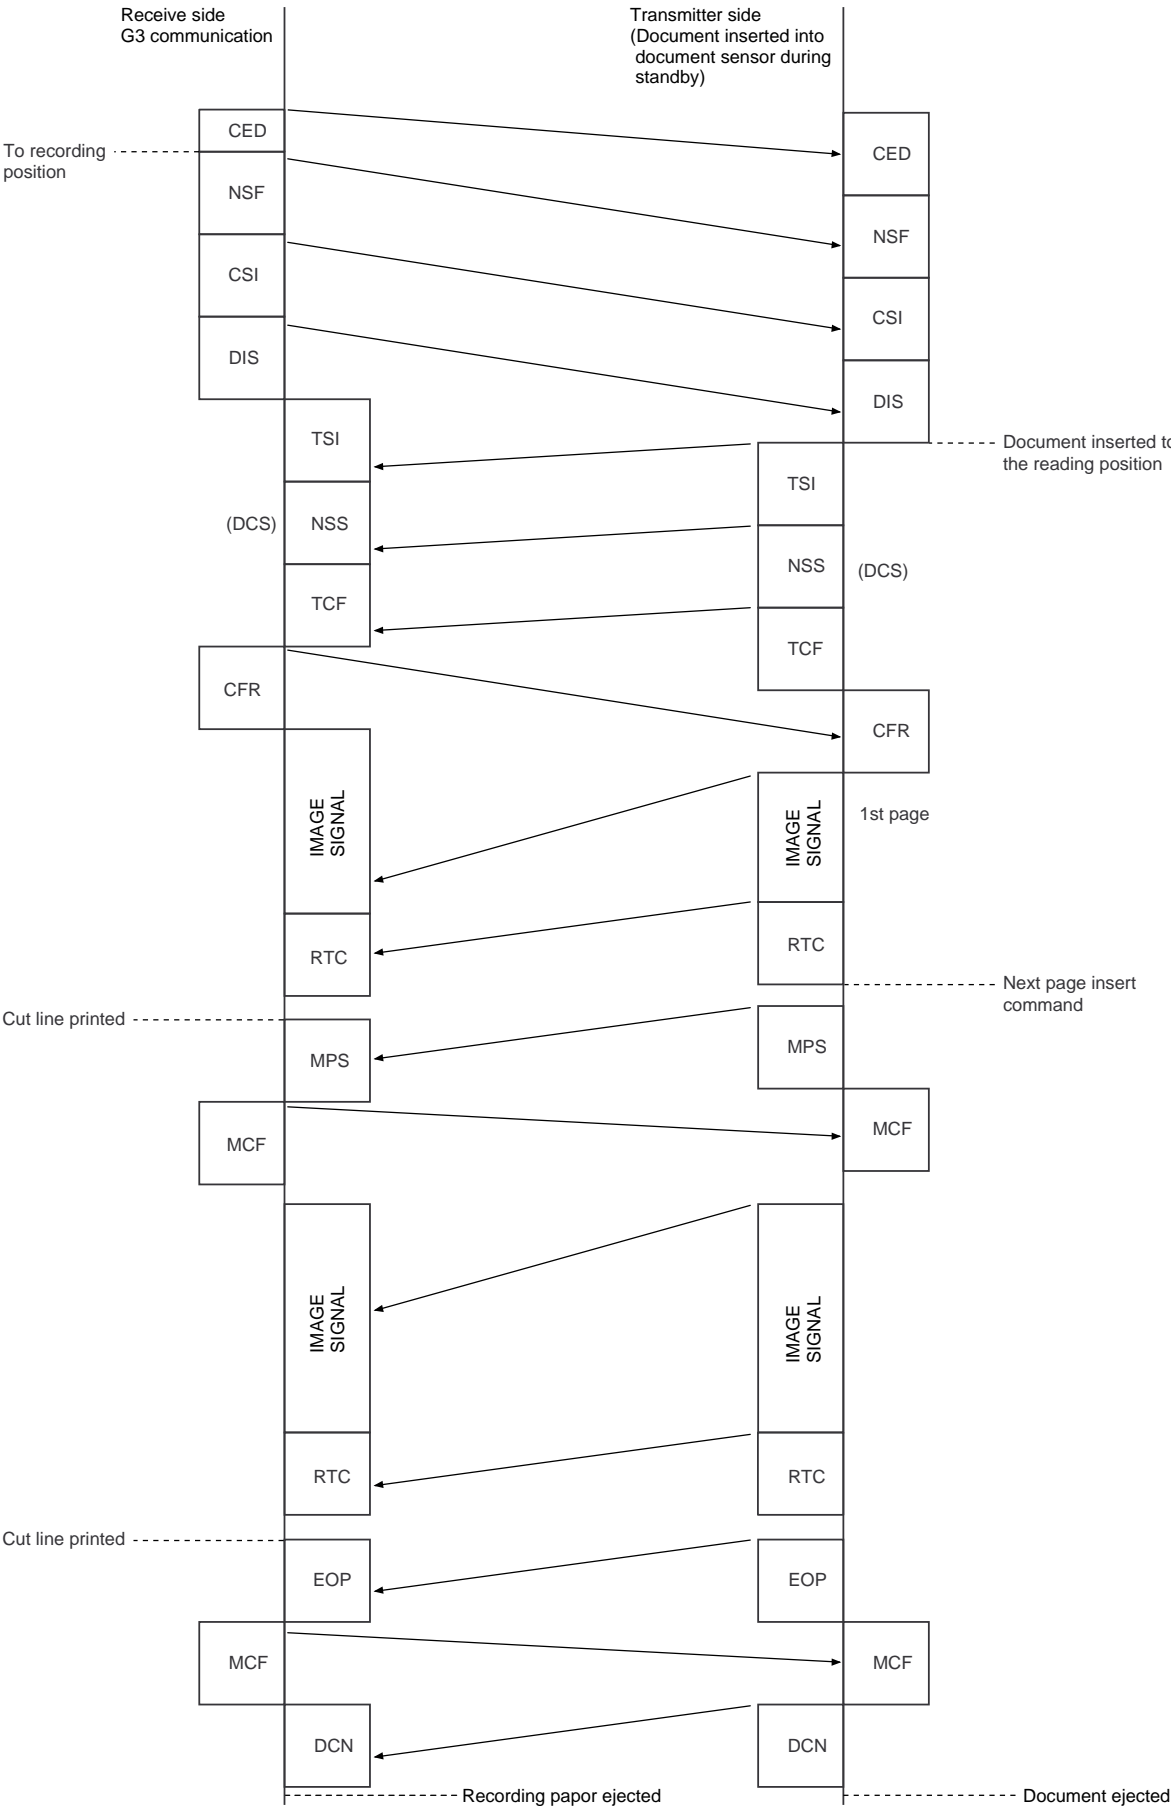

## [2] Power on sequence

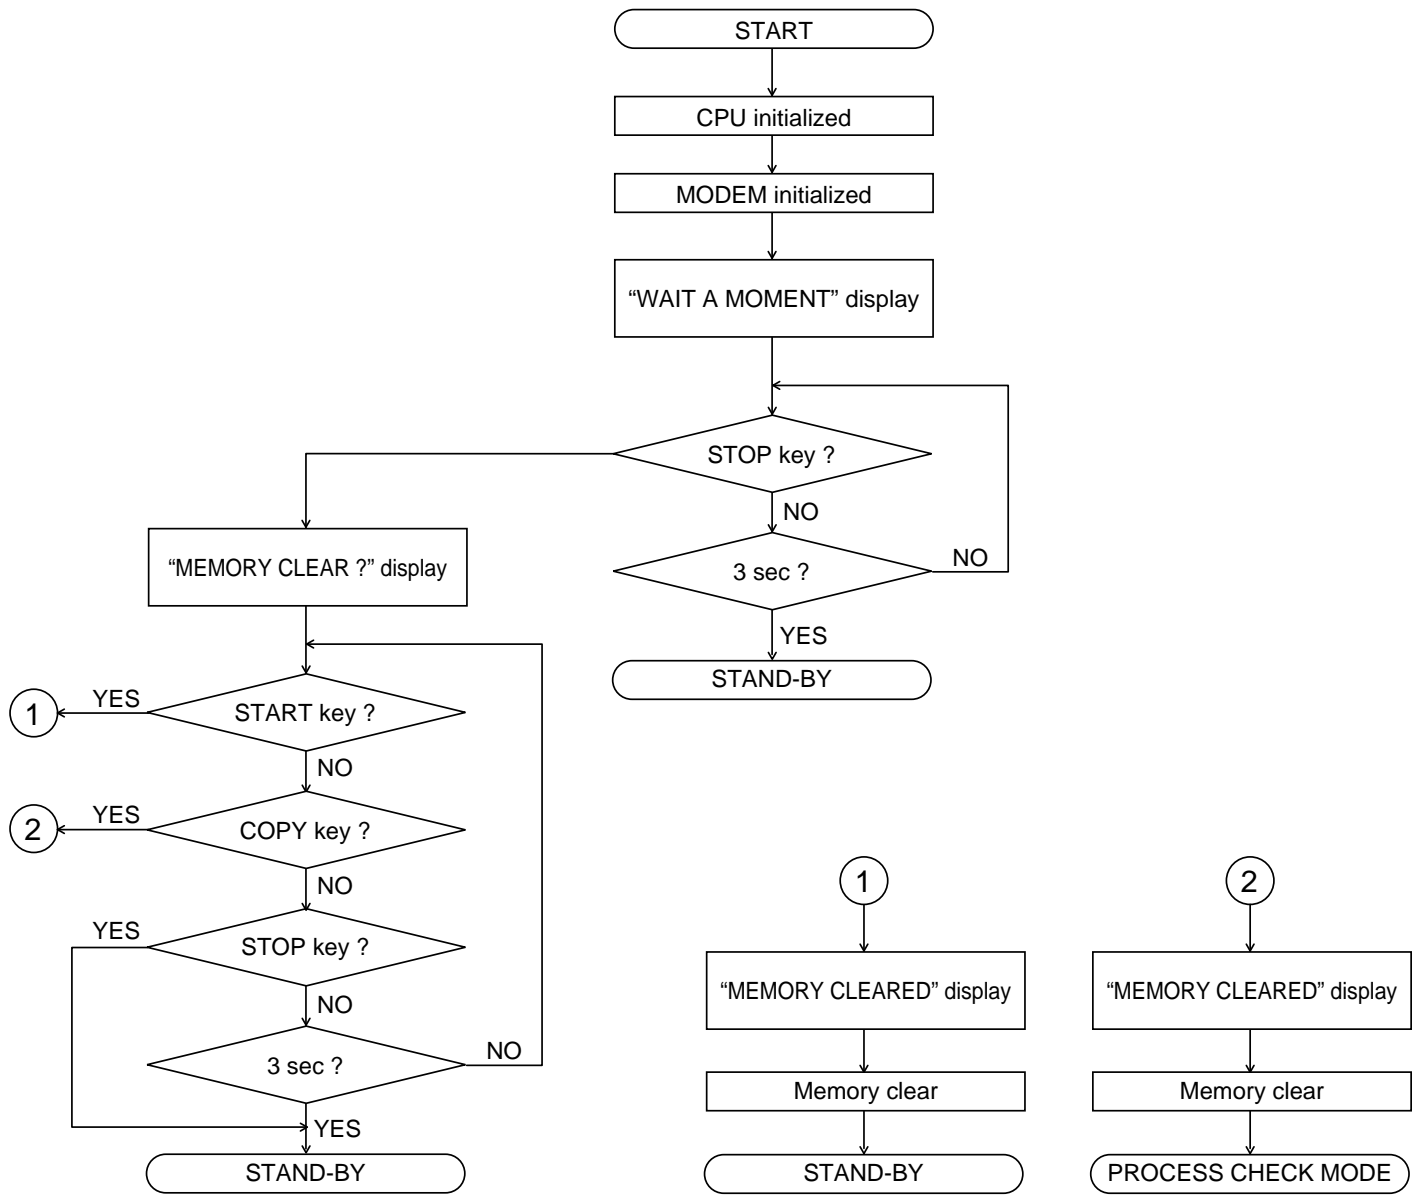


CHAPTER 8. OTHERS

[1] Service tools

1. List

NO.	PARTS CODE	DESCRIPTION	Q'TY	PRICE RANK
1	C P W B S 2 9 1 5 S C S 1	Relay board unit	1	BN
2	P S H E Z 3 3 5 4 S C Z Z	Shading wave memory standard paper	1	AD

Relay board unit

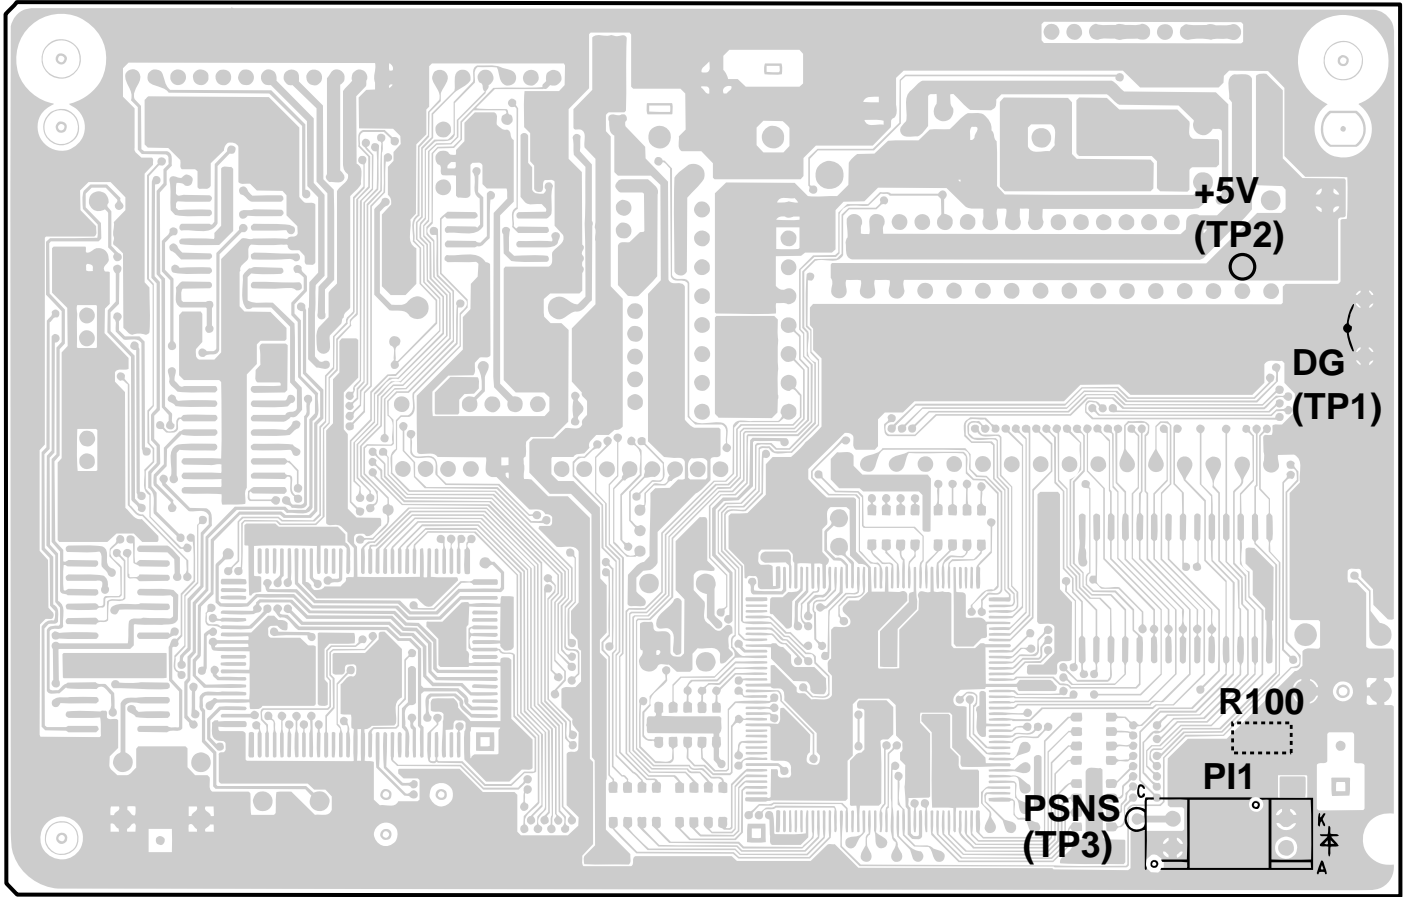


NO.	PARTS CODE	DESCRIPTION	Q'TY	PRICE RANK
1	C C N W - 4 7 5 6 S C 0 1	SPEAKER RELAY CABLE	1	AK
2	C C N W - 4 7 5 7 S C 0 1	PANEL RELAY CABLE	1	AW
3	C C N W - 4 7 5 8 S C 0 1	CIS RELAY CABLE	1	AQ
4	C C N W - 4 7 5 9 S C 0 1	HEAD RELAY CABLE	1	AX
5	C C N W - 4 7 6 0 S C 0 1	CAM SWITCH RELAY CABLE	1	AK
6	C C N W - 4 7 6 1 S C 0 1	CUTTER SWITCH RELAY CABLE	1	AK
7	C C N W - 4 7 6 3 S C 0 1	MOTOR RELAY CABLE	1	AP
8	Q C N W - 4 7 6 4 S C Z Z	PAPER SENSOR RELAY CABLE	1	BB
9	V H P R P i - 5 7 4 / / /	PHOTO TRANSISTOR [PSNS]	1	AF
10	V R S - T S 2 A D 2 2 1 J	RESISTOR (1/10W 220Ω ±5%)[R100]	1	AA
11	Q P W B S 2 9 1 5 S C Z 4	EXTENSION PWB	1	AR



## 2. Description

### 2-1. Relay board unit


1. Remove the TEL/LIU PWB, control PWB and Power Supply PWB from this unit, and mount the relay board unit instead.
  - Before connecting the wiring to the relay board unit, set the test PWB switches to the fixed position.
2. The setting is as follows.

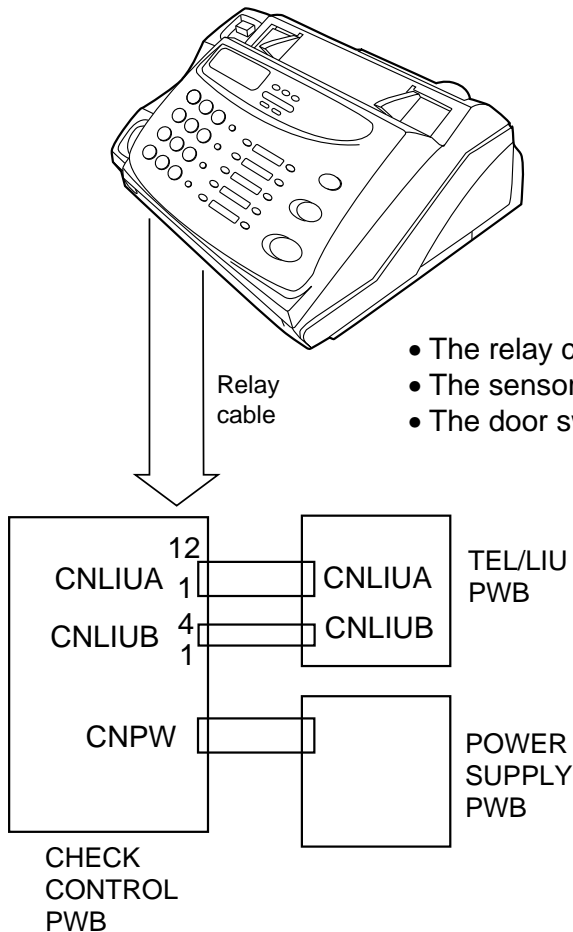

The recording paper sensor (PSNS) is operated by OR of the mechanical unit switch and the test PWB switch. When performing installation in the machine unit, set the test PWB switches to the fixed position.

	Mechanical unit	PWB to be tested
Actual operation with mechanical unit		
Recording paper sensor	ON/OFF operation	OFF (Photo interrupter is interrupted.)
PWB sensor check		
Recording paper sensor	OFF	ON/OFF operation

#### NOTE

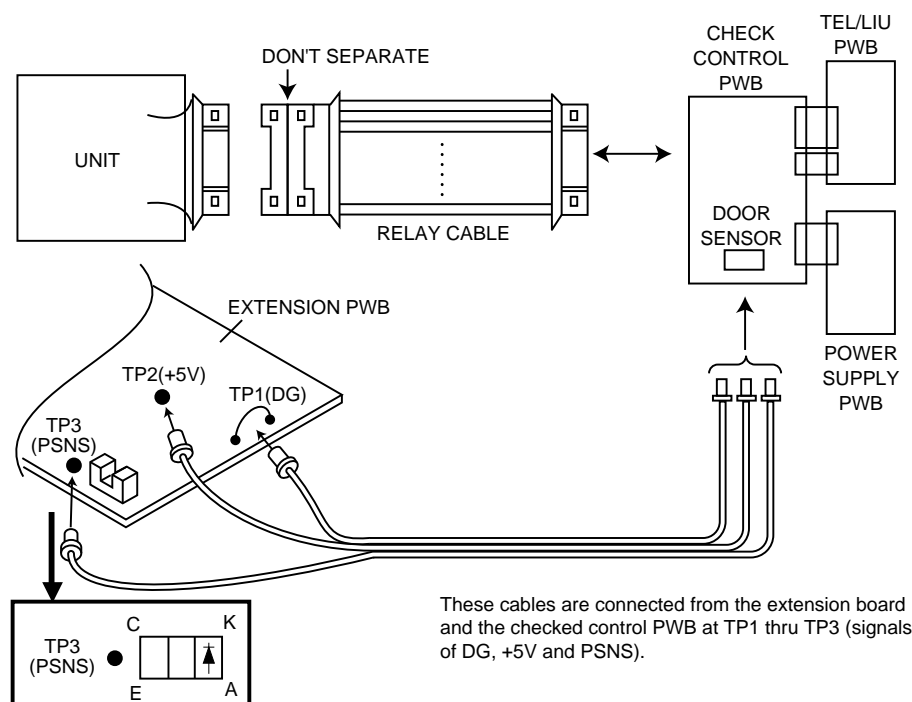

### 3. Shading paper

The white and black basis is applied to remember the shading waveform. Be sure to perform this operation when replacing the battery or replacing the control PWB. Execute in the shading mode of DIAG mode.


#### UX-108 SERIES SHADING WAVE MEMORY STANDARD PAPER (PSHEZ3354SCZZ)




## [2] IC signal name

### CONTROL PWB UNIT


IC9: VHiNJM2904M-2 (NJM2904M)

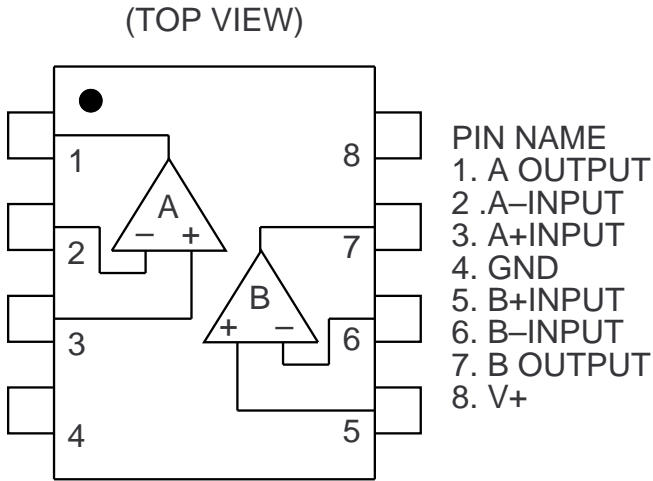


IC5: VHiW24257S7LL (W24257S-70LLT)

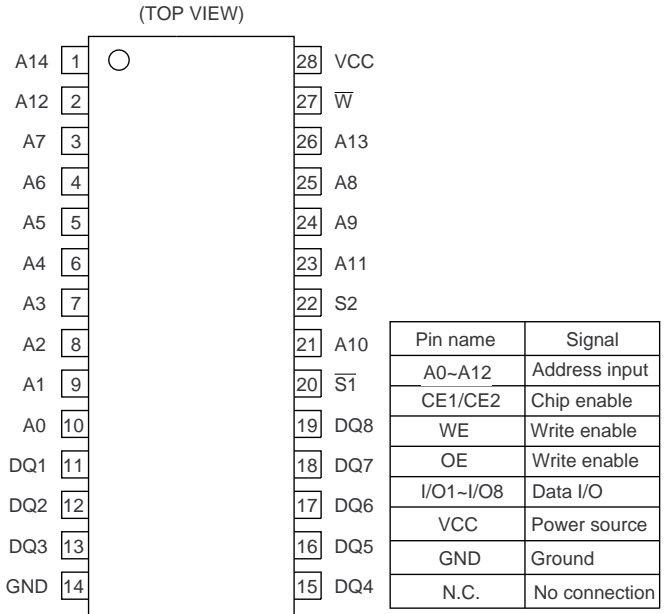


IC10: VHiULN2003ANS (ULN2003A)

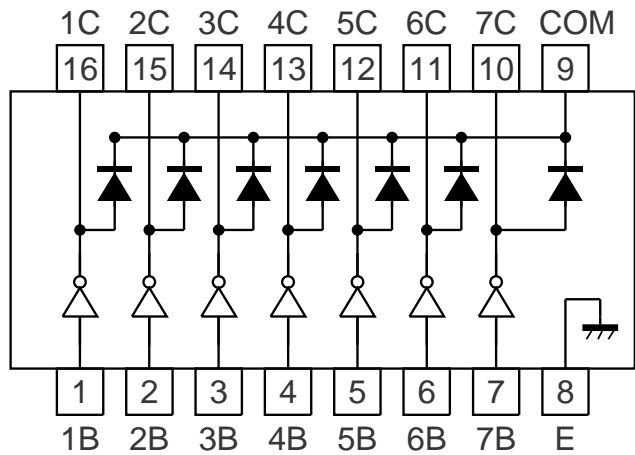


IC6: VHiHCF4053M1T (HCF4053B)

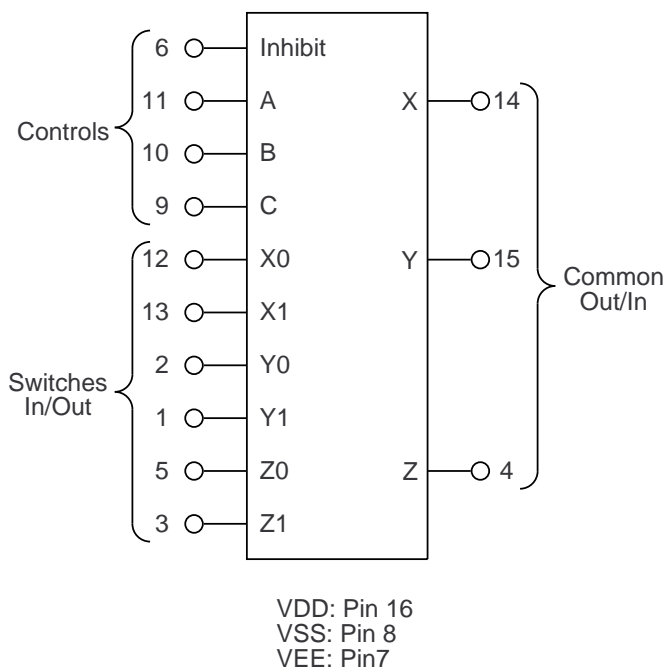


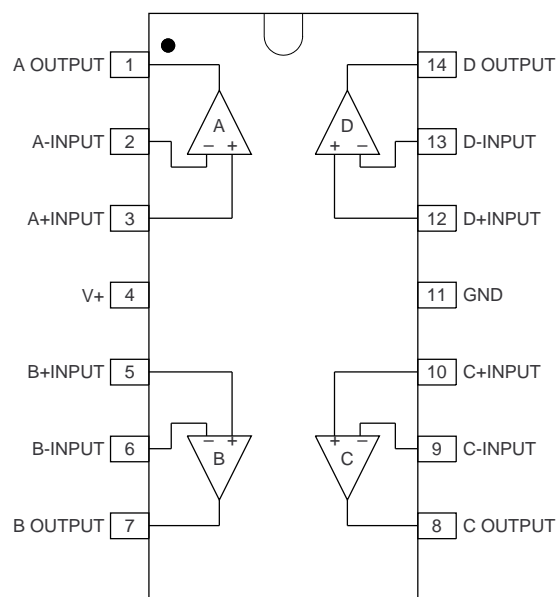


**IC3: VHiHCF4066M1T (HCF4066)**

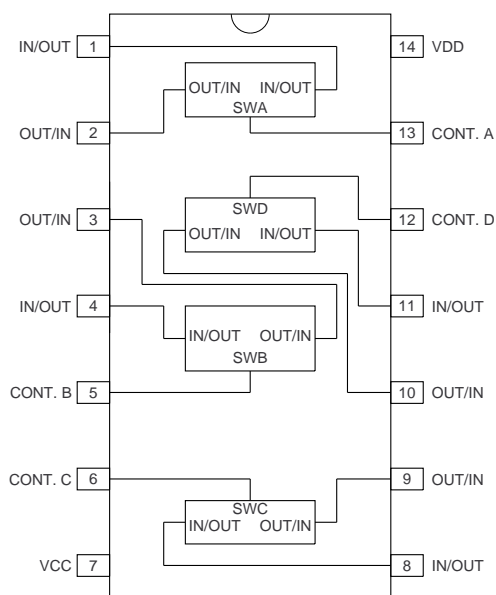


**IC100: VHiPST596CMT1 (PST596CNR)**

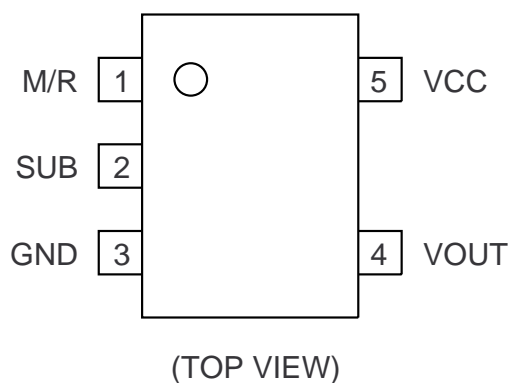


**IC7: VHi27C01012TI (27C010)  
EP-ROM**

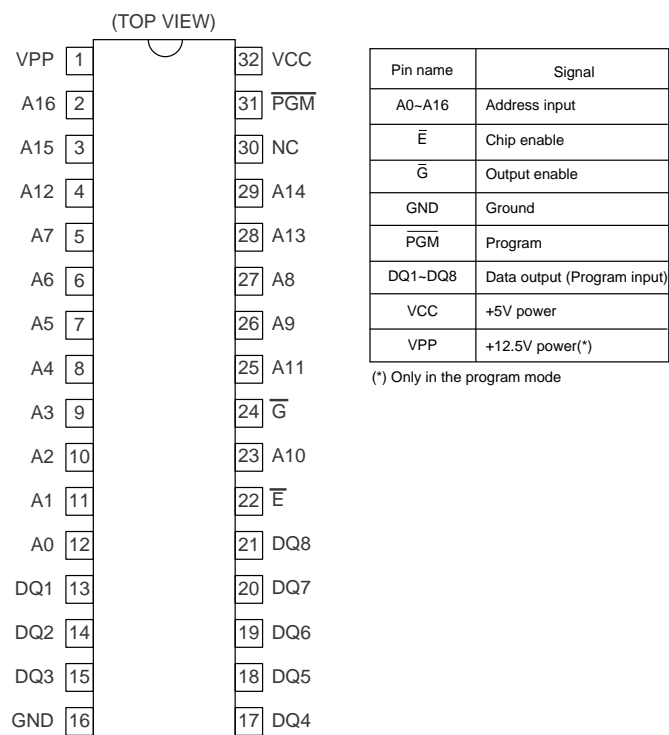


**IC1: VHiMC34119DR2 (MC34119DR2)**

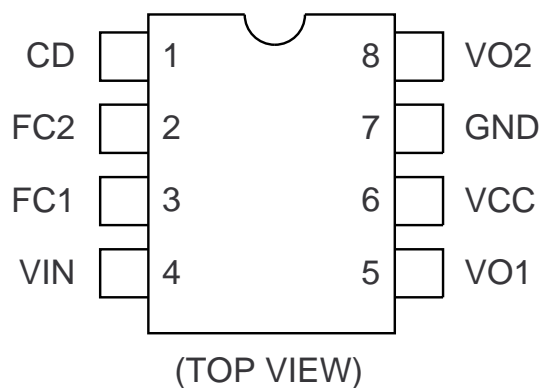

IC4: VHiR96XFC3CID (96DFXL-CID)

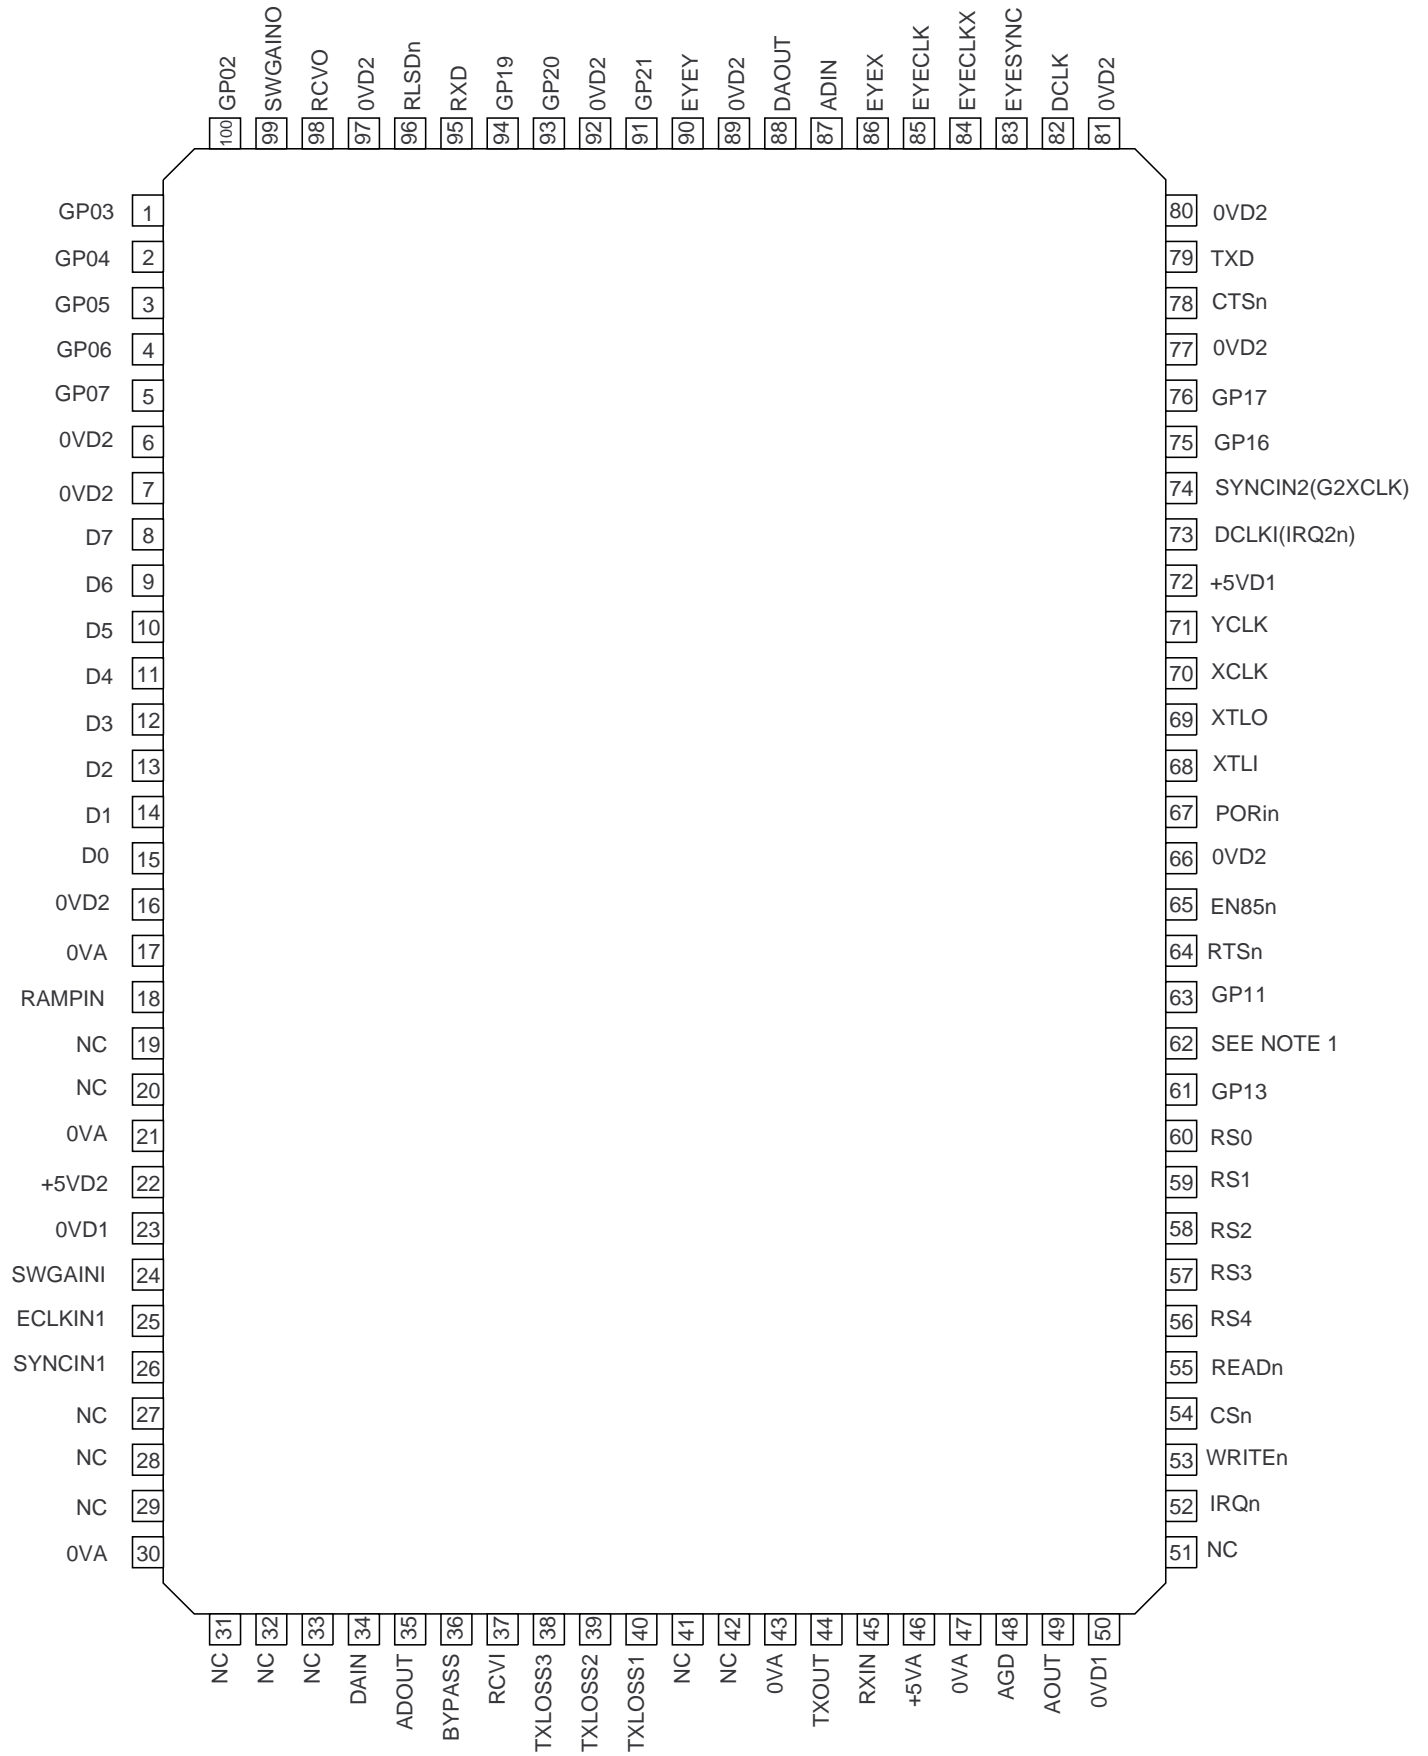

IC2: VHiR96XFC3CID (XFC3)

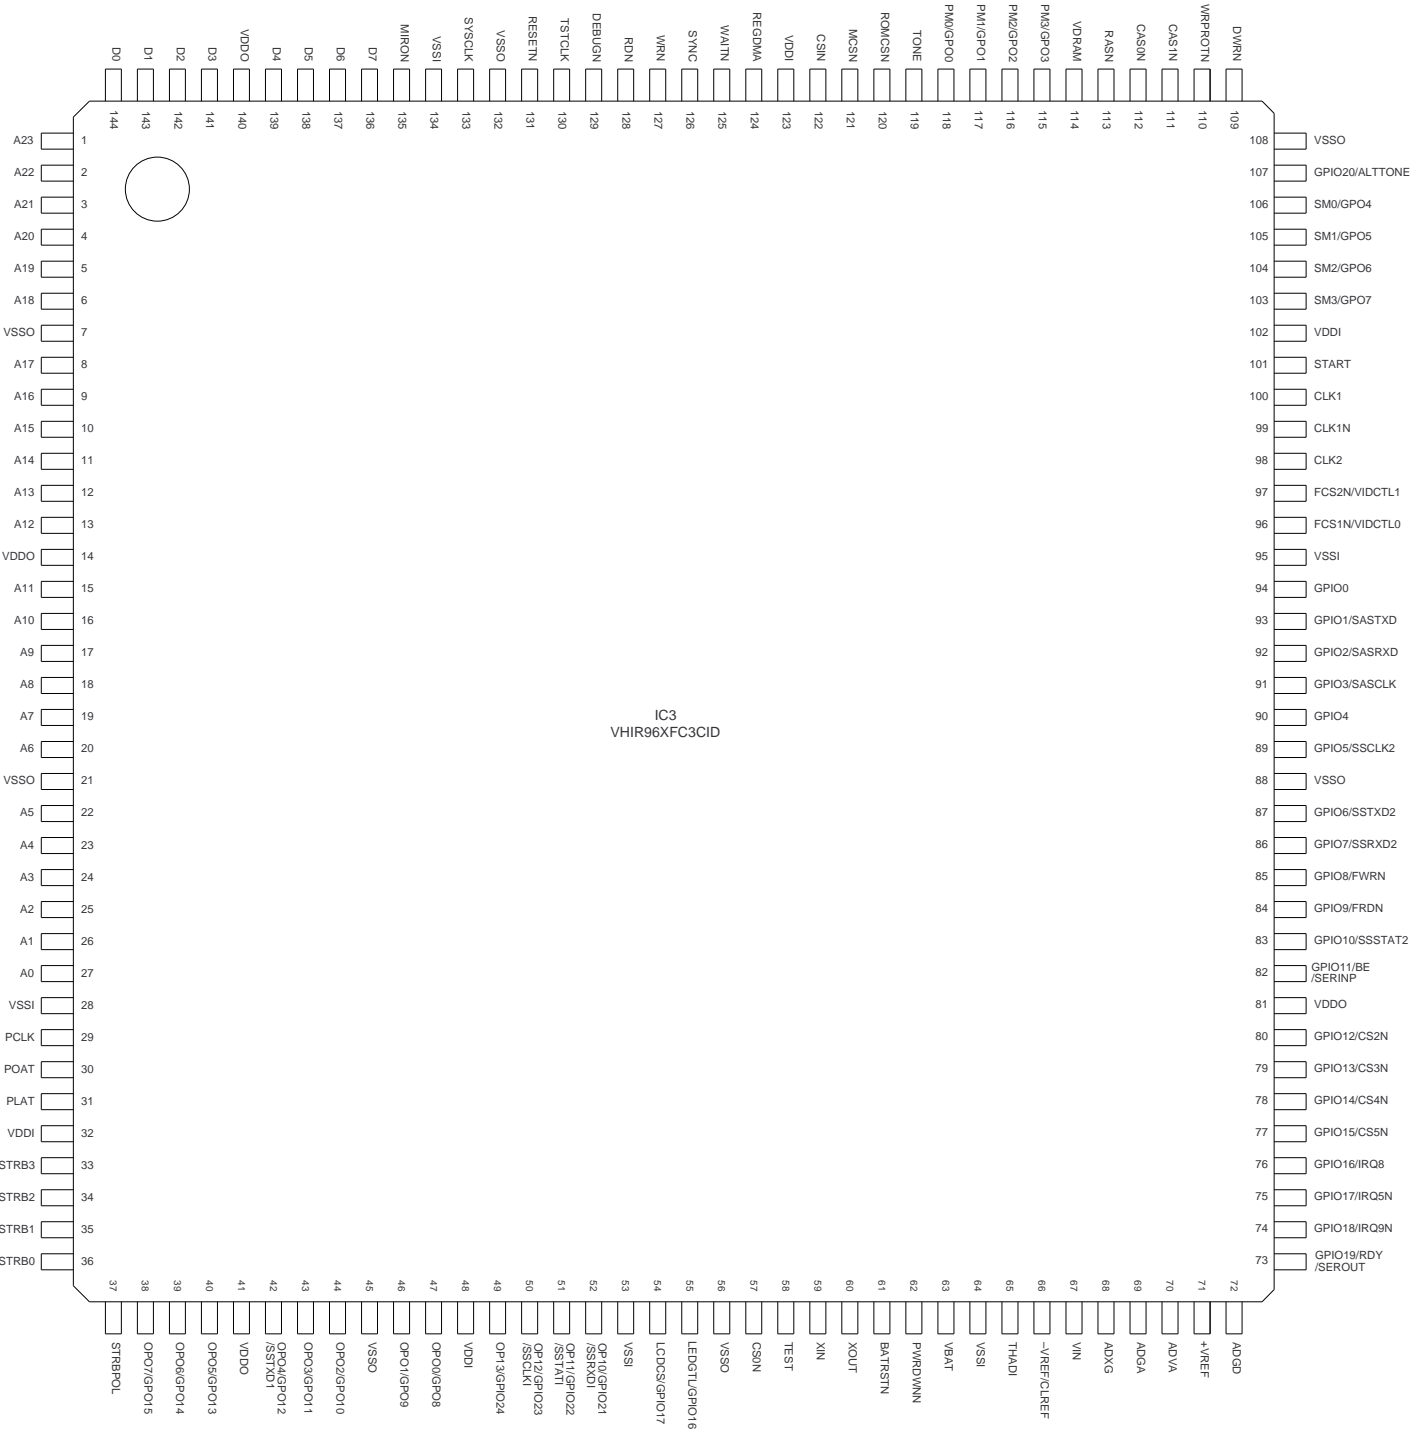

# SHARP PARTS GUIDE


## MODEL UX-108

### CONTENTS

1	Cabinet, etc.	6	Control PWB unit
2	Upper cabinet	7	TEL-Liu PWB unit
3	Document guide upper	8	Power supply PWB unit
4	Drive unit	50	Hardware parts
5	Packing material & Accessories	■	Index

Because parts marked with "⚠" is indispensable for the machine safety maintenance and operation, it must be replaced with the parts specifi to the product specification.


[1] Cabinet, etc.

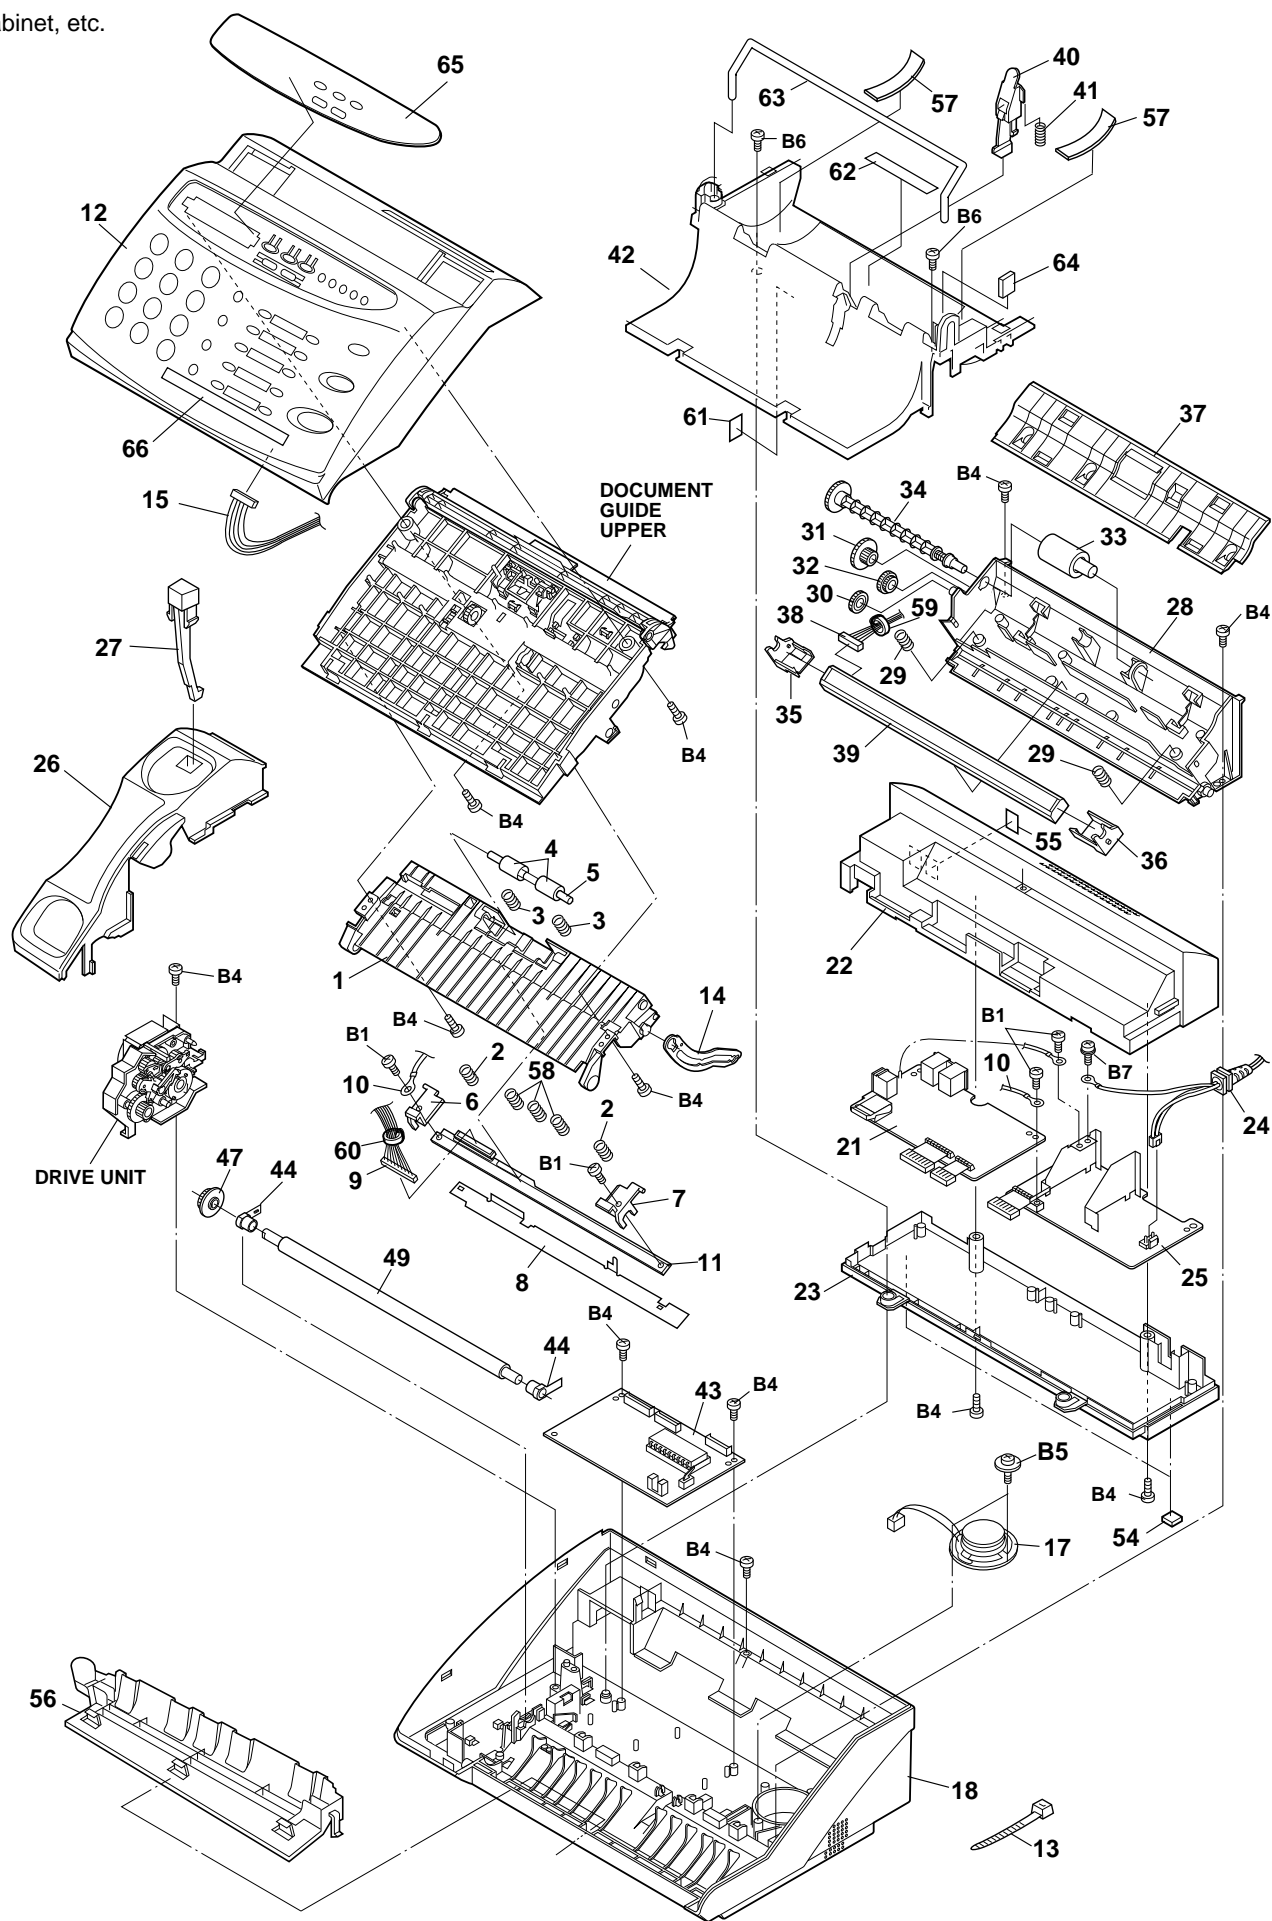




[illegible]

[2] Upper cabinet

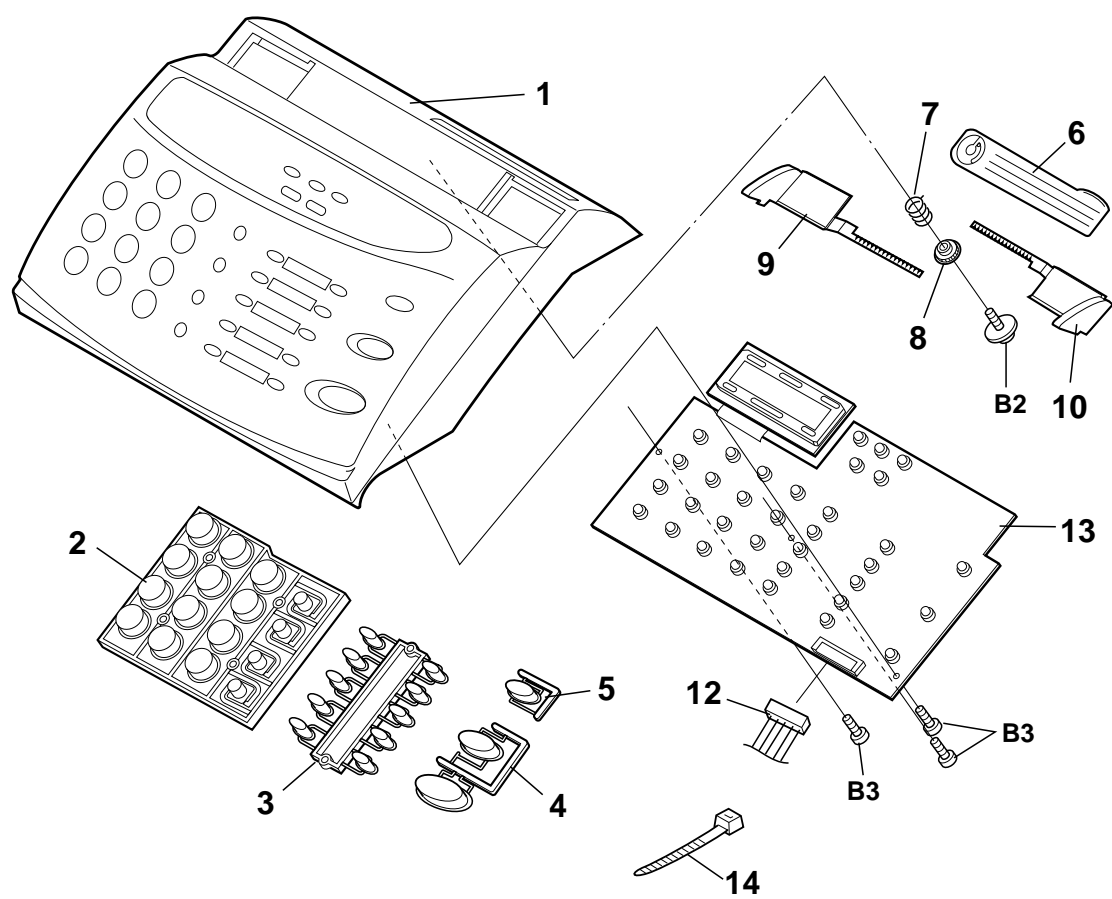


[3] Document guide upper

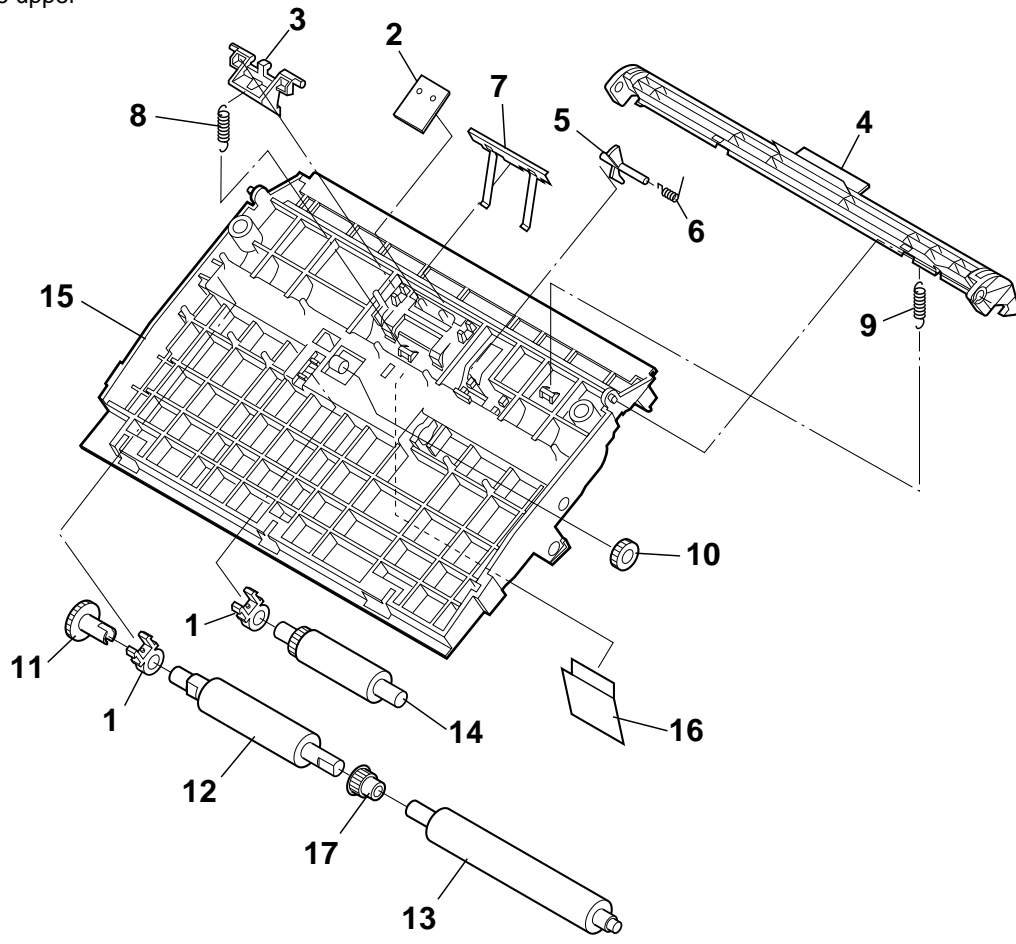


[illegible]

[4] Drive unit

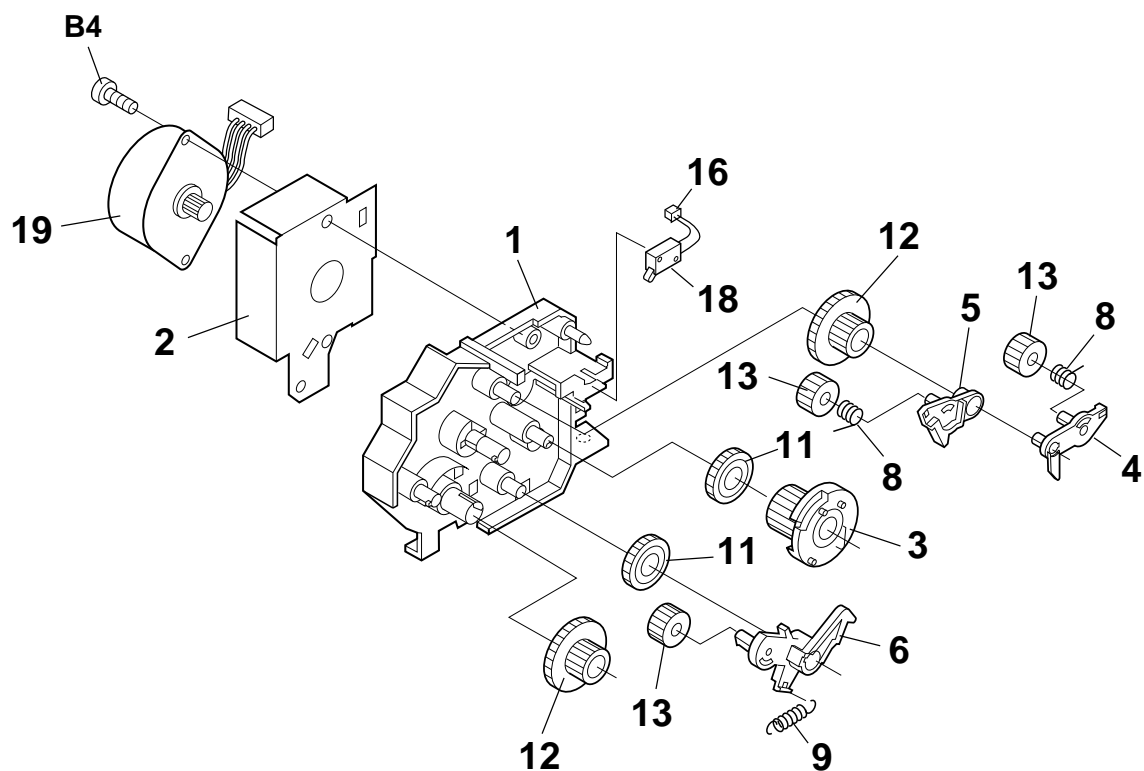

[5] Packing material & Accessories

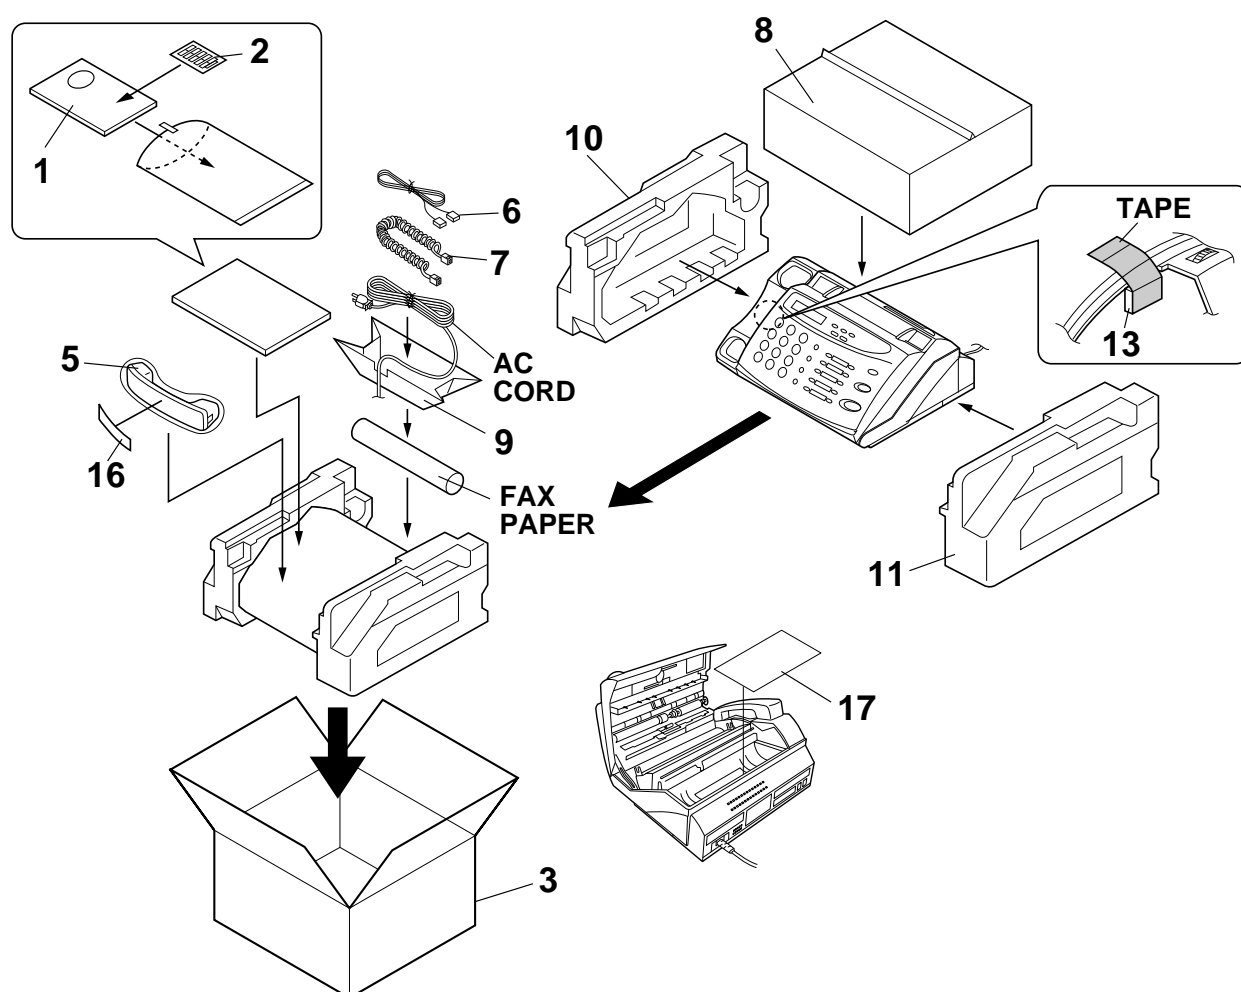

[illegible]

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[6] Control PWB unit					
1	UBATZ6441CCMM	AE	N	B	Battery(CR2032) [BAT1]
2	VCEAGA1HW105M	AB		C	Capacitor(50WV 1μF) [C1]
3	VCEAGA1HW475M	AA		C	Capacitor(50WV 4.7μF) [C2]
4	VCEAGA1EW476M	AA		C	Capacitor(25WV 47μF) [C3]
5	VCEAGA1HW475M	AA		C	Capacitor(50WV 4.7μF) [C4]
6	VCEAGA1HW106M	AA		C	Capacitor(50WV 10μF) [C5]
7	VCEAGA1HW106M	AA		C	Capacitor(50WV 10μF) [C6]
8	VCEAGA1EW476M	AA		C	Capacitor(25WV 47μF) [C7]
9	VCEAGA1HW107M	AA		C	Capacitor(50WV 100μF) [C8]
10	VCEAGA1HW106M	AA		C	Capacitor(50WV 10μF) [C9]
11	VCEAGA1HW226M	AB		C	Capacitor(50WV 22μF) [C10]
12	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C100]
13	VCCCTV1HH270J	AC		C	Capacitor(50WV 27PF) [C101]
14	VCCCTV1HH270J	AC		C	Capacitor(50WV 27PF) [C102]
15	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C104]
16	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C105]
17	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C106]
18	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C107]
19	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C108]
20	VCCSTV1HL331J	AA		C	Capacitor(50WV 330PF) [C109]
21	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C110]
22	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C111]
23	VCKYTV1EB104K	AA		C	Capacitor(25WV 0.1μF) [C112]
24	VCKYTV1HB103K	AB		C	Capacitor(50WV 0.01μF) [C113]
25	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C114]
26	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C115]
27	VCCSTV1HL391J	AA		C	Capacitor(50WV 390PF) [C116]
28	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C117]
29	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C118]
30	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C119]
31	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C120]
32	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C121]
33	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C122]
34	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C123]
35	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C124]
36	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C125]
37	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C126]
38	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C127]
39	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C128]
40	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C129]
41	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C130]
42	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C131]
43	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C132]
44	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C133]
45	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C134]
46	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C135]
47	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C136]
48	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C138]
49	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C139]
50	VCCCTV1HH220J	AA		C	Capacitor(50WV 22PF) [C140]
51	VCCCTV1HH150J	AA		C	Capacitor(50WV 15PF) [C141]
52	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C142]
53	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C143]
54	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C145]
55	VCKYTV1EB104K	AA		C	Capacitor(25WV 0.1μF) [C146]
56	VCKYTV1EB104K	AA		C	Capacitor(25WV 0.1μF) [C147]
57	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [C148]
58	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C149]
59	VCKYTV1HB103K	AB		C	Capacitor(50WV 0.01μF) [C150]
60	VCCCTV1HH180J	AA		C	Capacitor(50WV 18PF) [C151]
61	VCKYTV1HB472K	AA		C	Capacitor(50WV 4700PF) [C152]
62	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C153]
63	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C154]
64	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C155]
65	VCCCTV1HH180J	AA		C	Capacitor(50WV 18PF) [C156]
66	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C157]
67	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C158]
68	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C159]
69	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C160]
70	VCCCTV1HH101J	AA		C	Capacitor(50WV 100PF) [C161]
71	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C162]
72	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C163]
73	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C164]
74	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C165]
75	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C166]
76	VCKYTV1HF104Z	AA		C	Capacitor(50WV 0.1μF) [C167]
77	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C168]
78	VCCSTV1HL102J	AA		C	Capacitor(50WV 1000PF) [C169]
79	VCKYTV1HB681K	AA		C	Capacitor(50WV 680PF) [C170]
80	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C171]

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[6] Control PWB unit					
81	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C172]
82	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C173]
83	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C176]
84	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C177]
85	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C178]
86	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C179]
87	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C180]
88	VCCCTV1HH220J	AA		C	Capacitor(50WV 22PF) [C181]
89	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C182]
90	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C183]
91	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C184]
92	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C185]
93	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C186]
94	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C187]
95	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C188]
96	VCCSTV1HL102J	AA		C	Capacitor(50WV 1000PF) [C189]
97	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C190]
98	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C191]
99	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C192]
100	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C193]
101	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C194]
102	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C195]
103	VCCCTV1HH820J	AA		C	Capacitor(50WV 82PF) [C196]
104	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C197]
105	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C199]
106	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C200]
107	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C203]
108	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C204]
109	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C205]
110	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C206]
111	VCKYTQ1HF104Z	AA		C	Capacitor(50WV 0.1μF) [C207]
112	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C208]
113	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C209]
114	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C210]
115	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C211]
116	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C212]
117	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C213]
118	QCNCM7014SC0G	AB		C	Connector(7pin) [CNCIS]
119	QCNCM2442SC0B	AB		C	Conector(2pin) [CNCISW]
120	QCNCW2500SC1B	AF		C	Connector(12Pin) [CNLIUA]
121	QCNCW2500SC0D	AG	N	C	Connector(4pin) [CNLIUB]
122	QCNCM7014SC0F	AB		C	Connector(6pin) [CNMT]
123	QCNCM7014SC1E	AC		C	Connector(15pin) [CNPJ]
124	QCNCW2500SC1J	AD	N	C	Connector(10pin) [CNPW]
125	QCNCM2401SC0B	AA		C	Connector(2pin) [CNSP]
126	QCNCM7014SC1F	AD		C	Connector(16pin) [CNTH]
127	VHEMPZP4748A1	AA	N	B	Zener diode(MPZP4748) [D1]
128	VHD1SS355/-1	AB		B	Diode(1SS355) [D100]
129	VHDB705D/-1	AD		B	Diode(RB705D) [D101]
130	VHVICPS07/-1	AA		B	Varistor(ICP-S07) [FU100]
131	VHIMC34119DR2	AH		B	IC(MC34119DR2) [IC1]
132	VHIR96XFC3CID	BR	N	B	IC(XFC3) [IC2][Within IC2 and IC4 pair]
133	VHIHCF4066M1T	AF	N	B	IC(HCF4066M) [IC3]
134	VHIR96XFC3CID	BR	N	B	IC(R96DFXL-CID) [IC4][Within IC2 and IC4 pair]
135	VHIW24257S7LL	AP	N	B	IC(W24257S-70LLT) [IC5]
136	VHIHCF4053M1T	AG	N	B	IC(HCF4053M) [IC6]
137	QSOCZ2051SC32	AC		C	IC socket(32pin) [IC7]
	VHI27010FXA0E	AY	N	B	IC,EPROM(1M) [IC7]
139	VHINJM2902M-1	AF		B	IC(NJM2902M) [IC8]
140	VHINJM2904M-2	AG	N	B	IC(NJM2904M) [IC9]
141	VHIULN2003ANS	AE		B	IC(ULN2003ANS) [IC10]
142	VHIPST596CMT1	AF		B	IC(PST596CNR) [IC100]
143	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [L100]
144	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [L101]
145	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [L102]
146	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [L103]
147	RCILZ2104SCZZ	AK		C	Coil(Z2104) [L104]
148	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [L105]
149	VS2SD1858Q2-1	AE	N	B	Transistor(2SD1858) [Q1]
150	VS2SC2412KS-1	AB		B	Transistor(2SC2412KS) [Q101]
151	VS2SA1037KS-1	AB		B	Transistor(2SA1037KS) [Q102]
152	VSBCR133///-1	AA	N	B	Transistor(BCR133) [Q103]
153	VRS-VV3AB270J	AA	N	C	Resistor(1W 27Ω ±5%) [R1]
154	VRD-RC2EY100J	AA		C	Resistor(1/4W 10Ω ±5%) [R2]
155	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R101]
156	VRS-TS2AD121J	AA		C	Resistor(1/10W 120Ω ±5%) [R102]
157	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R103]
158	VRS-TS2AD101J	AA		C	Resistor(1/10W 100Ω ±5%) [R104]
159	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R105]
160	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R106]

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[6] Control PWB unit					
161	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R107]
162	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R108]
163	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R109]
164	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R110]
165	VRS-TS2AD302J	AA		C	Resistor(1/10W 3KΩ ±5%) [R111]
166	VRS-TS2AD154J	AA		C	Resistor(1/10W 150KΩ ±5%) [R112]
167	VRSTS2AD4752F	AA		C	Resistor(1/10W 47.5KΩ ±1%) [R113]
168	VRS-TS2AD104J	AA		C	Resistor(1/10W 100KΩ ±5%) [R114]
169	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R115]
170	VRS-TS2AD3R0J	AA		C	Resistor(1/10W 3.0Ω ±5%) [R116]
171	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R117]
172	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R118]
173	VRS-TS2AD201J	AG		C	Resistor(1/10W 200Ω ±5%) [R119]
174	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R121]
175	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R122]
176	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R123]
177	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R124]
178	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R127]
179	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R128]
180	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R129]
181	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R130]
182	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R131]
183	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R132]
184	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R133]
185	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R134]
186	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R135]
187	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R136]
188	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R137]
189	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R138]
190	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R139]
191	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R140]
192	VRS-TS2AD104J	AA		C	Resistor(1/10W 100KΩ ±5%) [R142]
193	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R143]
194	VRS-TS2AD224J	AA		C	Resistor(1/10W 220KΩ ±5%) [R144]
195	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R145]
196	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R146]
197	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R147]
198	VRS-TS2AD303J	AA		C	Resistor(1/10W 30KΩ ±5%) [R148]
199	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R149]
200	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R150]
201	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R151]
202	VRS-TS2AD100J	AA		C	Resistor(1/10W 10.0Ω ±5%) [R152]
203	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R153]
204	VRS-TS2AD100J	AA		C	Resistor(1/10W 10.0Ω ±5%) [R154]
205	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R155]
206	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R156]
207	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R157]
208	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R158]
209	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R159]
211	VRS-TS2AD104J	AA		C	Resistor(1/10W 100KΩ ±5%) [R161]
212	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R162]
213	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R163]
214	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R164]
215	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R165]
216	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R166]
217	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R167]
218	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R168]
219	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R169]
220	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R170]
221	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R171]
222	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R172]
223	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R173]
224	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R174]
225	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R175]
226	VRS-TS2AD102J	AA		C	Resistor(1/10W 1KΩ ±5%) [R176]
227	VRS-TS2AD102J	AA		C	Resistor(1/10W 1KΩ ±5%) [R178]
228	VRS-TS2AD102J	AA		C	Resistor(1/10W 1KΩ ±5%) [R179]
229	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R180]
230	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R181]
231	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R182]
232	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R183]
233	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R184]
234	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R185]
235	VRS-TS2AD106J	AA		C	Resistor(1/10W 10MΩ ±5%) [R186]
236	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R187]
237	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R188]
238	VRS-TS2AD223J	AA		C	Resistor(1/10W 22KΩ ±5%) [R189]
239	VRS-TS2AD102J	AA		C	Resistor(1/10W 1KΩ ±5%) [R194]
240	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R195]
241	VRS-TS2AD203J	AA		C	Resistor(1/10W 20KΩ ±5%) [R197]



NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[6] Control PWB unit					
242	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R198]
243	VRS-TS2AD302J	AA		C	Resistor(1/10W 3KΩ ±5%) [R199]
244	VRSTS2AD1183F	AA		C	Resistor(1/10W 118KΩ ±1%) [R200]
245	VRS-TS2AD822J	AA		C	Resistor(1/10W 8.2KΩ ±5%) [R201]
246	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R202]
247	VRS-TS2AD332J	AA		C	Resistor(1/10W 3.3KΩ ±5%) [R203]
248	VRS-TS2AD512J	AA		C	Resistor(1/10W 5.1KΩ ±5%) [R204]
249	VRS-TS2AD152J	AA		C	Resistor(1/10W 1.5KΩ ±5%) [R205]
250	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R206]
251	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R207]
252	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R208]
253	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R209]
254	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R210]
255	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R211]
256	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R212]
257	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R213]
258	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R214]
259	VRS-TS2AD332J	AA		C	Resistor(1/10W 3.3KΩ ±5%) [R216]
260	VRS-TS2AD133J	AA		C	Resistor(1/10W 13KΩ ±5%) [R217]
261	VRSTS2AD1742F	AA		C	Resistor(1/10W 17.4KΩ ±1%) [R218]
262	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R219]
263	VRSTS2AD8662F	AA		C	Resistor(1/10W 86.6KΩ ±1%) [R220]
264	VRSTS2AD8662F	AA		C	Resistor(1/10W 86.6KΩ ±1%) [R221]
265	VRS-TS2AD333J	AA		C	Resistor(1/10W 33KΩ ±5%) [R222]
266	VRS-TS2AD302J	AA		C	Resistor(1/10W 3KΩ ±5%) [R223]
267	VRS-TS2AD333J	AA		C	Resistor(1/10W 33KΩ ±5%) [R224]
268	VRS-TS2AD303J	AA		C	Resistor(1/10W 30KΩ ±5%) [R225]
269	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R226]
270	VRS-TS2AD303J	AA		C	Resistor(1/10W 30KΩ ±5%) [R228]
271	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R234]
272	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R235]
273	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R236]
274	VRS-TS2AD473J	AA		C	Resistor(1/10W 47KΩ ±5%) [R237]
275	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R238]
276	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R239]
277	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R240]
278	VRS-TS2AD303J	AA		C	Resistor(1/10W 30KΩ ±5%) [R241]
279	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R242]
280	VRS-TS2AD152J	AA		C	Resistor(1/10W 1.5KΩ ±5%) [R243]
281	VRS-TS2AD473J	AA		C	Resistor(1/10W 47KΩ ±5%) [R244]
282	VRS-TS2AD562J	AA		C	Resistor(1/10W 5.6KΩ ±5%) [R245]
283	VRS-TS2AD333J	AA		C	Resistor(1/10W 33KΩ ±5%) [R247]
284	VRS-TS2AD303J	AA		C	Resistor(1/10W 30KΩ ±5%) [R248]
285	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [R249]
286	VRS-TS2AD332J	AA		C	Resistor(1/10W 3.3KΩ ±5%) [R250]
287	VRS-TS2AD333J	AA		C	Resistor(1/10W 33KΩ ±5%) [R251]
288	VRS-TS2AD271J	AA		C	Resistor(1/10W 270Ω ±5%) [R252]
289	VRS-TS2AD201J	AG		C	Resistor(1/10W 200Ω ±5%) [R253]
290	VRS-TS2AD562J	AA		C	Resistor(1/10W 5.6KΩ ±5%) [R254]
291	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R255]
292	VRS-TS2AD474J	AA		C	Resistor(1/10W 470KΩ ±5%) [R256]
293	VRS-TS2AD203J	AA		C	Resistor(1/10W 20KΩ ±5%) [R257]
294	VRS-TS2AD223J	AA		C	Resistor(1/10W 22KΩ ±5%) [R258]
295	RMPTY8103SCJF	AF		C	Block resistor(1/8W 10KΩ ±1%) [RA1]
296	RMPTW4271SCJF	AD		C	Block resistor(1/8W 270Ω ±1%) [RA2]
297	RMPTW4271SCJF	AD		C	Block resistor(1/8W 270Ω ±1%) [RA3]
298	RMPTW4271SCJF	AD		C	Block resistor(1/8W 270Ω ±1%) [RA4]
299	RMPTW4271SCJF	AD		C	Block resistor(1/8W 270Ω ±1%) [RA5]
300	RMPTW4271SCJF	AD		C	Block resistor(1/8W 270Ω ±1%) [RA6]
301	RMPTW4471SCJF	AD		C	Block resistor(1/8W 470Ω ±1%) [RA7]
302	QSW-M2259XHZZ	AF	N	B	Door sensor [SW1]
303	RCRSP2080SCZZ	AF		B	Crystal(24.00014MHz) [X1]
304	RCRSB0297AFZZ	AD		B	Crystal(32.768KHz) [X2]
305	LHLDB2174FFZZ	AF	N	C	Battery holder
	(Unit)				
901	CPWBX2945FF51	BQ	N	E	Control PWB unit(Without ROM)
[7] TEL/Liu PWB unit					
1	VHVRA501PV6-1	AE		B	Varistor(RA-501P-V6-2) [AR1]
2	VHVRA501PV6-1	AE		B	Varistor(RA-501P-V6-2) [AR2]
3	QCNW-4753XHZZ	AE		C	Cable [ARG]
4	VCEAGA1HW106M	AA		C	Capacitor(50WV 10μF) [C1]
5	VCQYNA1HM334K	AD		C	Capacitor(50WV 0.33μF) [C2]
6	RC-FZ2020SCZZ	AE		C	Capacitor(250WV 1μF) [C3]
7	RC-FZ3028SCZZ	AG		C	Capacitor(250WV 0.56μF) [C4]
8	VCEAGA1EW476M	AA		C	Capacitor(25WV 47μF) [C5]

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[7] TEL/Liu PWB unit					
9	VCEAGA1HW225M	AA		C	Capacitor(50WV 2.2μF) [C6]
10	VCEAGA1EW476M	AA		C	Capacitor(25WV 47μF) [C7]
11	VCEAGA1HW226M	AB		C	Capacitor(50WV 22μF) [C8]
12	VCEAGA1HW225M	AA		C	Capacitor(50WV 2.2μF) [C9]
13	VCEAGA1HW106M	AA		C	Capacitor(50WV 10μF) [C10]
14	VCEAGA1HW475M	AA		C	Capacitor(50WV 4.7μF) [C11]
15	VCKYTQ1HB393K	AA		C	Capacitor(50WV 0.039μF) [C101]
16	VCKYTQ1HB223K	AB		C	Capacitor(50WV 0.022μF) [C102]
17	VCKYTQ1HB223K	AB		C	Capacitor(50WV 0.022μF) [C103]
18	VCKYTQ1HB683K	AB		C	Capacitor(50WV 0.068μF) [C105]
19	VCKYTV1HB122K	AB		C	Capacitor(50WV 1200PF) [C106]
20	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C107]
21	VCKYTQ1HB104K	AB		C	Capacitor(50WV 0.1μF) [C108]
22	VCKYTQ1HB104K	AB		C	Capacitor(50WV 0.1μF) [C109]
23	VCKYTV1HB473K	AA		C	Capacitor(50WV 470PF) [C110]
24	VCKYTV1HB821K	AA		C	Capacitor(50WV 820PF) [C111]
25	VCKYTV1HB473K	AA		C	Capacitor(50WV 470PF) [C112]
26	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C114]
27	VCKYTV1HB332K	AA		C	Capacitor(50WV 3300PF) [C116]
28	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C118]
29	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C119]
30	VCKYTV1HB102K	AA		C	Capacitor(50WV 1000PF) [C120]
31	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C121]
32	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C122]
33	VCKYTV1CF105Z	AB		C	Capacitor(16WV 1μF) [C123]
34	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C124]
35	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C125]
36	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C126]
37	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C127]
38	VCKYTV1HB222K	AA		C	Capacitor(50WV 2200PF) [C128]
39	VCKYTV1HB221K	AA		C	Capacitor(50WV 220PF) [C129]
40	VCKYTV1EF104Z	AA		C	Capacitor(25WV 0.1μF) [C131]
41	VCKYTV1HB682K	AA		C	Capacitor(50WV 6800PF) [C132]
42	VCKYTV1HB472K	AA		C	Capacitor(50WV 4700PF) [C133]
43	RRLYZ3427SCZZ	AN		B	Relay [CML]
44	QJAKZ2070SC0D	AF		C	Jack [CNHJ]
45	QCNCM2548SC1B	AH	N	C	Connector(12pin) [CNLIUA]
46	QCNCM2548SC0D	AD	N	C	Connector(4pin) [CNLIUB]
47	QJAKZ2069SCF0	AF	N	C	Jack [CNLNJ]
48	VHDDSS131/-1	AA		B	Diode(1SS131) [D1]
49	VHDDSS131/-1	AA		B	Diode(1SS131) [D2]
50	VHDDSS133/-1	AA		B	Diode(1SS133) [D3]
51	VHDDSS133/-1	AA		B	Diode(1SS133) [D4]
52	VHINJM2904M-2	AG	N	B	IC(NJM2904) [IC101]
53	VHIMC1458DTR/	AD	N	B	IC(MC1458DTR) [IC102]
54	VHIMC1458DTR/	AD	N	B	IC(MC1458DTR) [IC103]
55	VRS-TP2BD000J	AA		C	Resistor(1/8W 0Ω ±5%) [JP101]
56	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [JP102]
57	VRS-TP2BD000J	AA		C	Resistor(1/8W 0Ω ±5%) [JP103]
58	VRS-TS2AD000J	AA		C	Resistor(1/10W 0Ω ±5%) [JP106]
59	RCILF2125SCZZ	AD	N	C	Coil(4.7mH) [L1]
60	RCILF2125SCZZ	AD	N	C	Coil(4.7mH) [L2]
61	RFILN2024XHZZ	AG		C	Coil(TR0703-600Y) [L4A]
62	RFILN2024XHZZ	AG		C	Coil(TR0703-600Y) [L4B]
63	RFILN2024XHZZ	AG		C	Coil(TR0703-600Y) [L6]
64	RFILN2024XHZZ	AG		C	Coil(TR0703-600Y) [L7]
65	RFILN2024XHZZ	AG		C	Coil(TR0703-600Y) [L8]
66	VHPTLP627/-1	AH		B	Photo coupler(TLP627) [PC1]
67	VHPTLP521-1BL	AE		B	Photo coupler(TLP521) [PC2]
68	VHPTLP627/-1	AH		B	Photo coupler(TLP627) [PC3]
69	VHPTLP521-1BL	AE		B	Photo coupler(TLP521) [PC6]
70	VSBS108////-1	AE		B	FET(BS108) [Q1]
71	VSBCR133///-1	AA	N	B	Transistor(BCR133) [Q101]
72	VSBCR133///-1	AA	N	B	Transistor(BCR133) [Q103]
73	VS2SC2412KR-1	AD		B	Transistor(2SC2412K) [Q104]
74	VSBCR133///-1	AA	N	B	Transistor(BCR133) [Q105]
75	VSBCR133///-1	AA	N	B	Transistor(BCR133) [Q106]
76	VSBCR133///-1	AA	N	B	Transistor(BCR133) [Q107]
77	VRS-HT3DA470J	AA		C	Resistor(2W 47Ω ±5%) [R1]
78	VRD-HT2HY103J	AA		C	Resistor(1/2W 10KΩ ±5%) [R2]
79	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R101]
80	VRS-TS2AD133J	AA		C	Resistor(1/10W 13KΩ ±5%) [R102]
81	VRS-TP2BD150J	AA		C	Resistor(1/8W 15Ω ±5%) [R103]
82	VRS-TP2BD150J	AA		C	Resistor(1/8W 15Ω ±5%) [R106]
83	VRS-TS2AD433J	AA		C	Resistor(1/10W 43KΩ ±5%) [R107]
84	VRS-TS2AD301J	AA		C	Resistor(1/10W 300Ω ±5%) [R108]
85	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R110]
86	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R111]
87	VRS-TS2AD471J	AA		C	Resistor(1/10W 470Ω ±5%) [R112]
88	VRS-TS2AD511J	AA		C	Resistor(1/10W 510Ω ±5%) [R113]

△  
△  
△  
△  
△

NO.	PARTS CODE	PRICE RANK	NEW MARK	PART RANK	DESCRIPTION
[7] TEL/Liu PWB unit					
89	VRS-TS2AD301J	AA		C	Resistor(1/10W 300Ω ±5%) [R114]
90	VRS-TS2AD203J	AA		C	Resistor(1/10W 20KΩ ±5%) [R115]
91	VRS-TS2AD223J	AA		C	Resistor(1/10W 22KΩ ±5%) [R116]
92	VRS-TS2AD911J	AA		C	Resistor(1/10W 910Ω ±5%) [R117]
93	VRS-TS2AD821J	AA		C	Resistor(1/10W 820Ω ±5%) [R118]
94	VRS-TS2AD563J	AA		C	Resistor(1/10W 56KΩ ±5%) [R119]
95	VRS-TS2AD223J	AA		C	Resistor(1/10W 22KΩ ±5%) [R120]
96	VRS-TS2AD223J	AA		C	Resistor(1/10W 22KΩ ±5%) [R121]
97	VRS-TS2AD621J	AA		C	Resistor(1/10W 620Ω ±5%) [R122]
98	VRS-TS2AD133J	AA		C	Resistor(1/10W 13KΩ ±5%) [R123]
99	VRS-TS2AD153J	AA		C	Resistor(1/10W 15KΩ ±5%) [R124]
100	VRS-TS2AD243J	AA		C	Resistor(1/10W 24KΩ ±5%) [R125]
101	VRS-TS2AD822J	AA		C	Resistor(1/10W 8.2KΩ ±5%) [R126]
102	VRS-TS2AD104J	AA		C	Resistor(1/10W 100KΩ ±5%) [R129]
103	VRS-TS2AD151J	AA		C	Resistor(1/10W 150Ω ±5%) [R130]
104	VRS-TS2AD222J	AA		C	Resistor(1/10W 2.2KΩ ±5%) [R131]
105	VRS-TS2AD203J	AA		C	Resistor(1/10W 20KΩ ±5%) [R132]
106	VRS-TS2AD152J	AA		C	Resistor(1/10W 1.5KΩ ±5%) [R133]
107	VRS-TS2AD332J	AA		C	Resistor(1/10W 3.3KΩ ±5%) [R135]
108	VRS-TS2AD563J	AA		C	Resistor(1/10W 56KΩ ±5%) [R136]
109	VRS-TS2AD563J	AA		C	Resistor(1/10W 56KΩ ±5%) [R137]
110	VRS-TS2AD122J	AA		C	Resistor(1/10W 1.2KΩ ±5%) [R139]
111	VRS-TS2AD303J	AA		C	Resistor(1/10W 30KΩ ±5%) [R140]
112	VRS-TS2AD203J	AA		C	Resistor(1/10W 20KΩ ±5%) [R141]
113	VRS-TS2AD103J	AA		C	Resistor(1/10W 10KΩ ±5%) [R142]
114	VRS-TS2AD102J	AA		C	Resistor(1/10W 1KΩ ±5%) [R143]
115	VRS-TS2AD100J	AA		C	Resistor(1/10W 10.0Ω ±5%) [R144]
116	VHDS1ZB60/-1	AC		B	Diode bridge(S1ZB60) [REC1]
117	QSW-Z2263XHZZ	AG	N	B	Hook switch [SW1]
118	RTRNI2142XHZZ	AR		B	Transformer(I2142) [T1]
119	VHEBZX79B30/A	AC		B	Zener diode(BZX79B30V) [ZD1]
120	VHEBZX79B6V8A	AA	N	B	Zener diode(BZX79B6V8) [ZD2]
121	VHEBZX79B30/A	AC		B	Zener diode(BZX79B30V) [ZD3]
122	VHEBZX79B4V7A	AA	N	B	Zener diode(BZX794V7) [ZD6]
123	VHEBZX79B4V7A	AA	N	B	Zener diode(BZX794V7) [ZD7]
124	VHEBZX79B2V4A	AA	N	B	Zener diode(BZX79B2V4) [ZD8]
125	VHEBZX79B2V4A	AA	N	B	Zener diode(BZX79B2V4) [ZD9]
	(Unit)				
901	DCEKL375BFFDE	BL	N	E	TEL/Liu PWB unit
[8] Power supply PWB unit					
1	0CBUGFM104JY/	AF	N	C	Capacitor(CFJC22E104M-XC) [C1]
2	0CBUGFM104JY/	AF	N	C	Capacitor(CFJC22E104M-XC) [C2]
3	0CBUGCU102EJ/	AE	N	C	Capacitor(ECKMNA102KB) [C3]
4	0CBUGCU102EJ/	AE	N	C	Capacitor(ECKMNA102KB) [C4]
5	0CBUGZ1407ZZZ/	AL	N	C	Capacitor(KMF400VB68M) [C5]
6	0CBUGCZ152CR/	AE	N	C	Capacitor(ECKM3A152KBP) [C6]
7	0CBUGZ0782ZZ/	AE	N	C	Capacitor(ECKD3A221KBP) [C7]
8	0CBUGFF472AR/	AB		C	Capacitor(AMZ-472K50) [C8]
9	0CBUGFF683AR/	AD		C	Capacitor(AMZ-683K50) [C9]
10	0CBUGFF102AR/	AB		C	Capacitor(AMZ-102K50) [C10]
11	0CBUGFF102AR/	AB		C	Capacitor(AMZ-102K50) [C11]
12	0CBUGCZ222HP/	AF	N	C	Capacitor(ECKMNA222ME) [C13]
13	0CBUGFF102AR/	AB		C	Capacitor(AMZ-102K50) [C14]
14	0CBUGAE681UG/	AH		C	Capacitor(UPJ1V681MHH1AA) [C15]
15	0CBUGCZ222AD/	AC		C	Capacitor(DD08E222P500V) [C16]
16	0CBUGFF102AR/	AB		C	Capacitor(AMZ-102K50) [C17]
17	0CBUGAC471UM/	AF		C	Capacitor(UPJ1C471MPH6AA) [C18]
18	0CBUGAF1R0HD/	AC		C	Capacitor(UVZ1H010MDH1AA) [C19]
19	0CBUGCZ222HP/	AF	N	C	Capacitor(ECKMNA222ME) [C20]
20	0CBPKZ0194ZZ/	AC		C	Connector(2pin) [CN1]
21	0CBPKZ1105ZZ/	AH		C	Connector(10pin) [CN2]
22	0CBUBC0215D//	AD	N	B	Diode(RL1N4005) [D1]
23	0CBUBC0215D//	AD	N	B	Diode(RL1N4005) [D2]
24	0CBUBC0215D//	AD	N	B	Diode(RL1N4005) [D3]
25	0CBUBC0215D//	AD	N	B	Diode(RL1N4005) [D4]
26	0CBUBC0248AZ/	AD		B	Diode(05NU42) [D5]
27	0CBUBA0003BZ/	AD		B	Diode(1S2076A) [D6]
28	0CBUBC0336AZ/	AL		B	Diode(S3L20U-4004P15) [D7]
29	0CBUBC0302AZ/	AE		B	Diode(SR140) [D8]
30	0CBUBA0003BZ/	AD		B	Diode(1S2076A) [D9]
31	0CBPJCTY1251/	AK		A	Current fuse(2151.25ME600) [F1]
32	0CBPJCTY1251/	AK		A	Current fuse(2151.25ME600) [F2]
33	0CBPZZ0906ZZ/	AH		A	Circuit protect chip(CCP2E100) [F3]
34	0CBBFZ89209Z/	AC		C	Ferrite core(BL01RN1-A62) [FB1]
35	0CBUCB0107AZ/	AQ		B	IC(NJM78M05FA) [IC1]



# Index

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
[C]				
CCNW-4745FF01	1-17	AG	N	C
CPWBX2945FF01	1-43	BQ	N	E
"	6-901	BQ	N	E
[D]				
DCEKL375BFFDE	1-21	BL	N	E
"	7-901	BL	N	E
DCEKP367BXH01	2-13	BH	N	E
DCEKP378BFF01	1-12	BG	N	E
"	2-901	BG	N	E
DUNTK369BFFSG	5-5	AM	N	E
[G]				
GCABA2297XHZZ	2-1	AT	N	D
GCABB2298XHZA	1-18	AT	N	D
GCASP2099XHZZ	1-22	AN	N	C
GCASP2100XHZZ	1-23	AN	N	C
GDAI-2078XHZA	1-26	AH	N	C
GLEGG2068FFZZ	1-54	AA	N	C
[H]				
HPNLH2383FFZA	1-65	AG	N	D
[J]				
JBTN-2216XHZA	2-2	AF	N	C
JBTN-2217XHZA	2-3	AD	N	C
JBTN-2218XHZZ	2-4	AE	N	C
JBTN-2219XHZZ	2-5	AD	N	C
[L]				
LBNDJ2006XHZZ	2-14	AA		C
LBSHP2092XHZZ	1-44	AC	N	C
LBSHP2093XHZZ	3-1	AC	N	C
LFRM-2184XHZZ	1-1	AP	N	C
LFRM-2185XHZZ	1-28	AH	N	C
LFRM-2187XHZZ	4-1	AR	N	C
LHLDB2174FFZZ	6-305	AF	N	C
LHLDW1033CE00	1-13	AA		C
LPLTG2911XHZZ	3-2	AE	N	C
LPLTM2910XHZZ	4-2	AE	N	C
LPLTP2908XHZZ	3-3	AE	N	C
LPLTP2909XHZA	2-6	AE	N	C
LSTPF2049XHZZ	1-14	AD	N	C
LX-BZ2138XHZZ	50-B2	AB		C
LX-BZ2222FFZZ	50-B5	AA	N	C
[M]				
MCAMP2024XHZZ	4-3	AE	N	C
MLEVP2261XHZZ	1-27	AD	N	C
MLEVP2262XHZZ	1-40	AD	N	C
MLEVP2264XHZZ	3-4	AD	N	C
MLEVP2265XHZZ	3-5	AD	N	C
MLEVP2266XHZZ	4-4	AD	N	C
MLEVP2267XHZZ	4-5	AD	N	C
MLEVP2268XHZZ	4-6	AD	N	C
MSPRC2948FFZZ	1-29	AA	N	C
MSPRC2949FFZZ	1-2	AA	N	C
MSPRC2950FFZZ	1-3	AA	N	C
MSPRC2954XHZZ	2-7	AC	N	C
MSPRC2955XHZZ	4-8	AC	N	C
MSPRC2989FFZZ	1-41	AA	N	C
MSPRC3005FFZZ	1-58	AA	N	C
MSPRD2953XHZZ	3-6	AC	N	C
MSPRP2944XHZZ	3-7	AC	N	C
MSPRT2951XHZZ	3-8	AC	N	C
"	3-9	AC	N	C
MSPRT2956XHZZ	4-9	AC	N	C
[N]				
NGERH2379XHZZ	1-30	AC	N	C
"	4-11	AC	N	C
NGERH2380XHZZ	1-31	AC	N	C
"	4-12	AC	N	C
NGERH2382XHZZ	1-47	AC	N	C
NGERH2383XHZZ	3-10	AC	N	C
NGERH2387XHZZ	4-13	AC	N	C
NGERH2392XHZZ	1-32	AC	N	C
NGERH2402XHZZ	3-11	AC	N	C
NGERH2405SCZZ	3-17	AD	N	C
NGERP2318XHZZ	2-8	AD		C
NROLP2334XHZA	1-4	AC	N	C
NROLR2374XHZZ	3-14	AP	N	C
NROLR2375XHZZ	1-33	AL	N	C
NROLR2376XHZZ	1-49	AX	N	C
NROLR2387XHZZ	3-12	AZ	N	C
NROLR2388XHZZ	3-13	AZ	N	C

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
NSFTZ2273XHZZ	1-34	AF	N	C
NSFTZ2281FFZZ	1-5	AB	N	C
[P]				
PCUSK2113FFZZ	5-13	AA	N	C
PGIDP2496XHZZ	1-42	AD	N	C
PGIDP2497XHZZ	1-6	AC	N	C
PGIDP2498XHZZ	1-7	AC	N	C
PGIDP2499XHZZ	1-35	AD	N	C
PGIDP2500XHZZ	1-36	AD	N	C
PGIDP2501XHZA	2-9	AE	N	C
PGIDP2502XHZA	2-10	AE	N	C
PGIDP2503XHZZ	1-56	AD	N	C
PGIDP2504XHZZ	3-15	AF	N	C
PGIDP2505XHZZ	1-37	AF	N	C
PSHEZ3116FFCG	1-55	AB	N	C
PSHEZ3324FFZZ	1-8	AA	N	C
PSHEZ3355XHZZ	3-16	AD	N	C
PSHEZ3362XHZZ	1-57	AD	N	C
PSHEZ3364FFZZ	1-61	AB	N	C
PSHEZ3369FFZZ	1-64	AA	N	C
PWIR-2029FFZZ	1-63	AF	N	C
[Q]				
QACCE2013BMZZ	1-24	AN	N	B
QCNCM2401SC0B	6-125	AA		C
QCNCM2442SC0B	6-119	AB		C
QCNCM2548SC0D	7-46	AD	N	C
QCNCM2548SC1B	7-45	AH	N	C
QCNCM7014SC0F	6-122	AB		C
QCNCM7014SC0G	6-118	AB		C
QCNCM7014SC1E	6-123	AC		C
QCNCM7014SC1F	6-126	AD		C
QCNCW2500SC0D	6-121	AG	N	C
QCNCW2500SC1B	6-120	AF		C
QCNCW2500SC1J	6-124	AD	N	C
QCNW-3976XHAG	5-7	AH		C
QCNW-4649FFZZ	5-6	AG		C
QCNW-4747XHZZ	1-38	AH	N	C
QCNW-4748XHZZ	1-9	AP	N	C
QCNW-4749XHZZ	4-16	AD	N	C
QCNW-4753XHZZ	7-3	AE		C
QCNW-4754XHZZ	1-10	AA	N	C
QCNW-4816XHZZ	1-15	AL	N	C
"	2-12	AL	N	C
QJAKZ2069SCF0	7-47	AF	N	C
QJAKZ2070SC0D	7-44	AF		C
QSOCZ2051SC32	6-137	AC		C
QSW-F2224SCZZ	4-18	AE		B
QSW-M2259XHZZ	6-302	AF	N	B
QSW-Z2263XHZZ	7-117	AG	N	B
[R]				
RC-FZ2020SCZZ	7-6	AE		C
RC-FZ3028SCZZ	7-7	AG		C
RCILF2125SCZZ	7-59	AD	N	C
"	7-60	AD	N	C
RCILZ2104SCZZ	6-147	AK		C
RCORF2063XHZZ	1-59	AF		B
RCORF2064XHZZ	1-60	AF		B
RCRSB0297AFZZ	6-304	AD		B
RCRSP2080SCZZ	6-303	AF		B
RDENT2121XHZZ	1-25	BG	N	E
"	8-901	BG	N	E
RFILN2024XHZZ	7-61	AG		C
"	7-62	AG		C
"	7-63	AG		C
"	7-64	AG		C
"	7-65	AG		C
RHEDZ2054XHZZ	1-11	BP	N	B
RMOTZ2134XHZZ	4-19	BA	N	B
RMPTW4271SCJF	6-296	AD		C
"	6-297	AD		C
"	6-298	AD		C
"	6-299	AD		C
"	6-300	AD		C
RMPTW4471SCJF	6-301	AD		C
RMPTY8103SCJF	6-295	AF		C
RRLYZ3427SCZZ	7-43	AN		B
RTRNI2142XHZZ	7-118	AR		B
RUNTZ2020SCZZ	1-39	BF	N	B
[S]				
SPAKA161AFFZL	5-10	AF	N	D

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
SPAKA162AFFZR	5-11	AF	N	D
SPAKA231AFFZZ	5-9	AB	N	D
SPAKC232AFFZZ	5-3	AH	N	D
SPAKP3385FFZZ	5-8	AB		D
[T]				
TCADZ2621FFZZ	5-17	AA	N	D
TINSG3781FFZZ	5-1		N	D
TLABH4342FFZZ	5-2	AB	N	D
TLABH4607FFZZ	1-62	AB	N	D
TLABM4516FFZZ	5-16	AD	N	D
TLABM4603FFZZ	1-66	AB	N	D
[U]				
UBATZ6441CCMM	6-1	AE	N	B
[V]				
VCCCTV1HH101J	6-29	AA		C
"	6-30	AA		C
"	6-31	AA		C
"	6-48	AA		C
"	6-49	AA		C
"	6-62	AA		C
"	6-68	AA		C
"	6-69	AA		C
"	6-70	AA		C
VCCCTV1HH150J	6-51	AA		C
VCCCTV1HH180J	6-60	AA		C
"	6-65	AA		C
VCCCTV1HH220J	6-50	AA		C
"	6-88	AA		C
VCCCTV1HH270J	6-13	AC		C
"	6-14	AC		C
VCCCTV1HH820J	6-91	AA		C
"	6-92	AA		C
"	6-93	AA		C
"	6-94	AA		C
"	6-95	AA		C
"	6-97	AA		C
"	6-98	AA		C
"	6-99	AA		C
"	6-100	AA		C
"	6-103	AA		C
VCCSTV1HL102J	6-78	AA		C
"	6-96	AA		C
VCCSTV1HL331J	6-20	AA		C
VCCSTV1HL391J	6-27	AA		C
VCEAGA1EW476M	6-4	AA		C
"	6-8	AA		C
"	7-8	AA		C
"	7-10	AA		C
VCEAGA1HW105M	6-2	AB		C
VCEAGA1HW106M	6-6	AA		C
"	6-7	AA		C
"	6-10	AA		C
"	7-4	AA		C
"	7-13	AA		C
VCEAGA1HW107M	6-9	AA		C
VCEAGA1HW225M	7-9	AA		C
"	7-12	AA		C
VCEAGA1HW226M	6-11	AB		C
"	7-11	AB		C
VCEAGA1HW475M	6-3	AA		C
"	6-5	AA		C
"	7-14	AA		C
VCKYTQ1HB104K	7-21	AB		C
"	7-22	AB		C
VCKYTQ1HB223K	7-16	AB		C
"	7-17	AB		C
VCKYTQ1HB393K	7-15	AA		C
VCKYTQ1HB683K	7-18	AB		C
VCKYTQ1HF104Z	6-76	AA		C
"	6-111	AA		C
VCKYTV1CF105Z	6-21	AB		C
"	6-28	AB		C
"	6-32	AB		C
"	6-40	AB		C
"	6-41	AB		C
"	6-42	AB		C
"	6-43	AB		C
"	6-44	AB		C
"	6-54	AB		C
"	6-75	AB		C

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VCKYTV1CF105Z	6-77	AB		C
"	6-80	AB		C
"	7-32	AB		C
"	7-33	AB		C
VCKYTV1EB104K	6-23	AA		C
"	6-55	AA		C
"	6-56	AA		C
VCKYTV1EF104Z	6-12	AA		C
"	6-15	AA		C
"	6-16	AA		C
"	6-17	AA		C
"	6-19	AA		C
"	6-22	AA		C
"	6-25	AA		C
"	6-26	AA		C
"	6-33	AA		C
"	6-34	AA		C
"	6-35	AA		C
"	6-36	AA		C
"	6-38	AA		C
"	6-39	AA		C
"	6-52	AA		C
"	6-58	AA		C
"	6-63	AA		C
"	6-85	AA		C
"	6-90	AA		C
"	6-101	AA		C
"	6-102	AA		C
"	6-107	AA		C
"	6-108	AA		C
"	6-115	AA		C
"	7-20	AA		C
"	7-26	AA		C
"	7-28	AA		C
"	7-31	AA		C
"	7-36	AA		C
"	7-37	AA		C
"	7-40	AA		C
VCKYTV1HB102K	6-18	AA		C
"	6-45	AA		C
"	6-47	AA		C
"	6-64	AA		C
"	6-66	AA		C
"	6-71	AA		C
"	6-72	AA		C
"	6-73	AA		C
"	6-74	AA		C
"	6-82	AA		C
"	6-83	AA		C
"	6-84	AA		C
"	6-86	AA		C
"	6-87	AA		C
"	6-89	AA		C
"	6-104	AA		C
"	6-105	AA		C
"	6-106	AA		C
"	6-109	AA		C
"	6-110	AA		C
"	6-112	AA		C
"	6-113	AA		C
"	6-114	AA		C
"	6-116	AA		C
"	6-117	AA		C
"	7-29	AA		C
"	7-30	AA		C
VCKYTV1HB103K	6-24	AB		C
"	6-59	AB		C
VCKYTV1HB122K	7-19	AB		C
VCKYTV1HB221K	7-39	AA		C
VCKYTV1HB222K	6-37	AA		C
"	6-46	AA		C
"	6-53	AA		C
"	6-67	AA		C
"	6-81	AA		C
"	7-34	AA		C
"	7-35	AA		C
"	7-38	AA		C
VCKYTV1HB332K	7-27	AA		C
VCKYTV1HB472K	6-61	AA		C
"	7-42	AA		C

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VCKYTV1HB473K	7-23	AA		C
"	7-25	AA		C
VCKYTV1HB681K	6-79	AA		C
VCKYTV1HB682K	7-41	AA		C
VCKYTV1HB821K	7-24	AA		C
VCQYNA1HM334K	7-5	AD		C
VHDDSS131//-1	7-48	AA		B
"	7-49	AA		B
VHDDSS133//-1	7-50	AA		B
"	7-51	AA		B
VHDBR705D//-1	6-129	AD		B
VHDS12B60//-1	7-116	AC		B
VHD1SS355//-1	6-128	AB		B
VHEBZX79B2V4A	7-124	AA	N	B
"	7-125	AA	N	B
VHEBZX79B30/A	7-119	AC		B
"	7-121	AC		B
VHEBZX79B4V7A	7-122	AA	N	B
"	7-123	AA	N	B
VHEBZX79B6V8A	7-120	AA	N	B
VHEMPZP4748A1	6-127	AA	N	B
VHIHCF4053M1T	6-136	AG	N	B
VHIHCF4066M1T	6-133	AF	N	B
VHIMC1458DTR/	7-53	AD	N	B
"	7-54	AD	N	B
VHIMC34119DR2	6-131	AH		B
VHINJM2902M-1	6-139	AF		B
VHINJM2904M-2	6-140	AG	N	B
"	7-52	AG	N	B
VHIPST596CMT1	6-142	AF		B
VHIR96XFC3CID	6-132	BR	N	B
"	6-134	BR	N	B
VHIULN2003ANS	6-141	AE		B
VHIW24257S7LL	6-135	AP	N	B
VHI27010FXA0E	6-137	AY	N	B
VHPTLP521-1BL	7-67	AE		B
"	7-69	AE		B
VHPTLP627//-1	7-66	AH		B
"	7-68	AH		B
VHVICPS07//-1	6-130	AA		B
VHVRA501PV6-1	7-1	AE		B
"	7-2	AE		B
VRD-HT2HY103J	7-78	AA		C
VRD-RC2EY100J	6-154	AA		C
VRS-HT3DA470J	7-77	AA		C
VRS-TP2BD000J	7-55	AA		C
"	7-57	AA		C
VRS-TP2BD150J	7-81	AA		C
"	7-82	AA		C
VRS-TS2AD000J	6-57	AA		C
"	6-144	AA		C
"	6-145	AA		C
"	6-146	AA		C
"	6-148	AA		C
"	6-155	AA		C
"	6-199	AA		C
"	6-200	AA		C
"	6-203	AA		C
"	6-223	AA		C
"	6-240	AA		C
"	6-242	AA		C
"	6-285	AA		C
"	7-56	AA		C
"	7-58	AA		C
VRS-TS2AD100J	6-202	AA		C
"	6-204	AA		C
"	7-115	AA		C
VRS-TS2AD101J	6-158	AA		C
VRS-TS2AD102J	6-226	AA		C
"	6-227	AA		C
"	6-228	AA		C
"	6-239	AA		C
"	7-114	AA		C
VRS-TS2AD103J	6-159	AA		C
"	6-162	AA		C
"	6-169	AA		C
"	6-171	AA		C
"	6-172	AA		C
"	6-179	AA		C
"	6-193	AA		C

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VRS-TS2AD103J	6-197	AA		C
"	6-201	AA		C
"	6-213	AA		C
"	6-214	AA		C
"	6-215	AA		C
"	6-216	AA		C
"	6-217	AA		C
"	6-218	AA		C
"	6-229	AA		C
"	6-230	AA		C
"	6-231	AA		C
"	6-232	AA		C
"	6-246	AA		C
"	6-262	AA		C
"	6-275	AA		C
"	6-279	AA		C
"	7-79	AA		C
"	7-113	AA		C
VRS-TS2AD104J	6-168	AA		C
"	6-192	AA		C
"	6-211	AA		C
"	7-102	AA		C
VRS-TS2AD106J	6-235	AA		C
VRS-TS2AD121J	6-156	AA		C
VRS-TS2AD122J	7-110	AA		C
VRS-TS2AD133J	6-260	AA		C
"	7-80	AA		C
"	7-98	AA		C
VRS-TS2AD151J	7-103	AA		C
VRS-TS2AD152J	6-249	AA		C
"	6-280	AA		C
"	7-106	AA		C
VRS-TS2AD153J	7-99	AA		C
VRS-TS2AD154J	6-166	AA		C
VRS-TS2AD201J	6-173	AG		C
"	6-289	AG		C
VRS-TS2AD203J	6-241	AA		C
"	6-293	AA		C
"	7-90	AA		C
"	7-105	AA		C
"	7-112	AA		C
VRS-TS2AD222J	7-104	AA		C
VRS-TS2AD223J	6-238	AA		C
"	6-294	AA		C
"	7-91	AA		C
"	7-95	AA		C
"	7-96	AA		C
VRS-TS2AD224J	6-194	AA		C
VRS-TS2AD243J	7-100	AA		C
VRS-TS2AD271J	6-143	AA		C
"	6-157	AA		C
"	6-160	AA		C
"	6-161	AA		C
"	6-163	AA		C
"	6-164	AA		C
"	6-180	AA		C
"	6-181	AA		C
"	6-182	AA		C
"	6-183	AA		C
"	6-184	AA		C
"	6-185	AA		C
"	6-186	AA		C
"	6-187	AA		C
"	6-188	AA		C
"	6-189	AA		C
"	6-190	AA		C
"	6-191	AA		C
"	6-219	AA		C
"	6-220	AA		C
"	6-221	AA		C
"	6-222	AA		C
"	6-224	AA		C
"	6-225	AA		C
"	6-233	AA		C
"	6-234	AA		C
"	6-237	AA		C
"	6-251	AA		C
"	6-252	AA		C
"	6-253	AA		C
"	6-254	AA		C

PARTS CODE	No.	PRICE RANK	NEW MARK	PART RANK
VS2SC2412KR-1	7-73	AD		B
VS2SC2412KS-1	6-150	AB		B
VS2SD1858Q2-1	6-149	AE	N	B
[X]				
XBBSD30P06000	50-B1	AA		C
XBPSN40P06K00	50-B7	AA		C
XEBSD30P10000	50-B4	AA		C
XEBSD30P12000	50-B6	AA		C
XUBSD20P06000	50-B3	AA		C
[O]				
OCBBFZ829209Z/	8-34	AC		C
OCBLRZ64446ZP/	8-66	AQ		C
OCBLRZ64447ZP/	8-67	AQ		C
OCBPHZ20184ZZ/	8-58	AR		B
OCBPJCTY1251/	8-31	AK		A
"	8-32	AK		A
OCBPKZ0194ZZ/	8-20	AC		C
OCBPKZ1105ZZ/	8-21	AH		C
OCBPZZ0906ZZ/	8-33	AH		A
OCBSBD0508ZZ/	8-68	AC		D
OCBUAC0027CZ/	8-39	AG		B
OCBUAC0034EZ/	8-40	AE		B
OCBUAC0264AZ/	8-41	AD		B
OCBUAG0161CZ/	8-38	AP		B
OCBUBA0003BZ/	8-27	AD		B
"	8-30	AD		B
OCBUBC0215D//	8-22	AD	N	B
"	8-23	AD	N	B
"	8-24	AD	N	B
"	8-25	AD	N	B
OCBUBC0248AZ/	8-26	AD		B
OCBUBC0302AZ/	8-29	AE		B
OCBUBC0336AZ/	8-28	AL		B
OCBUBDAC3R3C/	8-63	AD		B
OCBUBDAC6R2C/	8-64	AC		B
OCBUBDAE300D/	8-65	AD		B
OCBUCB0107AZ/	8-35	AQ		B
OCBUDC0163BB/	8-37	AH		B
OCBUDZ0052ZZ/	8-60	AG		B
OCBUWEB101CS/	8-45	AC		C
OCBUWEB153CS/	8-44	AC	N	C
OCBUWEB222CS/	8-53	AC		C
OCBUWEB242CS/	8-56	AC	N	C
OCBUWEB271CS/	8-54	AC		C
OCBUWEB330CS/	8-51	AC	N	C
OCBUWEB561CS/	8-50	AC	N	C
"	8-52	AC	N	C
OCBUWEB564CS/	8-42	AC		C
"	8-46	AC		C
"	8-47	AC		C
OCBUWEB682CS/	8-55	AC	N	C
OCBUWEC821CB/	8-49	AC	N	C
"	8-57	AC	N	C
OCBUWFER33CH/	8-43	AC		C
OCBUWFE224DJ/	8-48	AE	N	C
OCBUWZ0507ZZ/	8-61	AD		B
OCBUWFA471DB/	8-62	AD	N	B
OCBUGAC471UM/	8-17	AF		C
OCBUGAE681UG/	8-14	AH		C
OCBUGAF1R0HD/	8-18	AC		C
OCBUGCU102EJ/	8-3	AE	N	C
"	8-4	AE	N	C
OCBUGCZ152CR/	8-6	AE	N	C
OCBUGCZ222AD/	8-15	AC		C
OCBUGCZ222HP/	8-12	AF	N	C
"	8-19	AF	N	C
OCBUGFF102AR/	8-10	AB		C
"	8-11	AB		C
"	8-13	AB		C
"	8-16	AB		C
OCBUGFF472AR/	8-8	AB		C
OCBUGFF683AR/	8-9	AD		C
OCBUGFM104JY/	8-1	AF	N	C
"	8-2	AF	N	C
OCBUGZ0782ZZ/	8-7	AE	N	C
OCBUGZ14072ZZ/	8-5	AL	N	C
OCBUKZ0826ZZ/	8-36	AK		C
OCB829655014/	8-59	BE	N	B

# SHARP

**COPYRIGHT © 1998 BY SHARP CORPORATION**

**ALL RIGHTS RESERVED.**

No part of this publication may be reproduced,  
stored in a retrieval system, or transmitted in  
any form or by any means, electronic, mechanical,  
photocopying, recording, or otherwise, without  
prior written permission of the publisher.

**SHARP CORPORATION**  
**Communication Systems Group**  
**Quality & Reliability Control Center**  
**Higashihiroshima, Hiroshima 739-0192, Japan**  
**Printed in Japan**

**A9803-657NS•IS•S**